



## Three-phase HiOne Series

# USER MANUAL

HiOne-(8-20)T-G3  
HiOne-6B-G3  
HiOne-8B-G3

## Legal Notice

Hoymiles has made every effort to ensure the accuracy and completeness of this manual. However, this manual may be changed and revised due to product enhancements or user feedback.

Hoymiles reserves the right to modify this manual without prior notice at any given time. The latest version of this manual can be found by visiting the Hoymiles official website [www.hoymiles.com](http://www.hoymiles.com) or scanning the QR Code below.



## Warranty

Follow the installation instructions in this manual to ensure warranty compliance and reliability. The current warranty conditions can be accessed at [www.hoymiles.com](http://www.hoymiles.com).

## Contact Information

If you have technical queries or any questions concerning our products, please contact our support through the Hoymiles service portal:



### Germany

[service.de@hoymiles.com](mailto:service.de@hoymiles.com)

### Italy

[service.it@hoymiles.com](mailto:service.it@hoymiles.com)

### Poland

[service.pl@hoymiles.com](mailto:service.pl@hoymiles.com)

### Other EU countries

[service.eu@hoymiles.com](mailto:service.eu@hoymiles.com)

### Spain

[service.es@hoymiles.com](mailto:service.es@hoymiles.com)

### Netherlands

[service.nl@hoymiles.com](mailto:service.nl@hoymiles.com)

### Finland

[service.fi@hoymiles.com](mailto:service.fi@hoymiles.com)

### Australia & New Zealand

[service.au@hoymiles.com](mailto:service.au@hoymiles.com)

### France

[service.fr@hoymiles.com](mailto:service.fr@hoymiles.com)

### Norway

[service.no@hoymiles.com](mailto:service.no@hoymiles.com)

### Austria

[service.at@hoymiles.com](mailto:service.at@hoymiles.com)

### Asia & Pacific

[service.asia@hoymiles.com](mailto:service.asia@hoymiles.com)



### Germany

+49 6994322186

### Poland

+48 918821656

### France

+33 159131589

### Netherlands

+31 852736388



[hoymiles.com](http://hoymiles.com)

## Revision History

| Version | Date     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| REV1.7  | 20260811 | <ul style="list-style-type: none"> <li>Updated App setting description for UPS and EPS modes. See <a href="#">10.3.1 Set Advanced Parameters</a>.</li> <li>Updated <a href="#">Appendix 2: Application of AC Coupled System</a>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| REV1.6  | 20260731 | <ul style="list-style-type: none"> <li>Added instructions on Bluetooth pairing with HiOne inverters. See <a href="#">10.1 Start Commissioning</a>.</li> <li>Added specifications of HiOne-6B-G3. See <a href="#">13.2 HiOne-6B-G3/HiOne-8B-G3</a>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| REV1.5  | 20260724 | <ul style="list-style-type: none"> <li>Updated <a href="#">4.2 LED Indicators</a>.</li> <li>Added the requirement for connecting a third-party PV inverter to the backup port of HiBox Gateway. See <a href="#">5.2 Whole Home Backup System</a>, <a href="#">5.3 Partial Home Backup System</a>, and <a href="#">Appendix 2: Application of AC Coupled System</a>.</li> <li>Updated all illustrations showing the internal PE terminal. To view the new PE terminal, see <a href="#">8.5 AC Cable Connection</a>.</li> <li>Added App setting instruction for UPS mode. See <a href="#">10.3.1 Set Advanced Parameters</a>.</li> <li>Added P1 meter introduction and installation in <a href="#">Appendix 1: Application of P1 Meter</a>.</li> <li>Added HiOne inverter to DTU communication wiring and App configuration in <a href="#">Appendix 2: Application of AC Coupled System</a>.</li> <li>Added Gateway-related content in <a href="#">Appendix 4: Application of EV Charger</a> and <a href="#">Appendix 5: Application of Heat Pump</a>.</li> <li>Added <a href="#">Appendix 7: Application of Parallel Function</a>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| REV1.4  | 20260610 | <ul style="list-style-type: none"> <li>Added the method for checking battery production date. See <a href="#">3.2 Storage Requirements</a>.</li> <li>Added battery recharge strategy during storage. See <a href="#">3.3 Battery Charging Strategy</a>.</li> <li>Added the new AI working mode. See <a href="#">4.4.1 AI Mode</a>.</li> <li>Updated the whole home backup system diagram. Added the partial home backup system diagram. See <a href="#">5.2 Whole Home Backup System</a> and <a href="#">5.3 Partial Home Backup System</a>.</li> <li>Added the note of ordering accessory packages. See <a href="#">6.1 Unpacking</a>.</li> <li>Added the note of never installing the HiOne series in outdoor areas exposed to salt spray. See <a href="#">6.2 Environmental Requirements</a>.</li> <li>Updated mechanical installation steps and illustrations. See <a href="#">7 Installation Steps</a>.</li> <li>Added wiring diagrams for the whole home backup system and the partial home backup system. See <a href="#">8.1.2 Whole Home Backup System</a> and <a href="#">8.1.3 Partial Home Backup System</a>.</li> <li>Updated the DRM connection and App configuration for Germany and Austria. See <a href="#">8.8.2 DRM Connection</a> and <a href="#">10.3.2 Enable DRM Function</a>.</li> <li>Added the 4G DTS electrical connection. See <a href="#">8.11.3 DTS-4G-G3 (4G Mode)</a>.</li> <li>Updated the system power-on procedure. See <a href="#">9.2 System Power-on</a>.</li> <li>Updated the App self-check function. The system will automatically correct the CT direction and phase sequence. See <a href="#">10.1 Start Commissioning</a>.</li> <li>Updated the technical data. See <a href="#">13 Technical Data</a>.</li> <li>Added Hoymiles P1 meter App configuration. See <a href="#">Appendix 1: P1 Meter App Configuration</a>.</li> <li>Added using HiOne series to retrofit a PV system. See <a href="#">Appendix 2: Application of AC Coupled System</a>.</li> <li>Added smart load control, EV charger control, heat pump control, and generator control. See <a href="#">Appendix 3: Application of Smart Load</a>, <a href="#">Appendix 4: Application of EV Charger</a>, <a href="#">Appendix 5: Application of Heat Pump</a>, and <a href="#">Appendix 6: Application of Generator</a>.</li> </ul> |

|        |          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| REV1.3 | 20260204 | Updated the technical data. See <a href="#">13 Technical Data</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| REV1.2 | 20260108 | <ul style="list-style-type: none"> <li>• Updated the Packing list. See <a href="#">6.1 UPacking</a>.</li> <li>• Added mechanical installation steps (such as instructions for using the positioning board to drill mounting holes) and additional wall-mounting method. See <a href="#">7 Installation Steps</a>.</li> <li>• Updated the recommended cable size. See <a href="#">8 Electrical Connection</a>.</li> <li>• Added instructions for creating a new power plant. See <a href="#">10.2 Create a Plant</a>.</li> </ul> |
| REV1.1 | 20251118 | Official Release                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |



# Contents

|          |                                         |           |
|----------|-----------------------------------------|-----------|
| <b>1</b> | <b>About This Manual.....</b>           | <b>1</b>  |
| 1.1      | Purpose.....                            | 1         |
| 1.2      | Audience .....                          | 1         |
| 1.3      | Validity.....                           | 1         |
| <b>2</b> | <b>Safety Information.....</b>          | <b>2</b>  |
| 2.1      | Safety Symbols.....                     | 2         |
| 2.2      | Additional Symbols .....                | 2         |
| 2.3      | Safety Instructions .....               | 3         |
| 2.4      | EU Declaration of Conformity .....      | 4         |
| <b>3</b> | <b>Transportation and Storage .....</b> | <b>5</b>  |
| 3.1      | Transportation Requirements.....        | 5         |
| 3.2      | Storage Requirements .....              | 5         |
| 3.3      | Battery Charging Strategy.....          | 6         |
| <b>4</b> | <b>Product Introduction .....</b>       | <b>7</b>  |
| 4.1      | Product Appearance .....                | 7         |
| 4.2      | LED Indicators .....                    | 8         |
| 4.3      | Supported Power Grids .....             | 9         |
| 4.4      | Working Modes .....                     | 9         |
| 4.4.1    | AI Mode .....                           | 9         |
| 4.4.2    | Self-consumption Mode .....             | 10        |
| 4.4.3    | Economy Mode.....                       | 11        |
| 4.4.4    | Backup Mode .....                       | 11        |
| 4.4.5    | Peak Shaving Mode .....                 | 12        |
| 4.4.6    | Time of Use Mode .....                  | 13        |
| 4.4.7    | Off-grid Mode.....                      | 13        |
| <b>5</b> | <b>System Overview.....</b>             | <b>14</b> |
| 5.1      | Basic System .....                      | 14        |
| 5.2      | Whole Home Backup System .....          | 15        |
| 5.3      | Partial Home Backup System.....         | 16        |
| <b>6</b> | <b>Pre-installation .....</b>           | <b>17</b> |
| 6.1      | Unpacking.....                          | 17        |
| 6.2      | Environmental Requirements .....        | 18        |
| 6.3      | Space Requirements .....                | 19        |
| 6.4      | Stackable Requirements.....             | 19        |
| 6.5      | Installation Tools .....                | 20        |
| <b>7</b> | <b>Installation Steps.....</b>          | <b>21</b> |
| 7.1      | Floor-standing Installation.....        | 21        |
| 7.2      | Wall-mounting Installation.....         | 26        |
| <b>8</b> | <b>Electrical Connection.....</b>       | <b>29</b> |
| 8.1      | Wiring Diagram.....                     | 29        |
| 8.1.1    | Basic System .....                      | 29        |
| 8.1.2    | Whole Home Backup System.....           | 30        |
| 8.1.3    | Partial Home Backup System .....        | 31        |

|           |                                                           |           |
|-----------|-----------------------------------------------------------|-----------|
| 8.2       | Recommended Cable List.....                               | 32        |
| 8.3       | Internal overview.....                                    | 33        |
| 8.4       | Ground Cable Connection .....                             | 33        |
| 8.5       | AC Cable Connection .....                                 | 34        |
| 8.6       | PV Cable Connection.....                                  | 36        |
| 8.7       | (Optional) Battery Parallel Connection .....              | 37        |
| 8.8       | Communication Cable Connection (COM1).....                | 39        |
| 8.8.1     | Smart Meter and CT Connection .....                       | 41        |
| 8.8.2     | DRM Connection.....                                       | 42        |
| 8.9       | Communication Cable Connection (COM2).....                | 44        |
| 8.10      | Installing the Wiring Box Cover.....                      | 46        |
| 8.11      | Installing the Data Transfer Stick (DTS) .....            | 46        |
| 8.11.1    | DTS-WL-G3 (Wi-Fi Mode).....                               | 46        |
| 8.11.2    | DTS-WL-G3 (LAN Mode) .....                                | 46        |
| 8.11.3    | DTS-4G-G3 (4G Mode).....                                  | 47        |
| <b>9</b>  | <b>System Commissioning.....</b>                          | <b>48</b> |
| 9.1       | Preparation .....                                         | 48        |
| 9.2       | System Power-on.....                                      | 48        |
| <b>10</b> | <b>S-Miles Cloud.....</b>                                 | <b>49</b> |
| 10.1      | Start Commissioning.....                                  | 49        |
| 10.2      | Create a Plant .....                                      | 56        |
| 10.3      | Perform System Settings .....                             | 58        |
| 10.3.1    | Set Advanced Parameters .....                             | 58        |
| 10.3.2    | Enable DRM Function.....                                  | 61        |
| 10.3.3    | Set Export Management Parameters.....                     | 62        |
| 10.3.4    | Set Working Mode.....                                     | 63        |
| 10.3.5    | Set Dry Contact Function.....                             | 64        |
| 10.4      | Upgrade the Firmware .....                                | 66        |
| <b>11</b> | <b>System Maintenance .....</b>                           | <b>67</b> |
| 11.1      | System Power-off.....                                     | 67        |
| 11.2      | Routine Maintenance .....                                 | 67        |
| 11.3      | Troubleshooting .....                                     | 68        |
| <b>12</b> | <b>Decommissioning .....</b>                              | <b>71</b> |
| 12.1      | Removing the Product .....                                | 71        |
| 12.2      | Packing the Product .....                                 | 71        |
| 12.3      | Disposing of the Product .....                            | 71        |
| <b>13</b> | <b>Technical Datasheets.....</b>                          | <b>72</b> |
| 13.1      | HiOne-(8-20)T-G3.....                                     | 72        |
| 13.2      | HiOne-6B-G3/HiOne-8B-G3.....                              | 74        |
|           | <b>Appendix 1: Application of P1 Meter .....</b>          | <b>75</b> |
|           | <b>Appendix 2: Application of AC Coupled System .....</b> | <b>81</b> |
|           | <b>Appendix 3: Application of Smart Load.....</b>         | <b>84</b> |
|           | <b>Appendix 4: Application of EV Charger .....</b>        | <b>85</b> |

**Appendix 5: Application of Heat Pump ..... 89**

**Appendix 6: Application of Generator ..... 98**

**Appendix 7: Application of Parallel Function .....101**

# 1 About This Manual

## 1.1 Purpose

This manual provides information on the installation, electrical connections, operation, and maintenance of the HiOne series.

Please consider the following before installation:

- Carefully read this manual before operation.
- Keep this manual for reference.

## 1.2 Audience

This manual is intended for use by qualified persons only. Qualified persons must have the following skills:

- Knowledge of how an inverter works.
- Knowledge of how a battery works.
- Training in how to deal with the dangers and risks associated with the installation, maintenance, and use of electrical devices.
- Training in the installation, commissioning, and maintenance of electrical devices.
- Knowledge of and compliance with all applicable laws, standards, and directives.


## 1.3 Validity

This manual is valid for:

- HiOne-(8-20)T-G3
- HiOne-6B-G3
- HiOne-8B-G3


### NOTE

Model identifier:

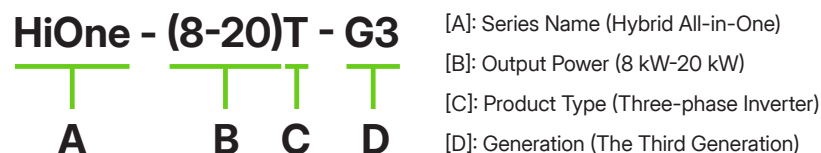

### NOTE

Model identifier:

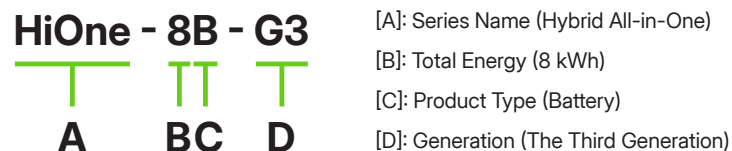


## 2 Safety Information

Before installing, operating, commissioning, and maintaining the product, please carefully read the safety rules and usage instructions in this document as failure to do so may result in safety hazards or device damage. Safety instructions in this manual cannot cover all precautions that should be taken. Please consider the actual conditions on site when performing operations. Any damage caused by a violation of the safety instructions in this manual shall not be the responsibility of Hoymiles.

### 2.1 Safety Symbols

 Safety symbols are used in this manual as follows:

| Symbol                                                                             | Description                                                                                                         |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
|   | This symbol indicates potential risks that, if not avoided, may lead to death or serious physical injury.           |
|   | This symbol indicates potential risks that, if not avoided, may lead to personal injury or device damage.           |
|   | This symbol indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.    |
|   | This symbol indicates potential risks that, if not avoided, may lead to minor injury or damage to the equipment.    |
|  | This symbol indicates an important step or tip that leads to the best results but is not safety- or damage-related. |

### 2.2 Additional Symbols

The product label contains the following symbols with their meanings described below:

| Symbol                                                                              | Usage                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Caution</b><br>Failure to observe any warnings contained in this manual may result in injury.                                                                                                                                                                                                                                                                                                            |
|  | <b>Danger to life due to high voltages</b><br>Only qualified personnel can open and maintain the equipment.                                                                                                                                                                                                                                                                                                 |
|  | <b>Hot surface</b><br>Burn danger due to hot surface that may exceed 60°C.                                                                                                                                                                                                                                                                                                                                  |
|  | After the equipment is turned off, wait for at least 5 minutes before opening the equipment or touching live parts.                                                                                                                                                                                                                                                                                         |
|  | <b>Treatment</b><br>Electrical equipment that has reached the end of life must be collected separately and returned to an approved recycling facility to comply with the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment and its implementation as national law. Return any devices you no longer need to an authorized dealer or an approved collection and recycling facility. |

|                                                                                   |                                                                                                      |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
|  | <b>CE mark</b><br>The product complies with the requirements of the applicable EU directives.        |
|  | <b>RoHS mark</b>                                                                                     |
|  | <b>Observe the documentation</b><br>Read and understand all documentation supplied with the product. |

## 2.3 Safety Instructions

To prevent personal injury and property damage and to ensure the long-term operation of the product, read this section carefully and observe all safety information at all times. Failure to observe the prescribed instructions may potentially void the manufacturer's warranty. If in doubt, please contact Hoymiles.

### **DANGER**

#### **Danger to life from electric shock**

- Only qualified personnel are allowed to install, maintain, or replace the device.
- Qualified personnel must wear personal protective equipment (PPE) during operation.
- Attempting to service the device yourself may result in a risk of electric shock or fire and will void your warranty.
- Never insert or remove the AC connections when the device is running.
- The installation location must be inaccessible to children.
- The device should be installed away from heating devices.
- Before installation, operation, and maintenance, ensure that the upstream and downstream switches are disconnected.
- Before performing any work on the device, disconnect all power supply and wait for at least 5 minutes. The hazardous voltage will exist for up to 5 minutes after disconnection from the power supply.

### **WARNING**

#### **Risk of burns from hot surfaces**

- The surface of the device might exceed 60°C, and touching the surface may result in burns.
- Do not touch hot surfaces before it cools down.
- All powers should be disconnected from the device before attempting any maintenance, cleaning, or working on any circuits connected to the device.
- Keep away from flammable and explosive materials to avoid fire hazard.
- The device should be installed away from humid or corrosive substances.
- When accessing the internal circuit of the device, wait for at least 10 minutes after disconnecting the power.

### **CAUTION**

- Ensure that the existing wiring is in good condition and no wire is undersized.
- Do not disassemble any parts of the device which are not mentioned in the installation.
- Authorized service personnel must use insulated tools when installing or working with this device.

**NOTICE**

- The minimum rated temperature of the wire used is 90°C (194°F).
- All electrical connections must be in accordance with local and national standards.
- Only with permission of the local utility grid company, the device can be connected to the utility grid.
- Do not open the inverter device or change any components without authorization, otherwise the warranty commitment for the device will be invalid.
- Prior to the application, please read this section carefully to ensure the correct and safe application. Please keep the user manual properly.
- The manual contains no instructions for user-serviceable parts. See Warranty for instructions on obtaining service.
- If an error occurs, contact your local distributor or qualified electricians.

## 2.4 EU Declaration of Conformity

Hoymiles Power Electronics Inc. hereby declares that the inverter described in this document is in compliance with the basic requirements and other relevant provisions of the following directives.

- Electromagnetic Compatibility Directive 2014/30/EU (EMC)
- Low Voltage Directive 2014/35/EU (LVD)
- Restriction of the use of certain hazardous substances Directive 2011/65/EU and its amendment directives (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE)

Hoymiles Power Electronics Inc. hereby declares that the battery described in this document is in compliance with the basic requirements and other relevant provisions of the following directives.

- Electromagnetic Compatibility Directive 2014/30/EU (EMC)
- Restriction of the use of certain hazardous substances Directive 2011/65/EU and its amendment directives (EU) 2015/863 (RoHS)
- EU Battery Regulation (EU) 2023/1542.

More detailed information can be found at <https://www.hoymiles.com>.

## 3 Transportation and Storage

### 3.1 Transportation Requirements

#### Placement Requirements

- Place the products in the original packaging or specially designed transport packaging. The packaging materials should have sufficient strength and cushioning performance to prevent damage caused by collisions and squeezes during transportation.
- Secure the products firmly inside the packaging to avoid displacement during transportation. For large or heavy products, additional fixing devices may be required.
- Maintain stability and avoid sudden starts, stops, or excessive vibration during transportation.

#### Personnel Requirements

- Observe the safety symbols on the product packages before transportation.
- Pay attention to the weight of the products. Be cautious to avoid injury when moving. Handle the products according to the personnel quantity required by local regulations.
- Wear protective gloves and use professional handling equipment to prevent injuries.
- Hold the handle to lift the products and keep them horizontal.
- Ensure that only qualified and experienced personnel perform relevant operations.

### 3.2 Storage Requirements

#### Placement Requirements

- Keep the products in their original packaging with desiccants retained until they are ready for installation.
- To avoid personal injury or device damage, stack products carefully to prevent them from falling.
- Do not tilt or invert the package.
- Do not place heavy objects on the products, as this may damage the equipment housing or internal components.

#### Environmental Requirements

- The storage temperature should be between  $-30^{\circ}\text{C}$  and  $65^{\circ}\text{C}$ , and the relative humidity should be between 5% and 95%, without condensing.
- Store the products in a clean and dry place to protect them from dust and moisture.
- Store the products in a well-ventilated place to ensure proper air circulation and prevent equipment overheating.
- Do not store the products in places exposed to direct sunlight, wet by rain, or with strong electric fields.
- Do not store the products in places with chemically corrosive substances or where there are pests and rodents.

#### Routine Maintenance

- The battery SOC should be between 45% and 50%. The battery needs to be recharged every 6 months if it is not used, and it is recommended to store it after it is first charged to 100%, then discharged to 50%, and finally powered off.
- The battery needs to be maintained at a maximum interval of 6 months.
- The requirements for the recharge interval after the battery is fully discharged are as follows.
  - a) If the environmental temperature is between  $45^{\circ}\text{C}$  and  $50^{\circ}\text{C}$ , it should be recharged within 7 days;
  - b) If the environmental temperature is between  $35^{\circ}\text{C}$  and  $45^{\circ}\text{C}$ , it should be recharged within 15 days;
  - c) If the environmental temperature is no more than  $35^{\circ}\text{C}$ , it should be recharged within 30 days.
- When the device is unused, the battery SOC should be between 45% and 55%, and the battery output should be disconnected to prevent the battery from draining.
- During the storage period, the products should be checked regularly, and it is recommended to check the products once every three months. Replace the Packing materials damaged by insects or rodents in a timely manner.
- If the products have been stored for three months or longer, they must be fully inspected and tested by authorized personnel before being put into use.



- Dispose of deformed, damaged, or leaking batteries directly irrespective of how long they have been stored.
- Batteries can be charged for a maximum of three times during storage. Dispose of batteries if the maximum charge times are exceeded.

#### NOTE

Storage time starts from the production date of the battery Module. Each battery Module has a serial number label, typically located on:

- The side or top of the Module, or
- The Module packaging.

The production date is encoded in the serial number. You can also check the production date through Hoymiles sales channels (for example, local distributors) using the serial number.

| SN1 | SN2 | SN3 | SN4 | SN5 | SN6 | SN7 | SN8 | SN9 | SN10 | SN11 | SN12 |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|------|------|
| -   | -   | -   | -   | Y   | Y   | M   | D   | D   | -    | -    | -    |

- **SN5-SN6:** YY = year
- **SN7:** M = month (1-9 = January to September, A = October, B = November, C = December)
- **SN8-SN9:** DD = day

## 3.3 Battery Charging Strategy

Under ideal storage conditions, the battery can be stored for up to 12 months. However, due to possible storage condition variations (for example, temperature fluctuations), the battery must be recharged to 40% SOC every 6 months during storage.

#### NOTE

If the battery is stored at 20°C to 30°C for more than 12 months, 3% to 10% of the battery capacity may be permanently lost.

If the battery has been stored for more than 12 months, recharge it before use. You can use the S-Miles Installer App to enable the Forcing Battery Charging function.


**Step 1** Open the S-Miles Installer.

**Step 2** Locate the plant and tap the name to open the plant homepage.

**Step 3** Tap  > **Working Mode**.

**Step 4** Enable **Force Charge Mode** and set the parameters.

- Reserved SOC: **40%**
- Max. Charging Power: **appropriate value (up to 100%)**

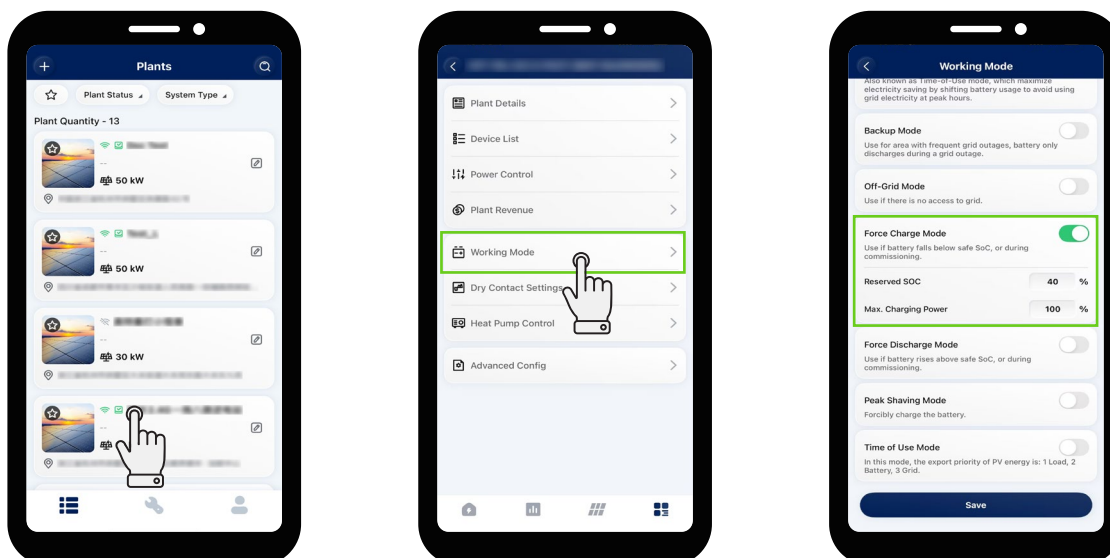

## 4 Product Introduction

The HiOne series is designed for residential and small C&I PV ESS systems. The hybrid inverter, battery, and EMS are integrated into one unit to provide users with a comprehensive PV ESS solution.

### 4.1 Product Appearance

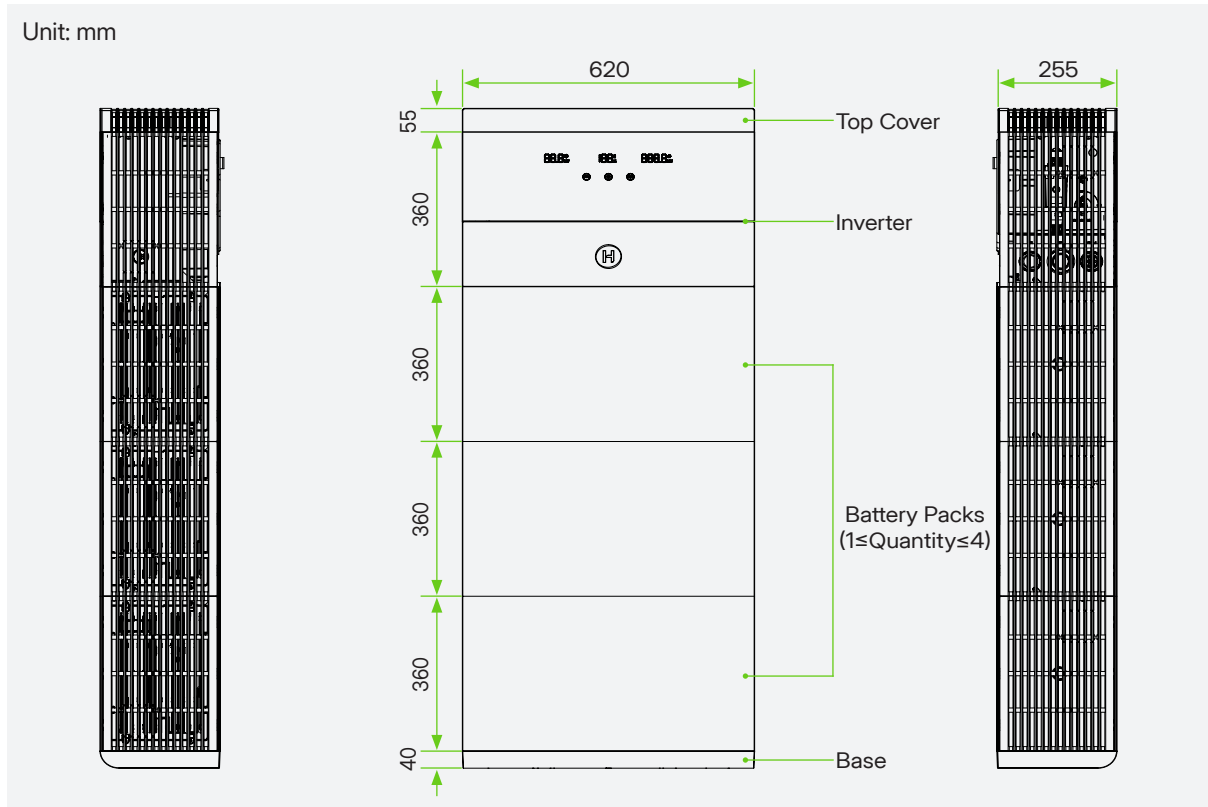


Figure 4-1 Appearance and Dimensions

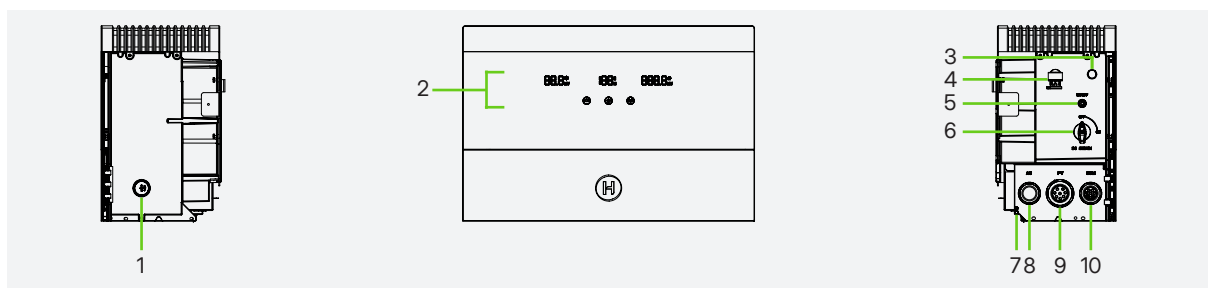


Figure 4-2 Overview

| No. | Description                        | No. | Description               |
|-----|------------------------------------|-----|---------------------------|
| 1   | Cable Entry for Parallel Batteries | 6   | DC Switch                 |
| 2   | LED Indicators                     | 7   | Ground Terminal           |
| 3   | Relief Valve                       | 8   | AC Cable Entry            |
| 4   | Data Transfer Stick (DTS) Port     | 9   | PV Cable Entry            |
| 5   | Power Button                       | 10  | Communication Cable Entry |

## 4.2 LED Indicators

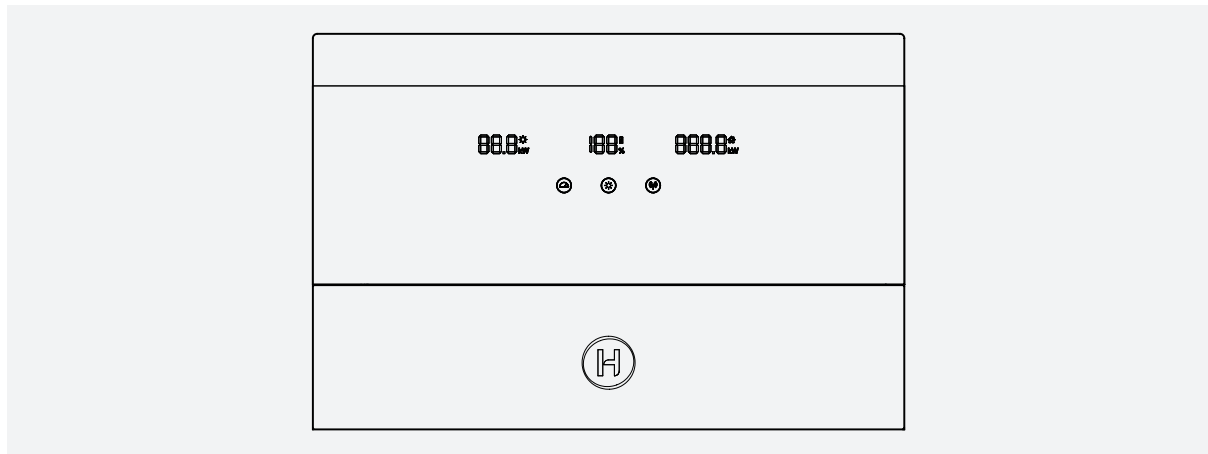


Figure 4-3 LED Indicators

| Indicator |                  | Status |                 | Explanation                                                 |
|-----------|------------------|--------|-----------------|-------------------------------------------------------------|
|           | PV               |        | Digital readout | Real-time power generation                                  |
|           |                  | /      | Off             | No PV power                                                 |
|           | Battery SOC      |        | Digital readout | Real-time SOC                                               |
|           |                  | /      | Off             | No battery connection                                       |
|           | Battery Status   |        | Solid white     | Battery charging                                            |
|           |                  |        | Flashing white  | Battery connecting / disconnecting                          |
|           |                  |        | Solid red       | Battery fault                                               |
|           |                  | /      | Off             | Battery discharging / Standby / No battery connection       |
|           | Load Consumption |        | Digital readout | Real-time power consumption                                 |
|           |                  |        | 0.0 display     | No load connection / Zero consumption / No meter connection |
|           | Meter            |        | Solid white     | Normal                                                      |
|           |                  |        | Solid red       | Communication fault                                         |
|           |                  | /      | Off             | No meter connection                                         |
|           | State            |        | Solid white     | System normal operation / Standby                           |
|           |                  |        | Solid red       | System fault                                                |
|           |                  | /      | Off             | System power-off                                            |
|           | Internet         |        | Solid white     | Connected to network and Cloud                              |
|           |                  |        | Flashing white  | Connecting to Cloud / System upgrading                      |
|           |                  | /      | Off             | No DTS connection                                           |

## 4.3 Supported Power Grids

There are different ways of wiring for different grid systems. TN-S / TN-C / TN-C-S / TT are shown as follows.

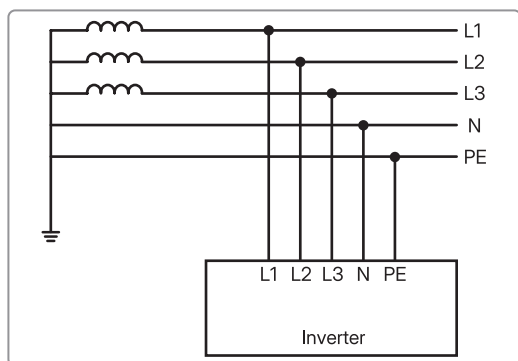


Figure 4-4 TN-S

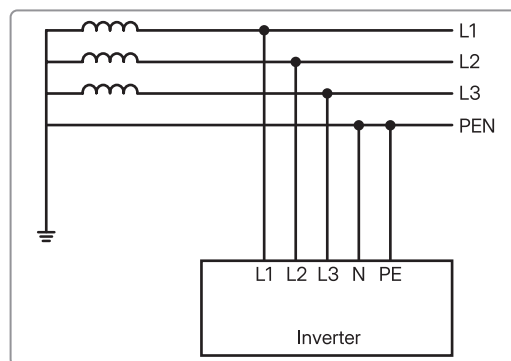


Figure 4-5 TN-C

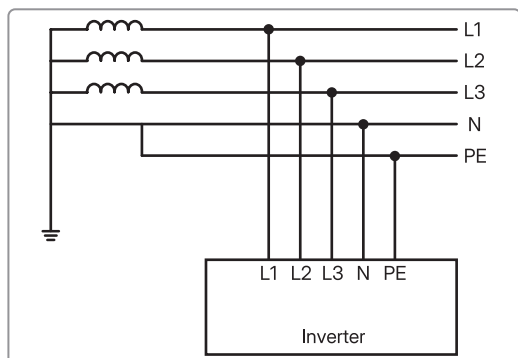


Figure 4-6 TN-C-S

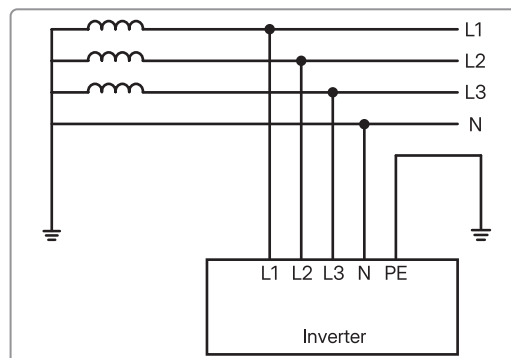


Figure 4-7 TT

## 4.4 Working Modes

The HiOne series provides the following working modes for you to choose according to your lifestyle and environment.

### 4.4.1 AI Mode

#### NOTE

The AI Mode is available only in certain countries. For details, refer to the in-app instructions.

Based on the local peak and valley electricity prices, weather data, and home consumption habits, the AI Mode can customize battery charging and discharging strategies to maximize your cost savings.

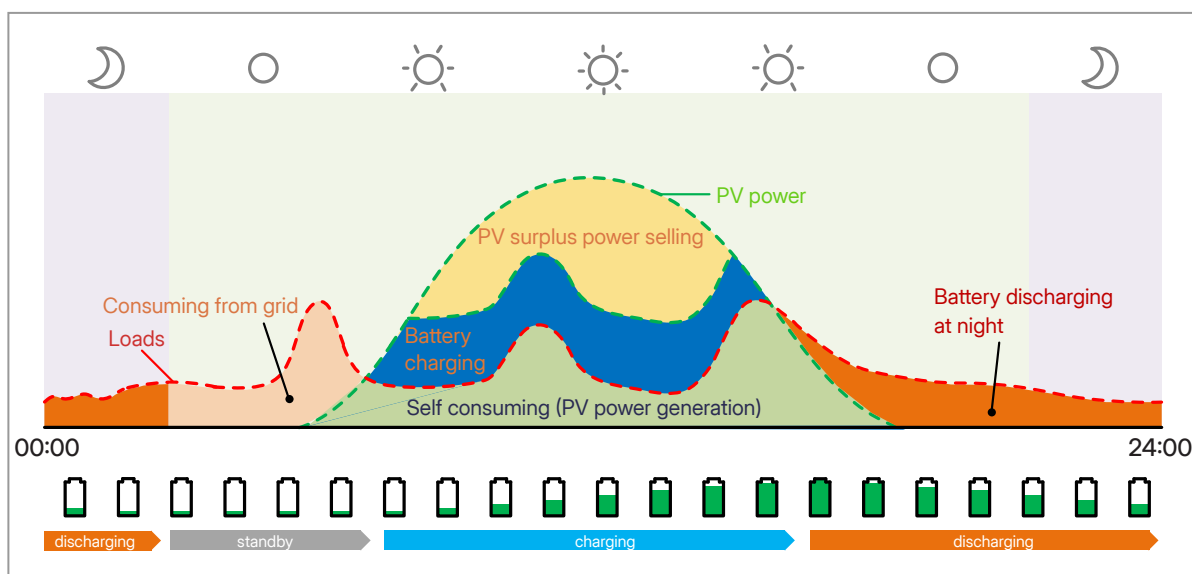


Figure 4-8 Power Flow of AI Mode

| Strategy             | Description                                                                                                                                                                                                        |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Charge from Grid     | When the electricity price is low and there is no PV generation or PV generation is insufficient, the system charges the battery from the grid to avoid buying electricity from the grid when the price is higher. |
| Charge from PV only  | When PV generation is sufficient, the system charges the battery using PV power only, avoiding the need to draw power from the grid.                                                                               |
| Grid Priority Supply | When the electricity price is low, the battery reserves energy and does not discharge, and the system gives priority to grid power.                                                                                |
| Self-Consumption     | The system prioritizes PV power for supplying the load and uses the battery for energy regulation when needed, reducing grid power consumption.                                                                    |
| Discharge to Grid    | When the electricity price is high, the system discharges the battery to the grid to generate revenue from electricity sales.                                                                                      |

#### 4.4.2 Self-consumption Mode

The Self-consumption Mode is the basic working mode, which can reduce the use of grid power.

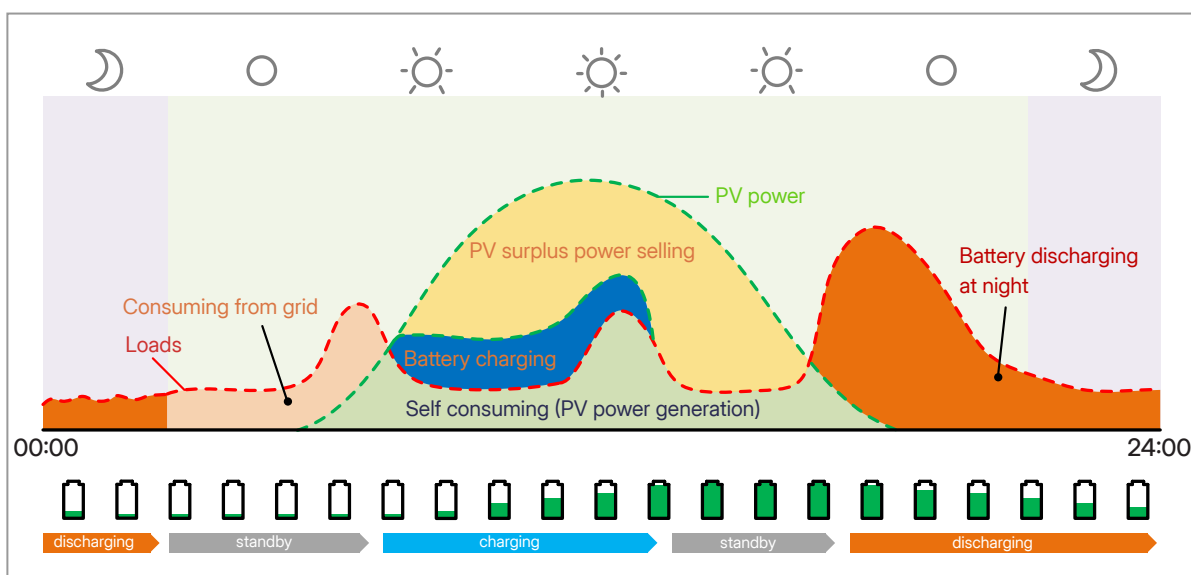


Figure 4-9 Power Flow of Self-consumption Mode

| Time Period              | Inverter Working Status                                                                                                                                                                                                                                                                       |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PV power is sufficient   | $(PV \rightarrow \text{Loads}) > (PV \rightarrow \text{Battery}) > (PV \rightarrow \text{Grid})$<br>The power generated from PV first supplies the loads, any excess power can charge the battery, and if there is still surplus power, it can be sold to the grid (or limited if necessary). |
| PV power is insufficient | $PV + \text{Battery} + \text{Grid} \rightarrow \text{Loads}$<br>The battery discharges power to the loads, and once its capacity reaches its reserved capacity, it automatically stops discharging, and the grid supplies power to the loads.                                                 |

#### NOTE

- In order to maximize self-consumption, the grid will not charge the battery in this mode, and only the surplus PV power can charge the battery. The grid will initiate the charging process only when the battery SOC falls below the reserved capacity.
- Reserved SOC (10%-100%): The minimum battery SOC that can be reserved due to infrequent power outages. For details, refer to battery specifications.

### 4.4.3 Economy Mode

The Economy Mode can maximize electricity savings by shifting the battery state to avoid using grid electricity at peak hours. In this mode, the battery can be charged or discharged according to valley or peak electricity prices time. The system will calculate the savings based on the set currency.

| Time Period       | Inverter Working Status                                                                                                                                                                                                                                                                                                                                            |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Peak Hour         | $(PV + \text{Battery} \rightarrow \text{Loads}) > (PV + \text{Battery} \rightarrow \text{Grid})$<br>The power generated from PV and battery can simultaneously supply the loads. Any excess power is then sold to the grid (or limited if necessary). The grid power will not be used until there is no PV power or the battery SOC reaches the reserved capacity. |
| Off-peak Hour     | $(PV + \text{Grid}) \rightarrow (\text{Loads} + \text{Battery})$<br>The power from PV and grid can simultaneously supply the loads and charge the battery.                                                                                                                                                                                                         |
| Partial-peak Hour | Its working logic is the same as " <b>Self-consumption Mode</b> ".                                                                                                                                                                                                                                                                                                 |

#### NOTE

- Reserved SOC (10%-100%): The minimum battery SOC that can be reserved due to infrequent power outages. For details, refer to battery specifications.
- Time Setting:
  - Period (1-4): Set the start and end dates of the electricity rate period.
  - Time Range (2): Set time period in one week.
  - Peak Hour: Set peak electricity price time and trade price.
  - Off-peak Hour: Set off-peak electricity price time and trade price.
  - Partial-peak Hour: Set partial-peak trade price.

### 4.4.4 Backup Mode

The Backup Mode is suitable for areas with frequent power outages. This mode will maintain the battery capacity at a relatively high level to ensure that the EPS loads can be used when the grid is off.

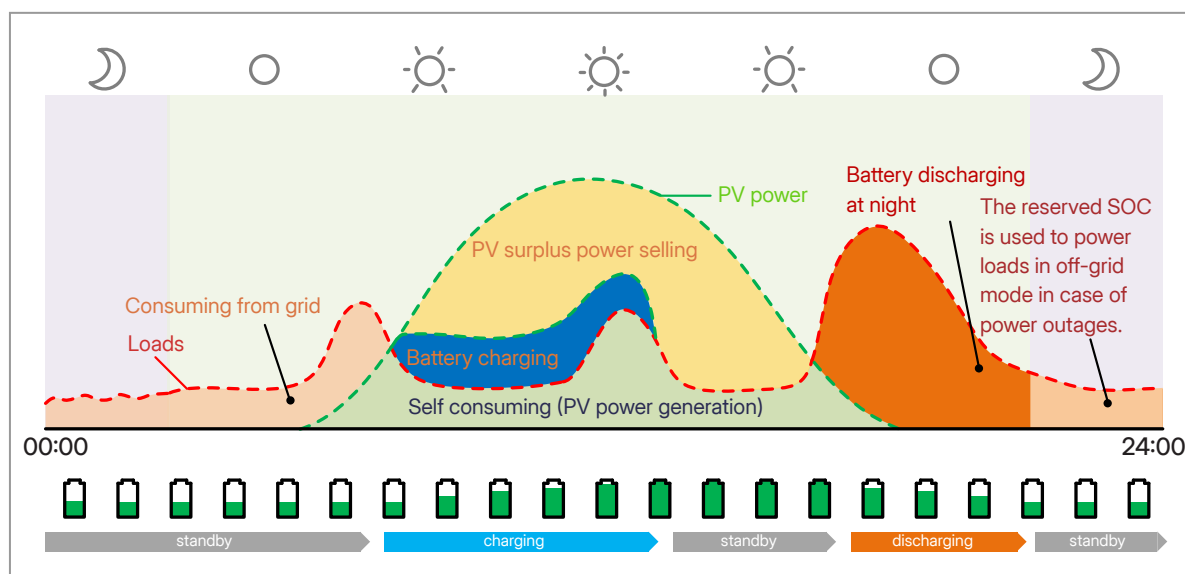


Figure 4-10 Power Flow of Full Backup Mode

| Time Period              | Inverter Working Status                                                                                                                                                                                                                                                                       |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PV power is sufficient   | $(PV \rightarrow \text{Loads}) > (PV \rightarrow \text{Battery}) > (PV \rightarrow \text{Grid})$<br>The power generated from PV first supplies the loads. Any excess power can charge the battery, and if there is still surplus power, it can be sold to the grid (or limited if necessary). |
| PV power is insufficient | Battery SOC > Reserved Capacity<br>$(PV + \text{Battery}) \rightarrow \text{Loads}$<br>The battery discharges power to the loads, and when its SOC reaches reserved capacity, it automatically stops discharging.                                                                             |
|                          | Battery SOC $\leq$ Reserved Capacity<br>$(PV + \text{Grid}) \rightarrow \text{Loads}$<br>The grid supplies power to the loads. The battery does not discharge until the grid outage occurs. The battery needs to be recharged to the reserved capacity after the grid is normal.              |

**NOTE**

Reserved SOC (60%-100%): The minimum battery SOC that can be reserved due to infrequent power outages. For details, refer to battery specifications.

## 4.4.5 Peak Shaving Mode

The Peak Shaving Mode is used to level out peak power in electricity use to maximize electricity savings. In this mode, the Peak Meter Power (the maximum power that the inverter obtains from the grid) can be set; only when PV and battery can fully power the loads, can the Peak Meter Power be limited.

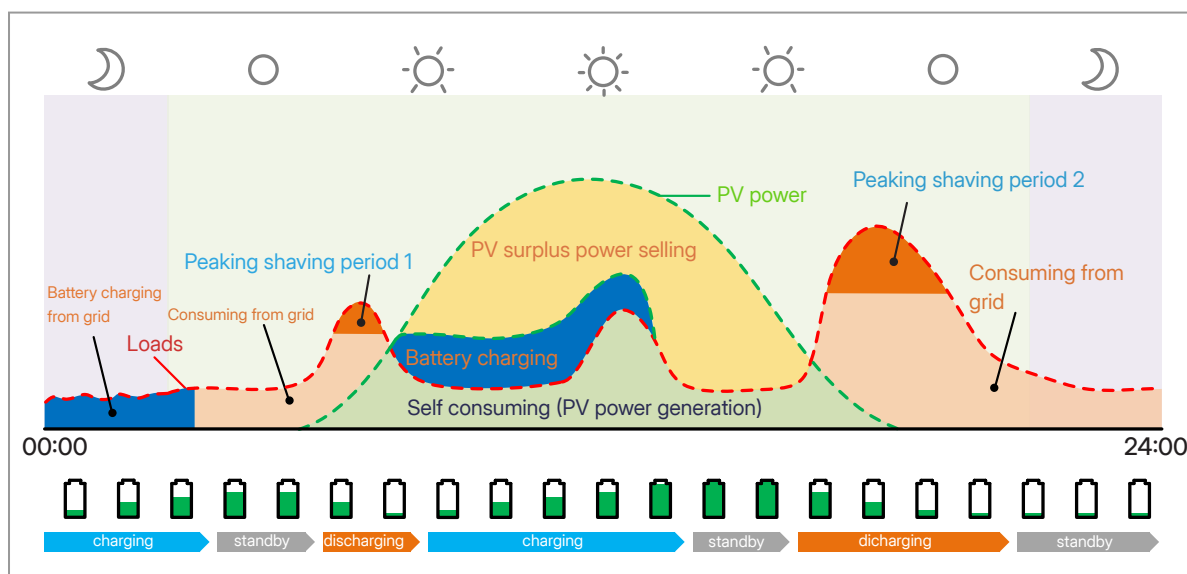


Figure 4-11 Power Flow of Peaking Shaving Mode

| Time Period                               | Inverter Working Status                                                                                                                                                                                                                     |
|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid Consumption Power > Peak Meter Power | $PV + \text{Battery} \rightarrow \text{Loads}$<br>The power generated from PV and battery can simultaneously supply the loads. The grid power will not be used until there is no PV power or the battery SOC reaches the reserved capacity. |

| Time Period                               | Inverter Working Status                                                                                                                                     |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid Consumption Power < Peak Meter Power | Battery SOC > Peak Capacity<br>Its working logic is the same as " <b>Self-consumption Mode</b> ".                                                           |
|                                           | Battery SOC ≤ Peak Capacity<br>(PV + Grid → Loads)<br>The grid can supply the loads and charge the battery at a power not higher than the peak meter power. |

**NOTE**

- Reserved SOC (10%-100%): The minimum battery SOC that can be reserved due to infrequent power outages. For details, refer to battery specifications.
- Baseline SOC (10%-100%): The minimum battery SOC that can be reserved during peak meter power time.
- Peak meter power (0-60000 W): The maximum load consumption power from the grid side.

#### 4.4.6 Time of Use Mode

The Time of Use Mode allows users to customize the charging and discharging time of the battery within eight periods. Users can set the charging and discharging time according to the local peak and valley electricity prices to save costs.

| Time Period        | Inverter Working Status                                                                                                                                           |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Charging Period    | The battery will be charged from the grid at the pre-set charging power until the battery is charged to the pre-set stop charging SOC (%).                        |
| Discharging Period | The battery will discharge power to the loads and the grid at the pre-set discharging power until the battery discharges to the pre-set stop discharging SOC (%). |
| Other Period       | Its working logic is the same as " <b>Self-consumption Mode</b> ".                                                                                                |

**NOTE**

- Reserved SOC (10%-100%): The minimum battery SOC that can be reserved due to infrequent power outages. For details, refer to battery specifications.
- Time period (1-8):

|                             |                                                                            |
|-----------------------------|----------------------------------------------------------------------------|
| Charge Time                 | The battery can be charged at valley electricity price time.               |
| Charge Power (0-100%)       | The battery can be charged at this power.                                  |
| Stop Charge SOC (0-100%)    | The battery will stop charging when the battery SOC reaches this value.    |
| Discharge Time              | The battery can discharge at peak electricity price time.                  |
| Discharge Power (0-100%)    | The battery can discharge at this power.                                   |
| Stop Discharge SOC (0-100%) | The battery will stop discharging when the battery SOC reaches this value. |

#### 4.4.7 Off-grid Mode

The Off-grid Mode is used when the system is not connected to the grid.



## 5 System Overview

### 5.1 Basic System

The whole system has a rich application scenario, which supports the deep integration of PV, ESS, and EV Charger.


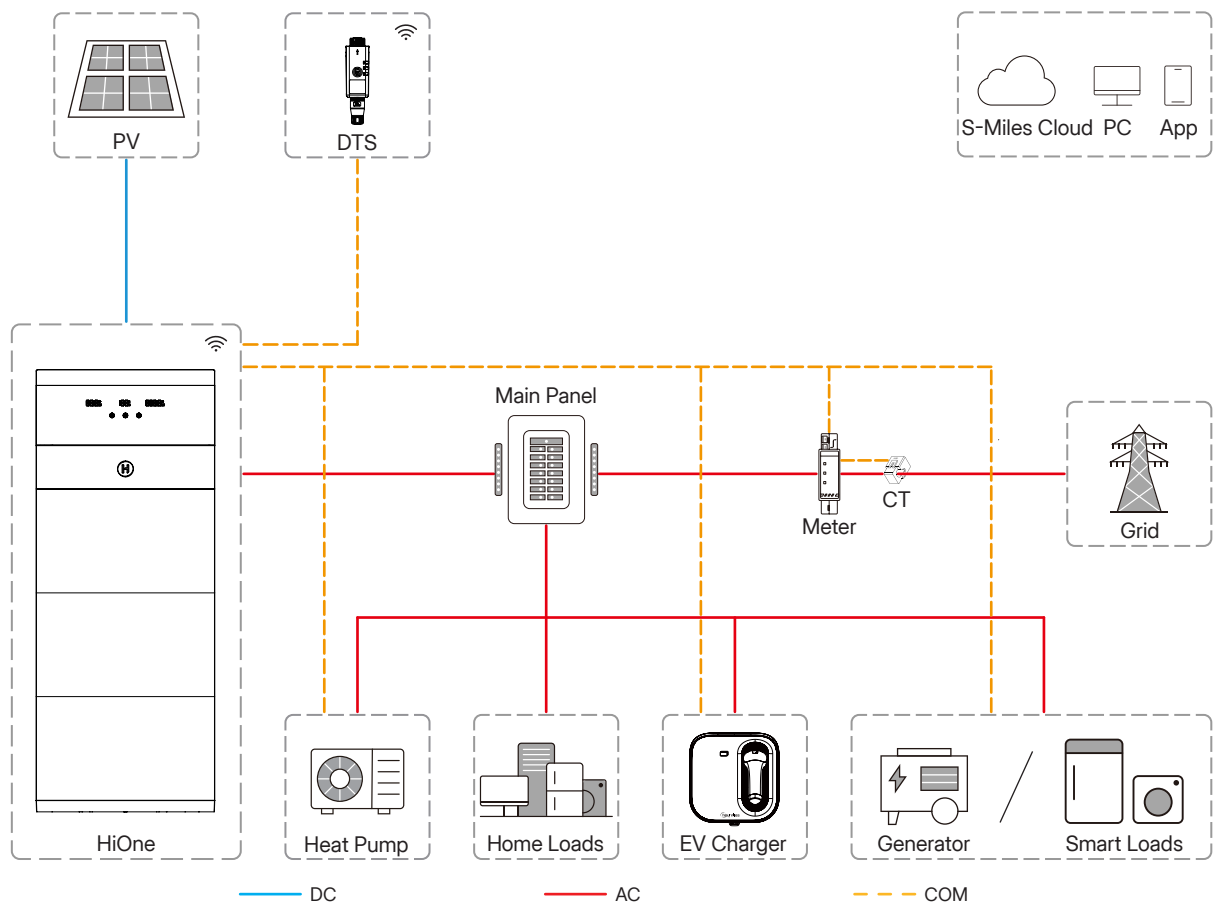


Figure 5-1 Basic System

## 5.2 Whole Home Backup System

In the whole home backup system, the whole home load, smart load, generator, microinverter, and EV charger can be connected to a Hoymiles HiBox Gateway. In the event of a grid outage, other components in this energy storage system will power the loads.

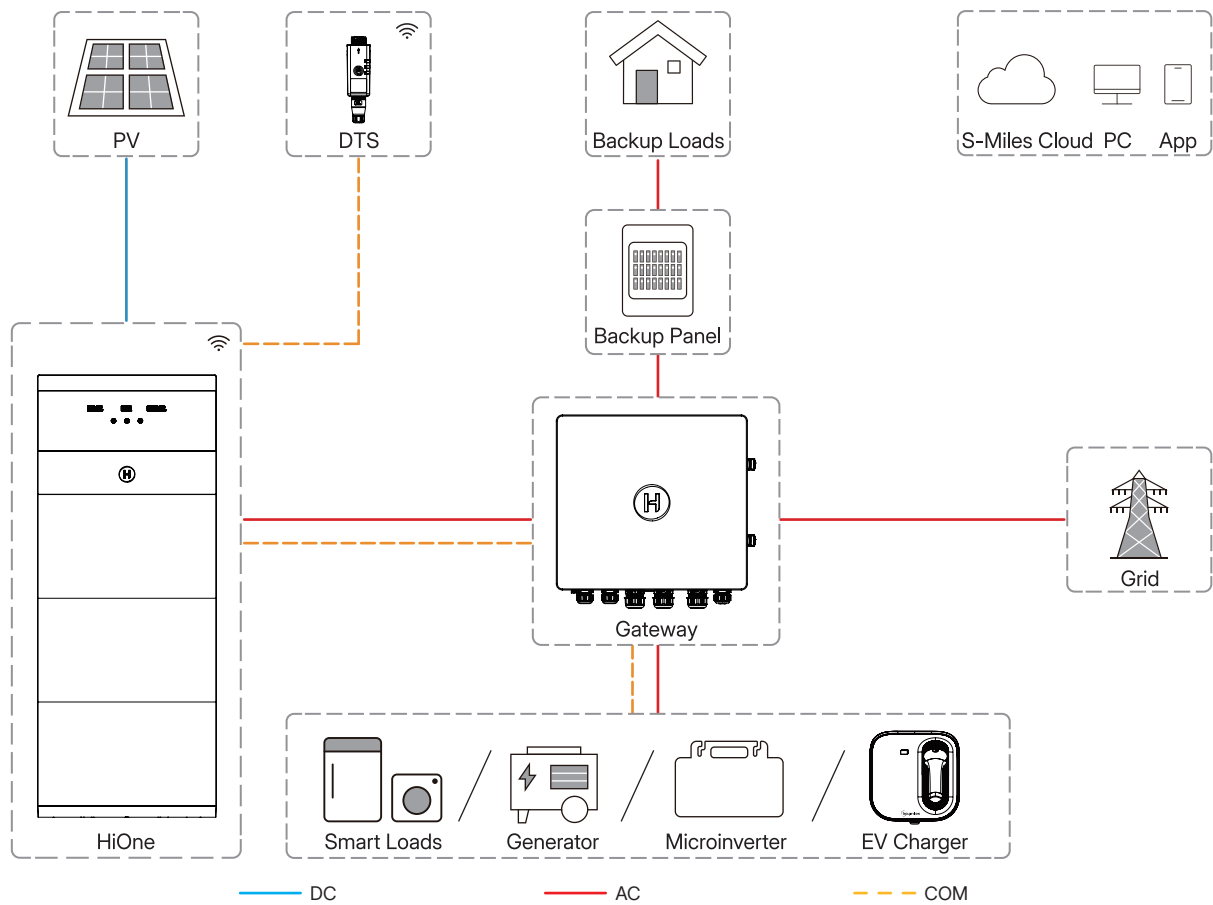

### Figure 5-2 Whole Home Backup System

**NOTE**

If the Gateway backup port is connected to a third-party PV inverter, ensure that the power of the third-party PV inverter is less than 3 kW or the load power.

## 5.3 Partial Home Backup System

In the partial home backup system, users can divide the home loads into backup loads and non-backup loads as required. All backup loads can be connected to the backup port of the HiBox Gateway, and all non-backup loads can be connected to the main panel. In the event of a grid outage, only the backup loads will be powered.

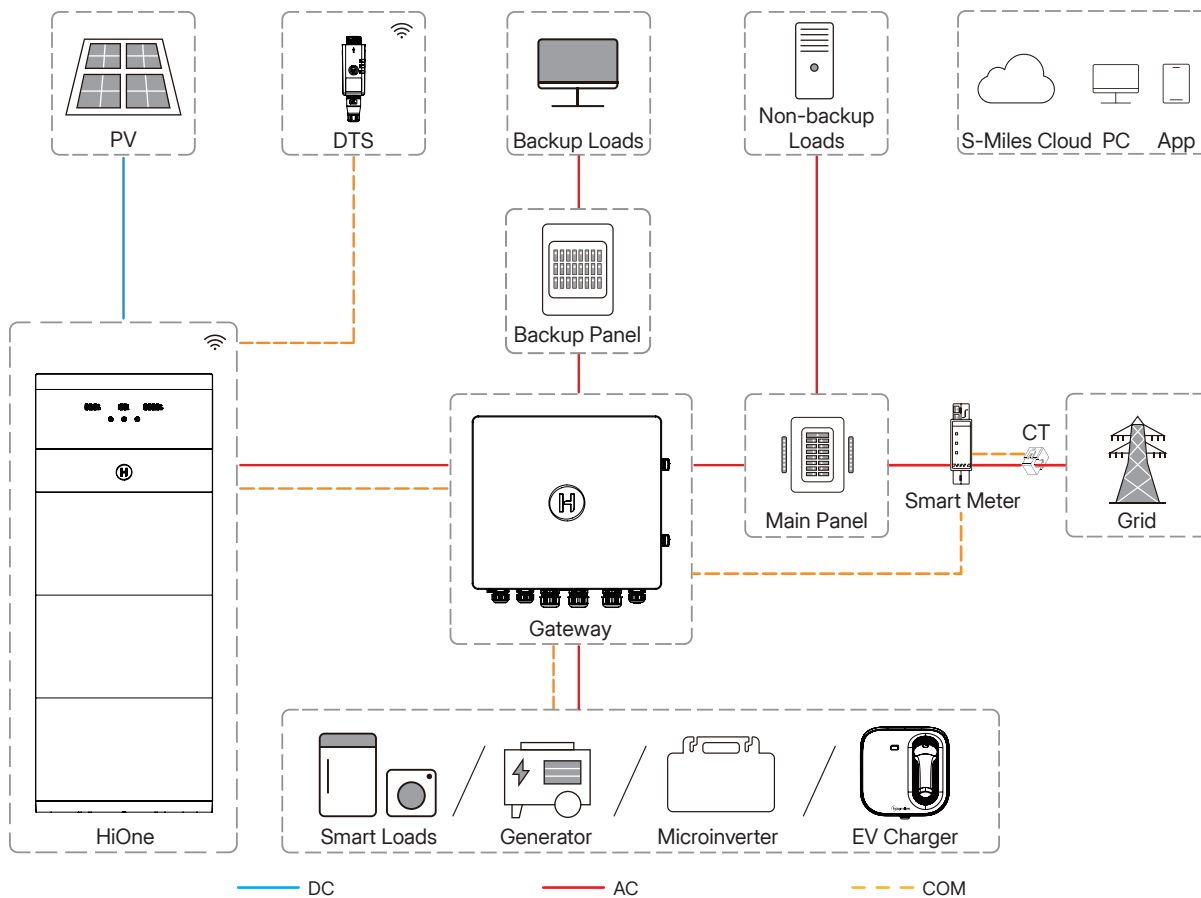


Figure 5-3 Partial Home Backup System

### NOTE

If the Gateway backup port is connected to a third-party PV inverter, ensure that the power of the third-party PV inverter is less than 3 kW or the load power.

## 6 Pre-installation

### DANGER

#### Danger to life due to fire or explosion!

- Despite careful construction, electrical devices can cause fires. This can result in death or serious injury.
- Do not install the product in places containing highly flammable materials or gases.
- Do not install the product in places where there is a risk of explosion.










### WARNING

- Make sure there is no electrical connection before installation.
- To avoid electric shock or other injuries, make sure that holes are not drilled over any electrical parts or plumbing installations.
- Qualified personnel must wear personal protective equipment (PPE) during operation.





## 6.1 Unpacking





Unpack the packages and carefully take out the product and other accessories. Check if the deliverables are complete and intact after unpacking the product. Please contact your supplier if the components are missing or damaged upon receipt of the product.

### HiOne-(8-20)T-G3 Package

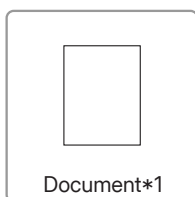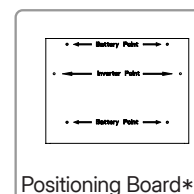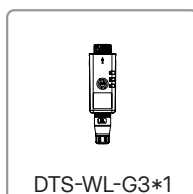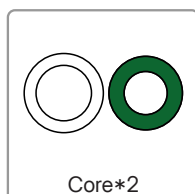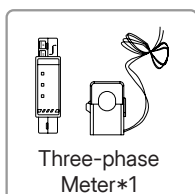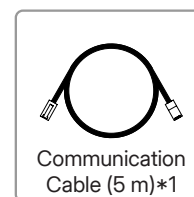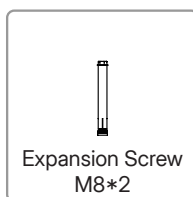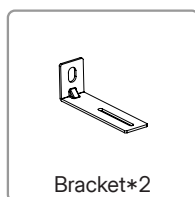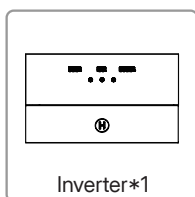

### HiOne-6B-G3/HiOne-8B-G3 Package

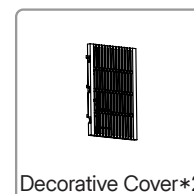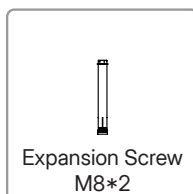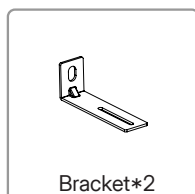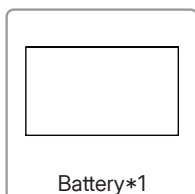

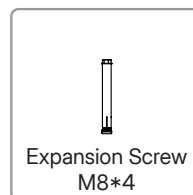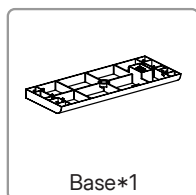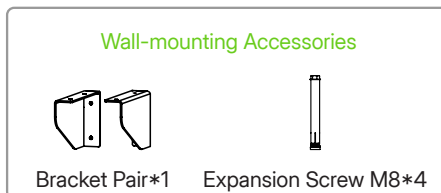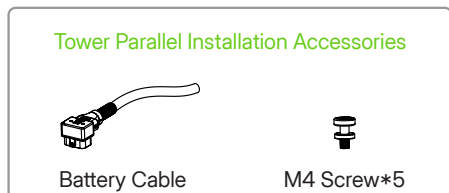**Standard Accessory Package****Optional Accessory Package****NOTE**

Depending on your setup, order appropriate accessories:

|                                               | Standard Accessory<br>Package Quantity | Parallel Accessory<br>Package Quantity | Wall-mounting Accessory<br>Package Quantity |
|-----------------------------------------------|----------------------------------------|----------------------------------------|---------------------------------------------|
| 1 Inverter, 1–4 Batteries<br>(Floor-standing) | 1                                      | 0                                      | 0                                           |
| 1 Inverter, 5–8 Batteries<br>(Floor-standing) | 2                                      | 1                                      | 0                                           |
| 1 Inverter, 1–4 Batteries<br>(Wall-mounting)  | 1                                      | 0                                      | 1                                           |
| 1 Inverter, 5–8 Batteries<br>(Wall-mounting)  | 2                                      | 1                                      | 2                                           |

**6.2 Environmental Requirements**

- The product is designed with a protection degree of IP66 and can be installed indoors or outdoors.
- It is recommended to install the inverter in a location protected from direct sunlight or adverse weather conditions such as snow, rain, or lightning.
- The ambient temperature should be between -20°C and 55°C. High ambient temperatures (above 45°C) will cause power derating of the inverter.
- The relative humidity should be less than 95%, without condensing.
- The product should be installed on a solid surface that is suitable for its dimensions and weight.
- The product should be installed in an environment with good ventilation and heat dissipation conditions.
- The product should be installed far from noise-sensitive areas.
- The product should be installed far from flammable materials, corrosive chemicals, and heating devices.
- The product should be installed in a place where its enclosure and heat sink are not easy to be touched, because these parts are hot during operation.
- Salt spray can cause corrosion to the product. Do not install the product in outdoor areas exposed to salt spray. (A salt area refers to the region within 500 meters from the coast or prone to sea breeze. The regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills.)

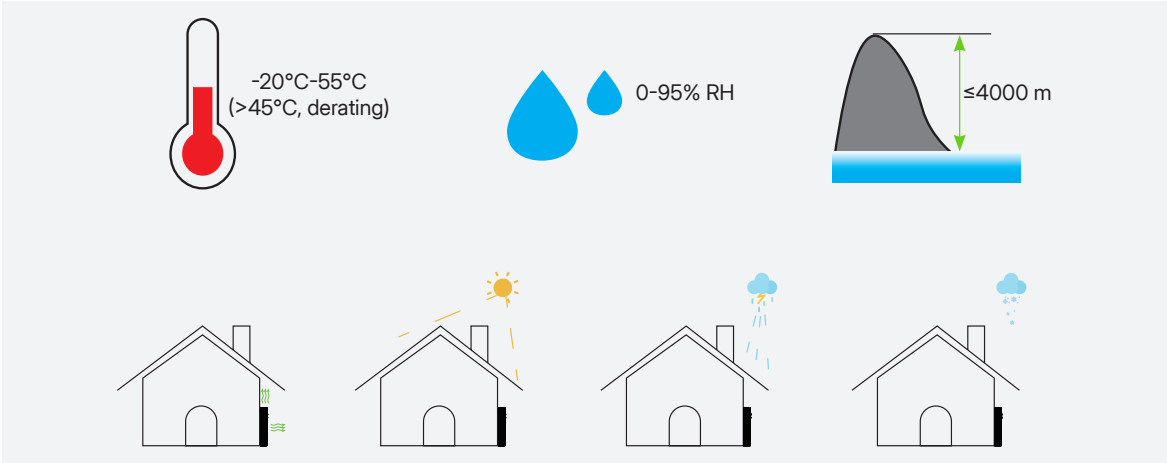


Figure 6-1 Installation Environment

6.3 Space Requirements

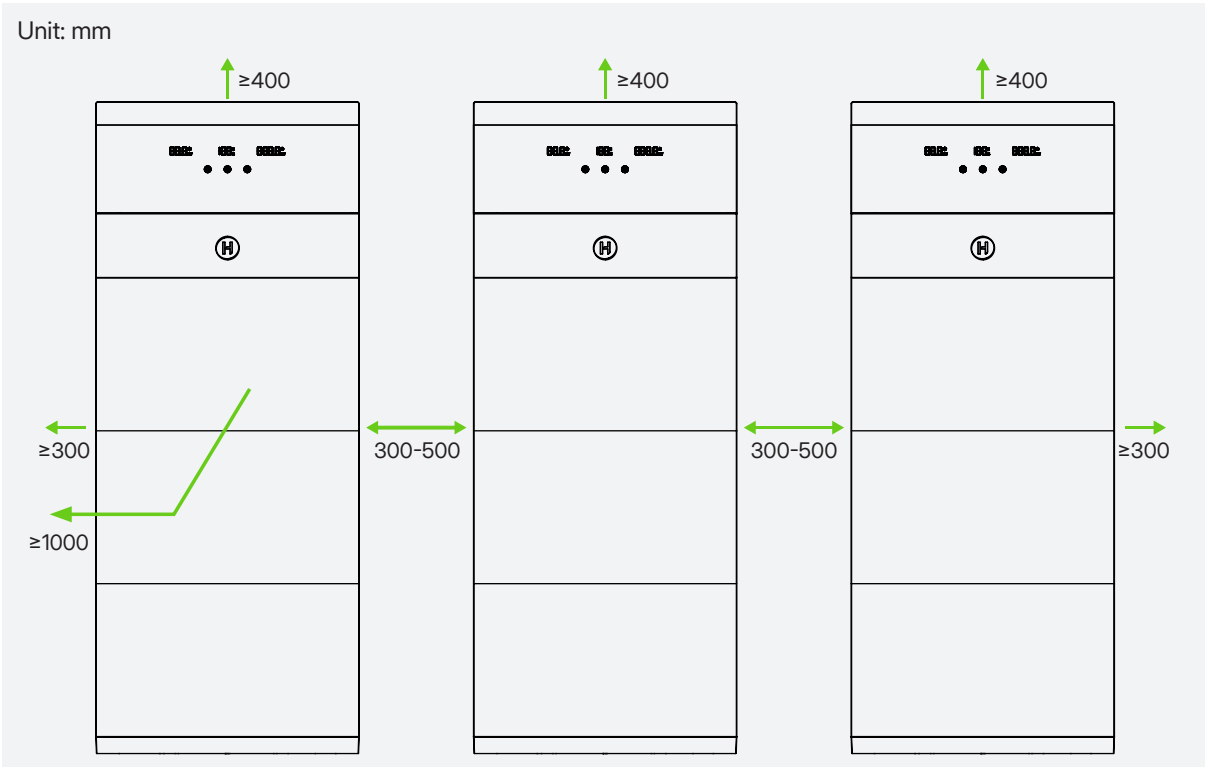
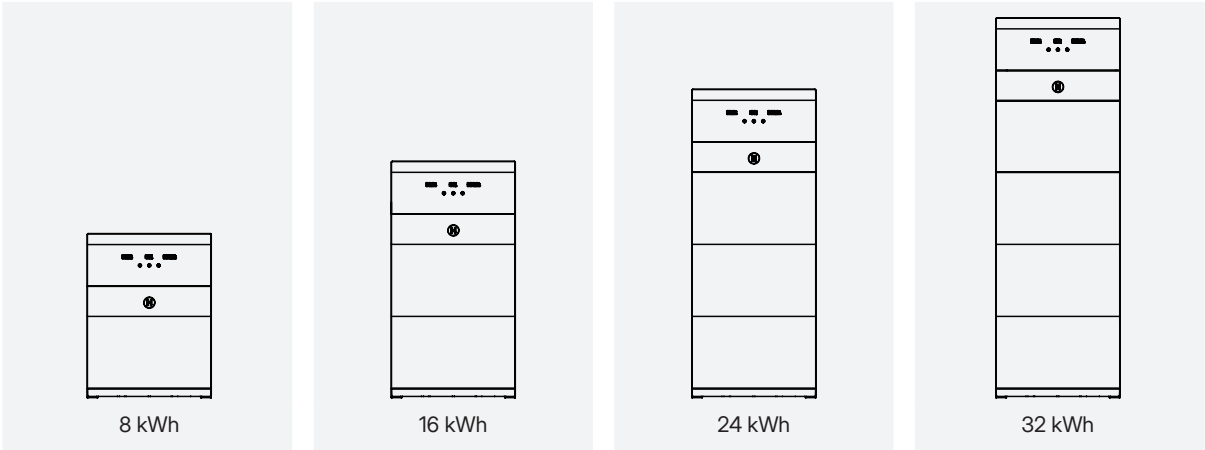


Figure 6-2 Space Requirements

6.4 Stackable Requirements




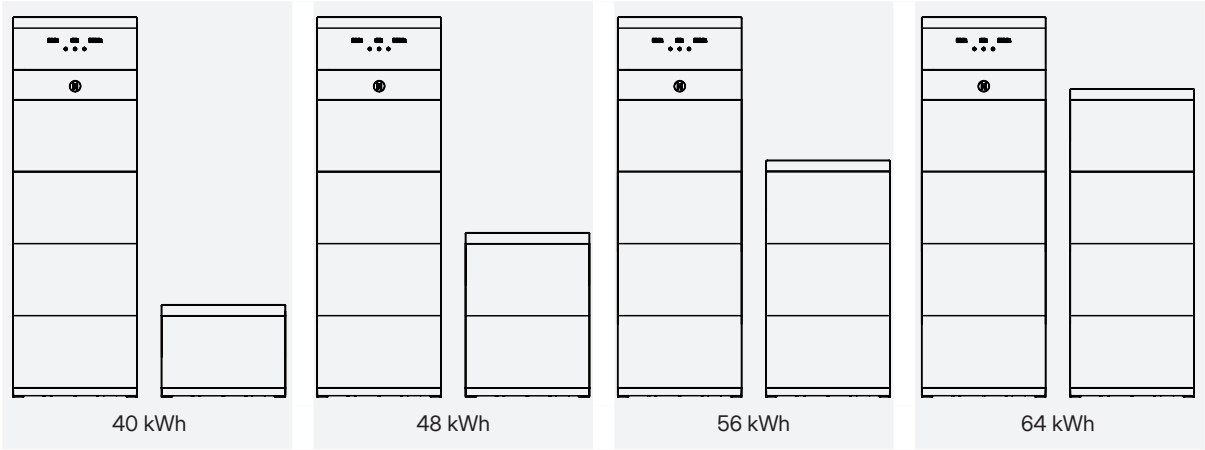


Figure 6-3 Stackable Requirements

6.5 Installation Tools




Personal Protective Equipment (PPE)

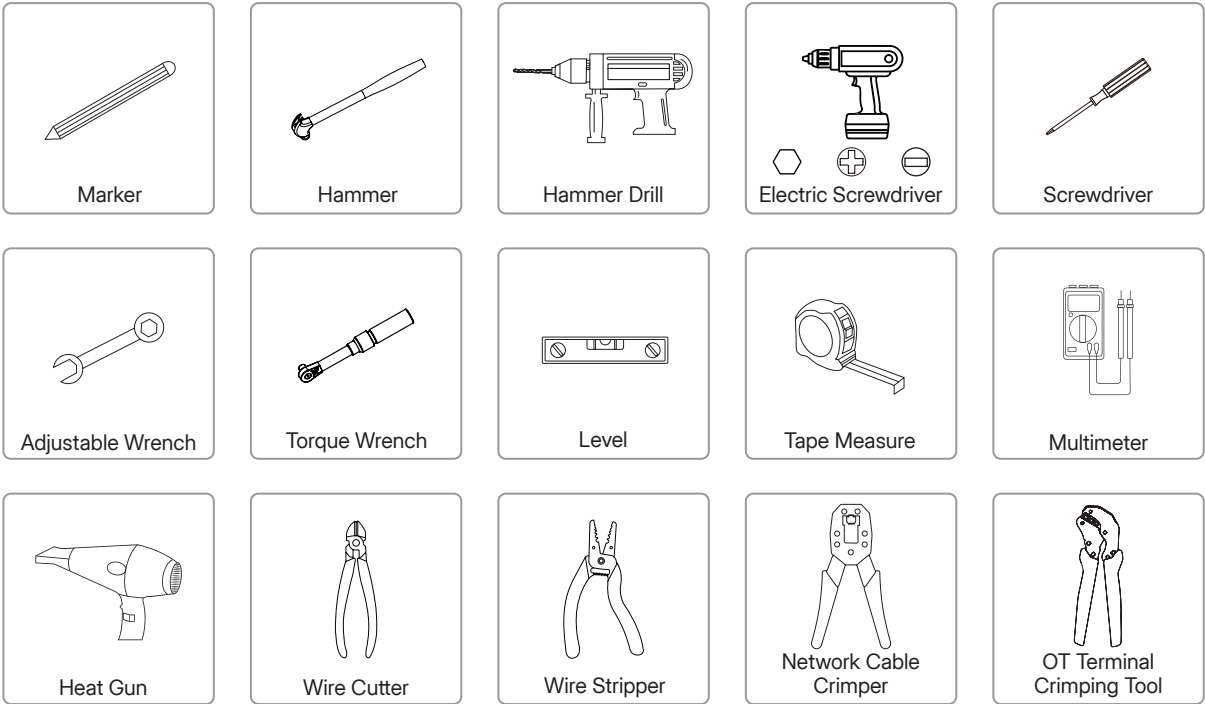

## 7 Installation Steps


### 7.1 Floor-standing Installation

**Step 1** Place the base on a level ground, parallel to the wall, and keep a distance of 30 mm to 35 mm. Ensure that the level bubble is in the center; if not, use a flat head screwdriver to adjust the base.

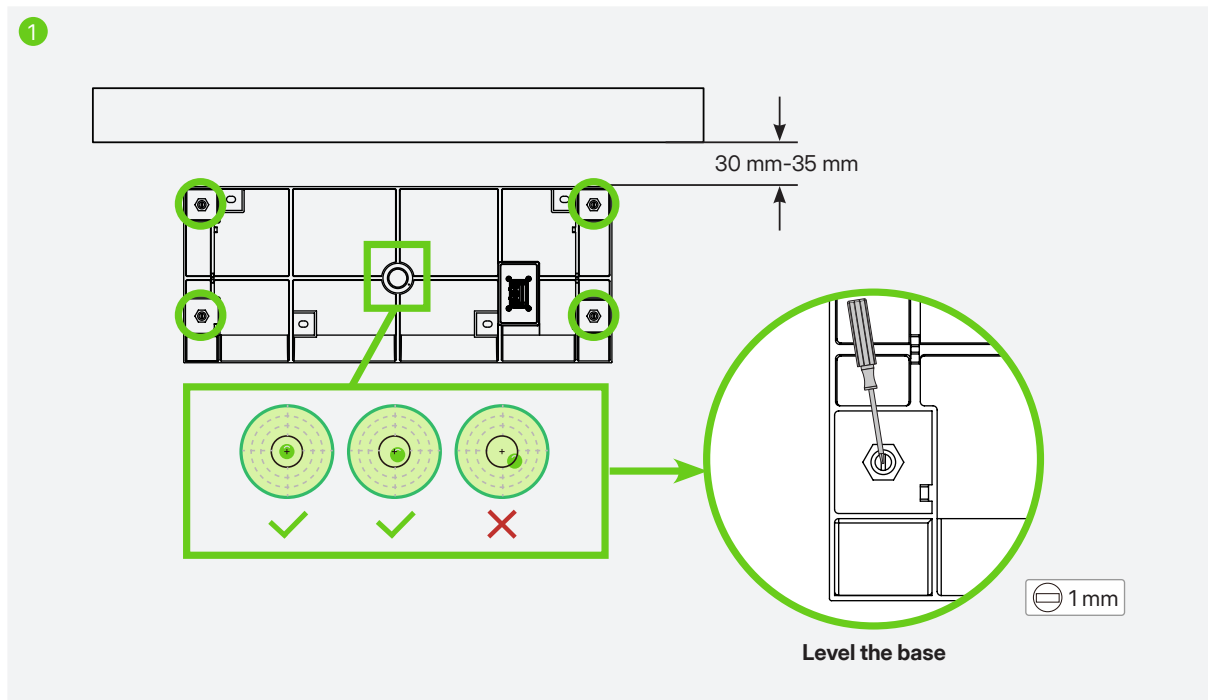

**Step 2 Fix the base.**


- A. Mark hole positions.
- B. Drill holes.
- C. Hammer and tighten the expansion screws.
- D. Unscrew the screws while leaving sleeves in place.
- E. Place the base, insert the screws into the sleeves, and tighten them.

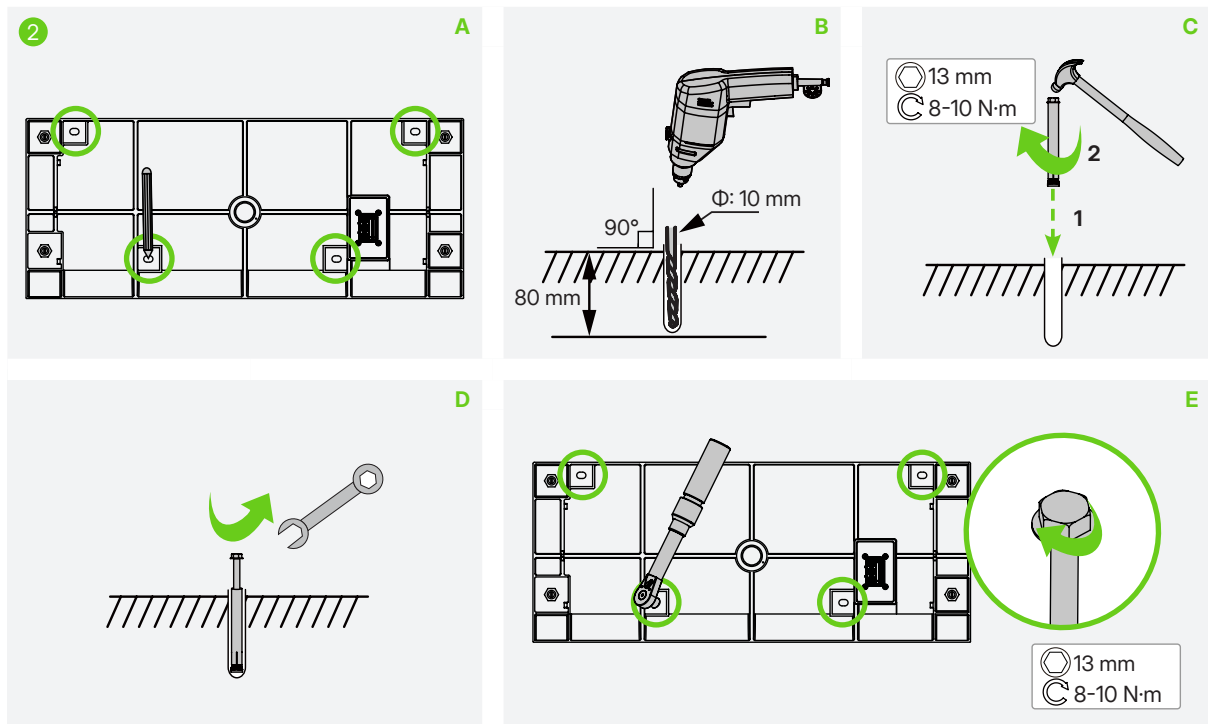




**Step 3 Drill holes for installing HiOne.**

- A. Bend the bottom of the positioning board along the dotted lines.
- B. Clip the positioning board to the base.
- C. Mark the four battery installation holes (battery points).
- D. Slide the positioning board upward along the wall until its bottom battery points align with the marked top battery points.
- E. Repeat step D to mark the battery points for all batteries. Then, mark the inverter points.
- F. Drill holes and install the expansion sleeves.

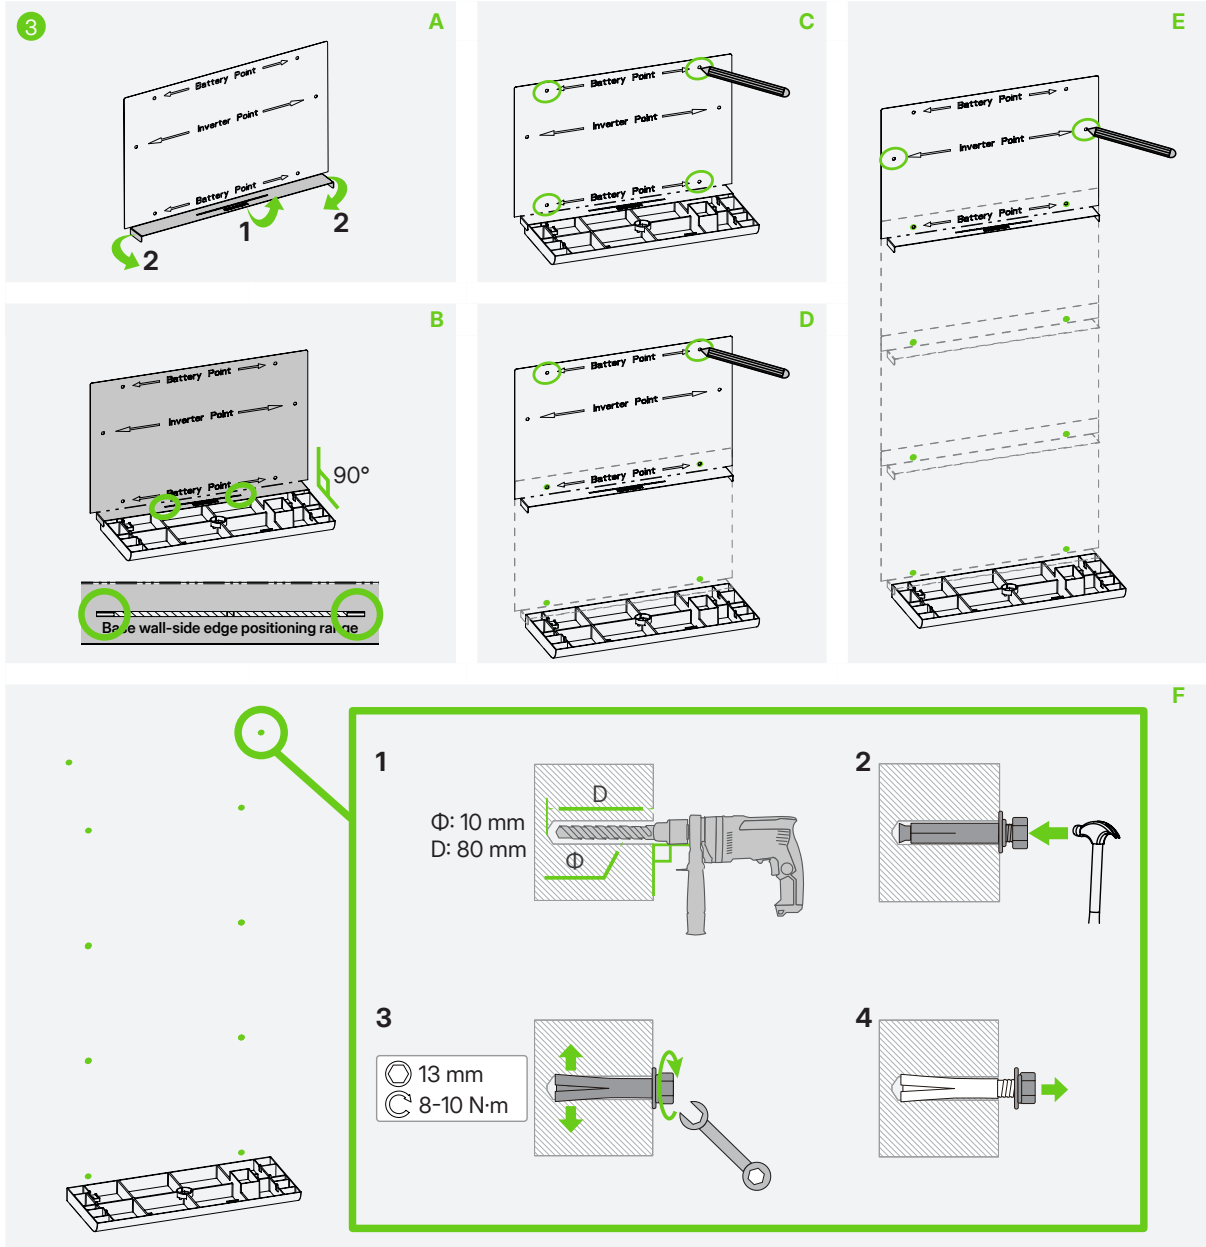



**Step 4 Install a battery.**

- A. Remove the connector cap from the base.
- B. Install the handles on a battery.
- C. Hold the handles to lift the battery, align it with the base, and place it on the base. Ensure that the connectors fully engage.
- D. Secure the battery to the base using the M4 screws.
- E. Secure the L-shaped brackets to the battery using the M4 screws.
- F. Secure the battery to the wall using the L-shaped brackets and expansion screws.

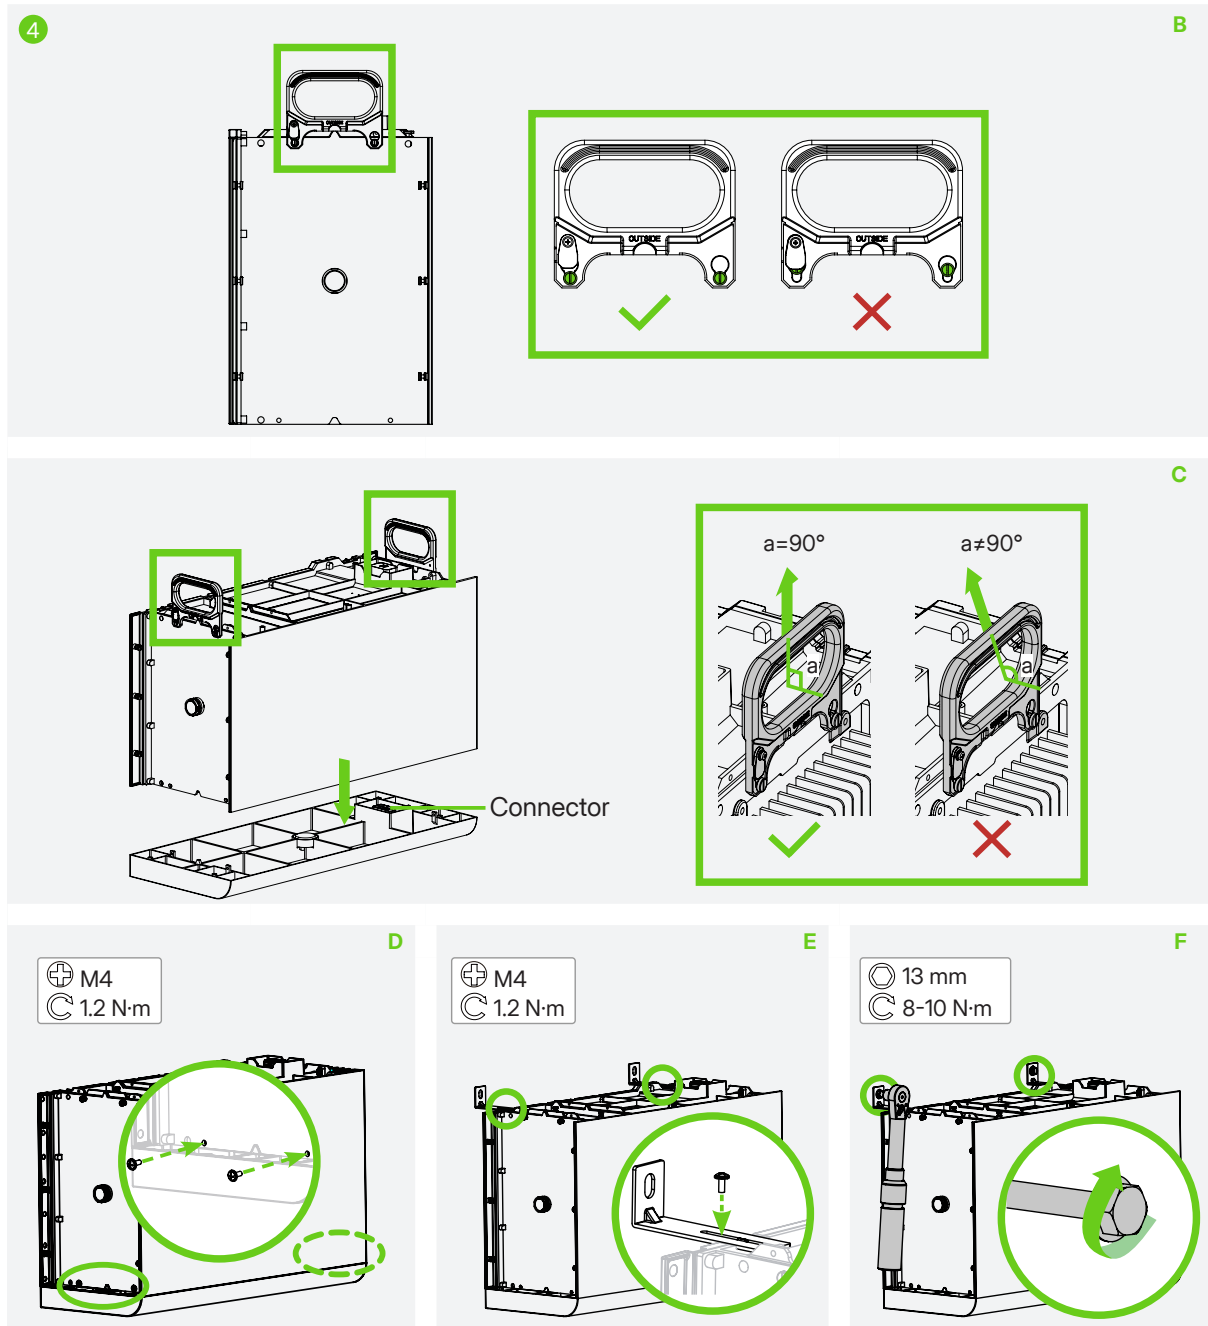


**Step 5 Install other batteries. If you only have one battery, go to step 6.**

- A. Remove the connector cap from the top of the installed battery.
- B. Lift a battery to be installed, align it with the installed battery, and place it on the installed battery.  
Ensure that the connectors fully engage.
- C. Secure the two batteries using the M4 screws.
- D. Secure the L-shaped brackets to the top battery using the M4 screws.
- E. Secure the top battery to the wall using the L-shaped brackets and expansion screws.
- F. Repeat steps A-E to install all batteries.

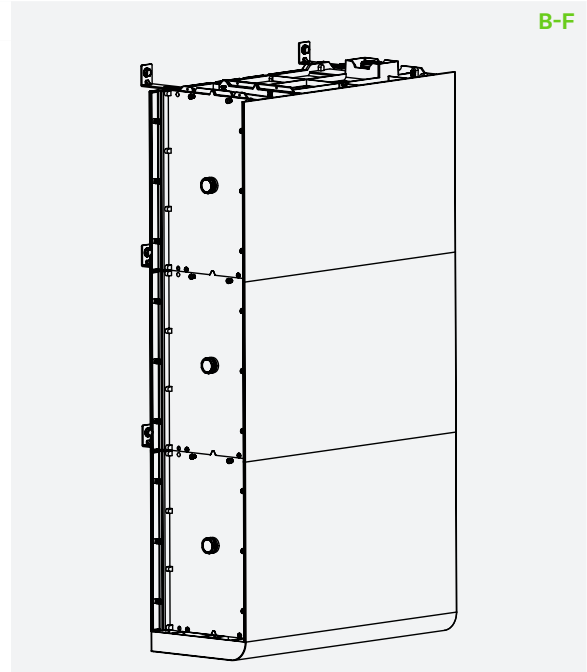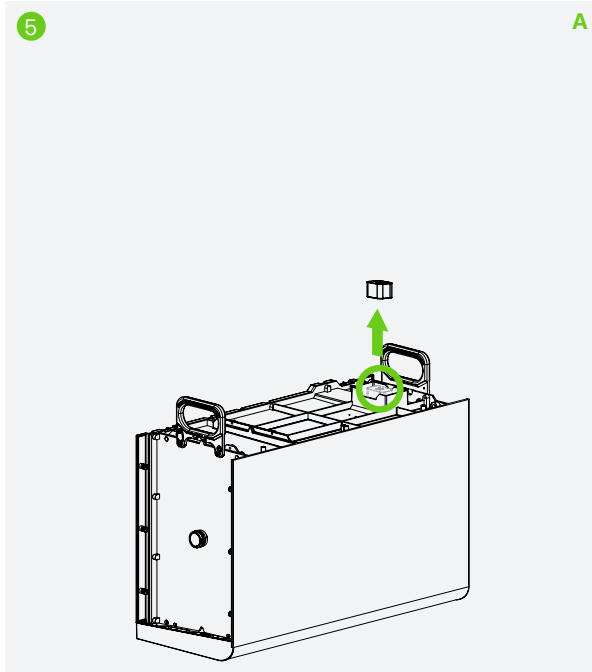
**Step 6 Install the inverter.**

- A. Remove the connector cap from the top of the battery and from the bottom of the inverter.
- B. Use the handles to lift the inverter, align it with the battery, and place it on the battery. Ensure that the connectors fully engage.
- C. Secure the inverter to the battery using the M4 screws.
- D. Secure the L-shaped brackets to the inverter using the M4 screws.
- E. Secure the inverter to the wall using the L-shaped brackets and expansion screws.

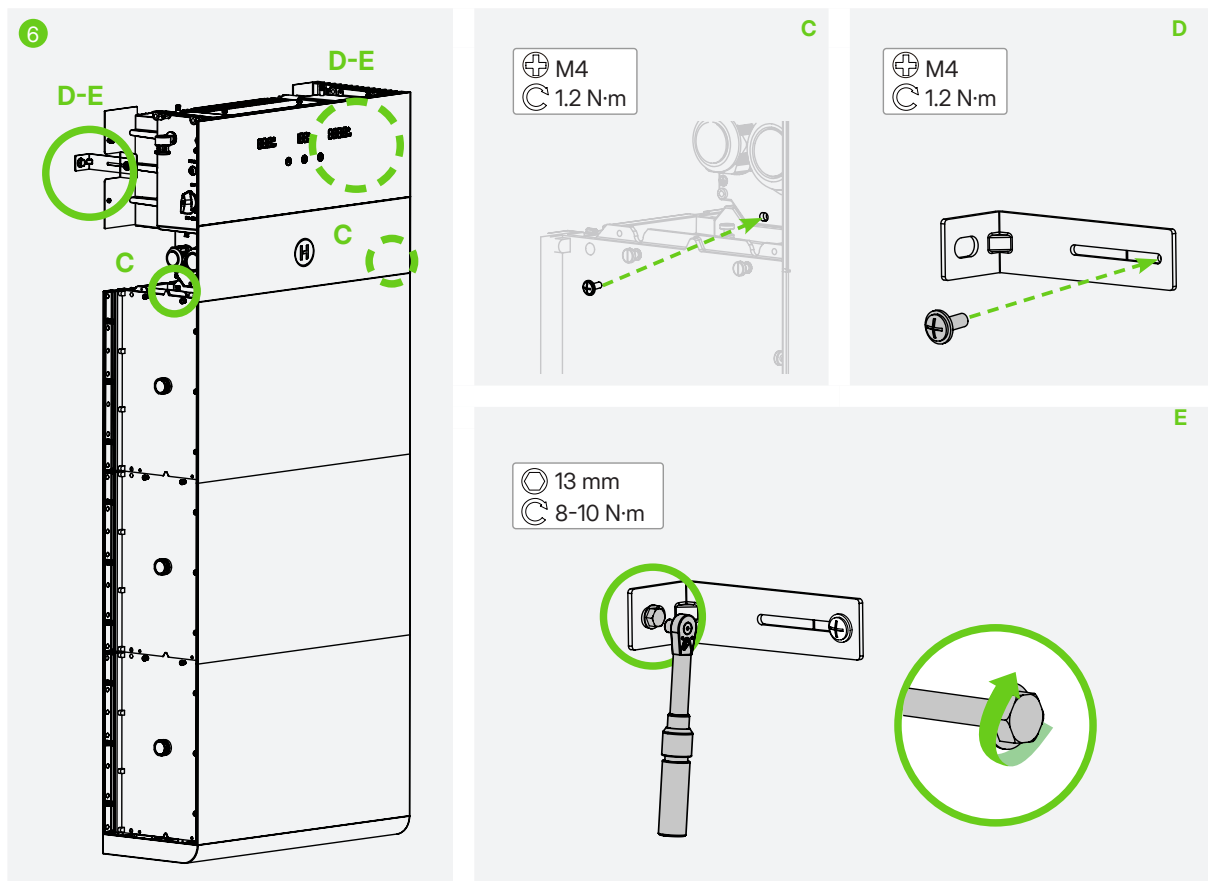

### Step 7 Remove the wiring box cover.


- A. Unscrew the two screws on the lower-left side of the inverter.
- B. Remove the wiring box cover.

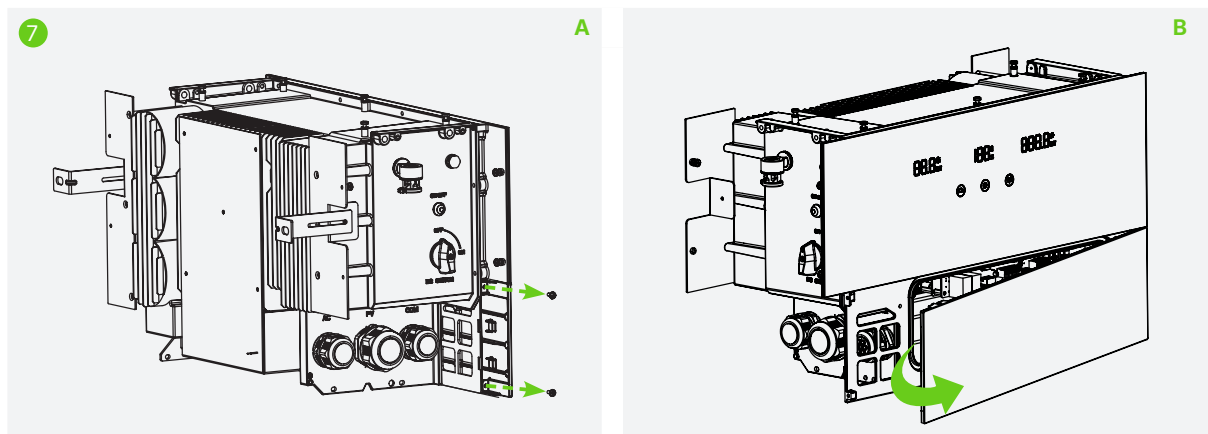

## 7.2 Wall-mounting Installation

### Step 1 Install the wall-mounting bracket.

- A. Attach the two wall-mounting brackets to the base.
- B. Place the bracket assembly against the wall and adjust it until the level bubble is centered.
- C. Mark the drilling positions through the bracket holes, then drill holes into the wall.
- D. Tighten the expansion screws to secure the wall-mounting brackets to the wall.

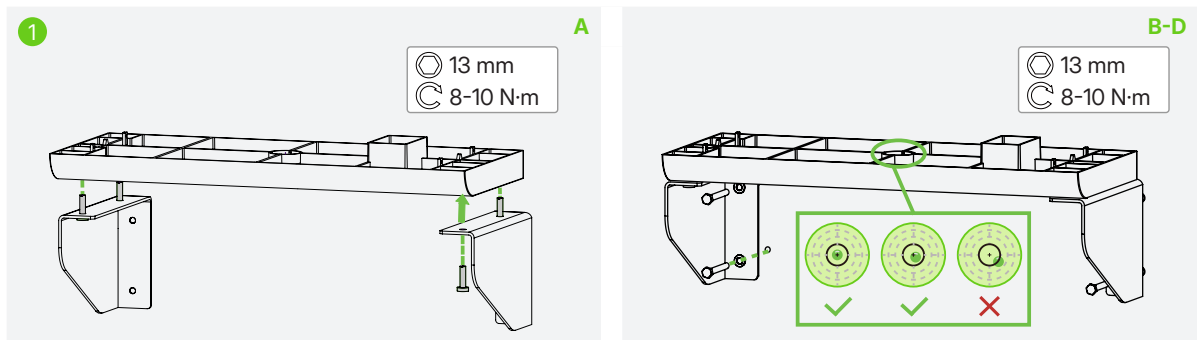


### Step 2 Drill holes for installing HiOne.


See [step 3](#) of floor-standing installation.

### Step 3 Install a battery.

- A. Remove the connector cap from the base.
- B. Install the handles on a battery.
- C. Hold the handles to lift the battery, align it with the base, and place it on the base. Ensure that the connectors fully engage.

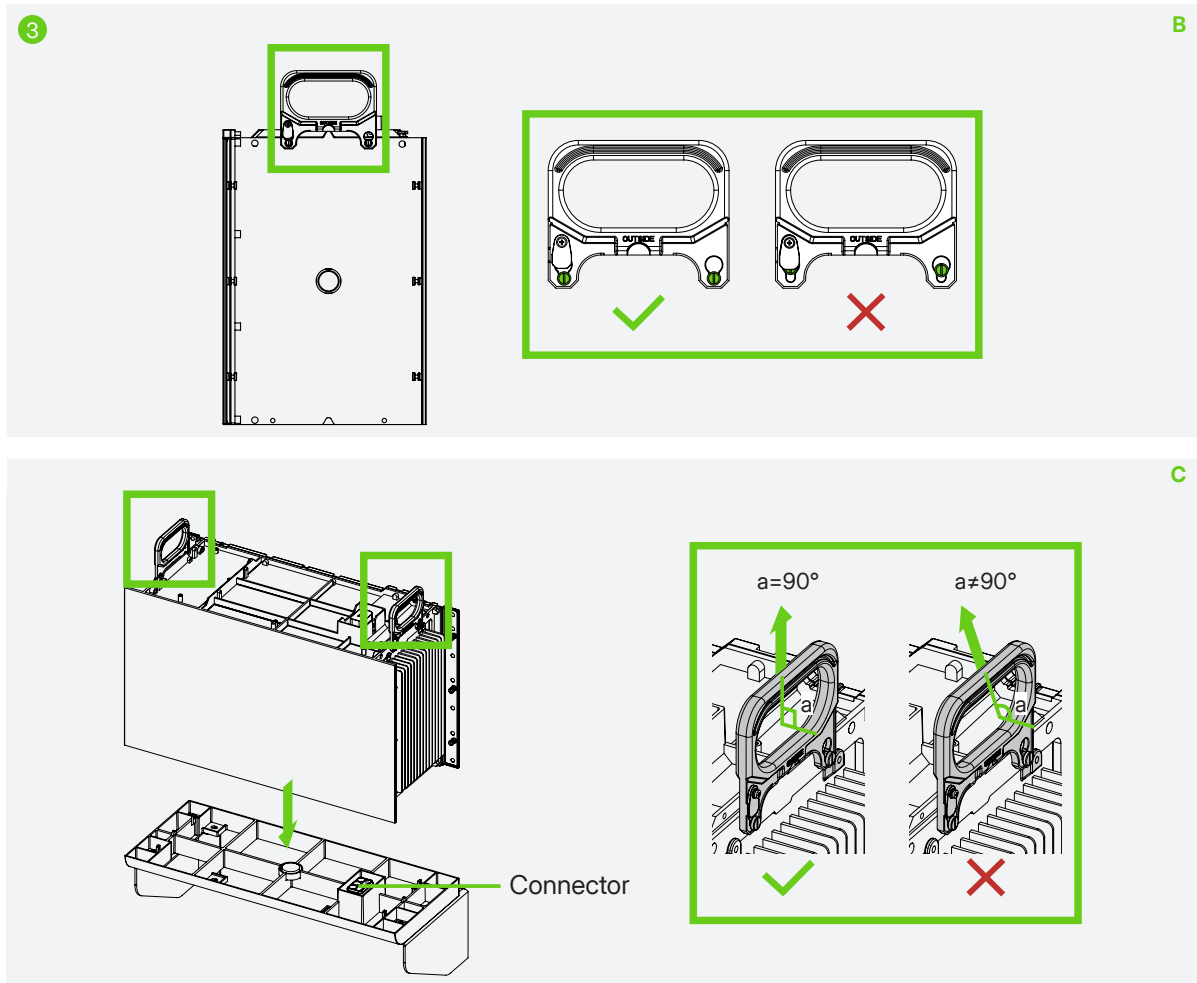

- D. Secure the battery to the base using the M4 screws.
- E. Secure the L-shaped brackets to the battery using the M4 screws.
- F. Secure the battery to the wall using the L-shaped brackets and expansion screws.

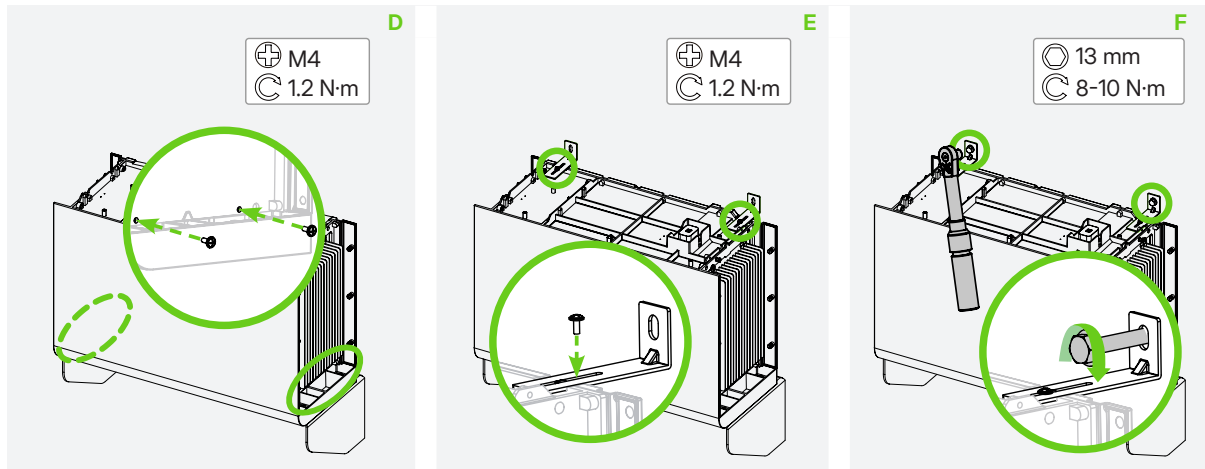


**Step 4 Install other batteries. If you only have one battery, go to step 5.**

- A. Remove the connector cap from the top of the installed battery.
- B. Lift a battery to be installed, align it with the installed battery, and place it on the installed battery. Ensure that the connectors fully engage.
- C. Secure the two batteries using the M4 screws.
- D. Secure the L-shaped brackets to the top battery using the M4 screws.
- E. Secure the top battery to the wall using the L-shaped brackets and expansion screws.
- F. Repeat steps A-E to install all batteries.


**Step 5 Install the inverter.**

- A. Remove the connector cap from the top of the battery and from the bottom of the inverter.
- B. Use the handles to lift the inverter, align it with the battery, and place it on the battery. Ensure that the connectors fully engage.
- C. Secure the inverter to the battery using the M4 screws.
- D. Secure the L-shaped brackets to the inverter using the M4 screws.
- E. Secure the inverter to the wall using the L-shaped brackets and expansion screws.

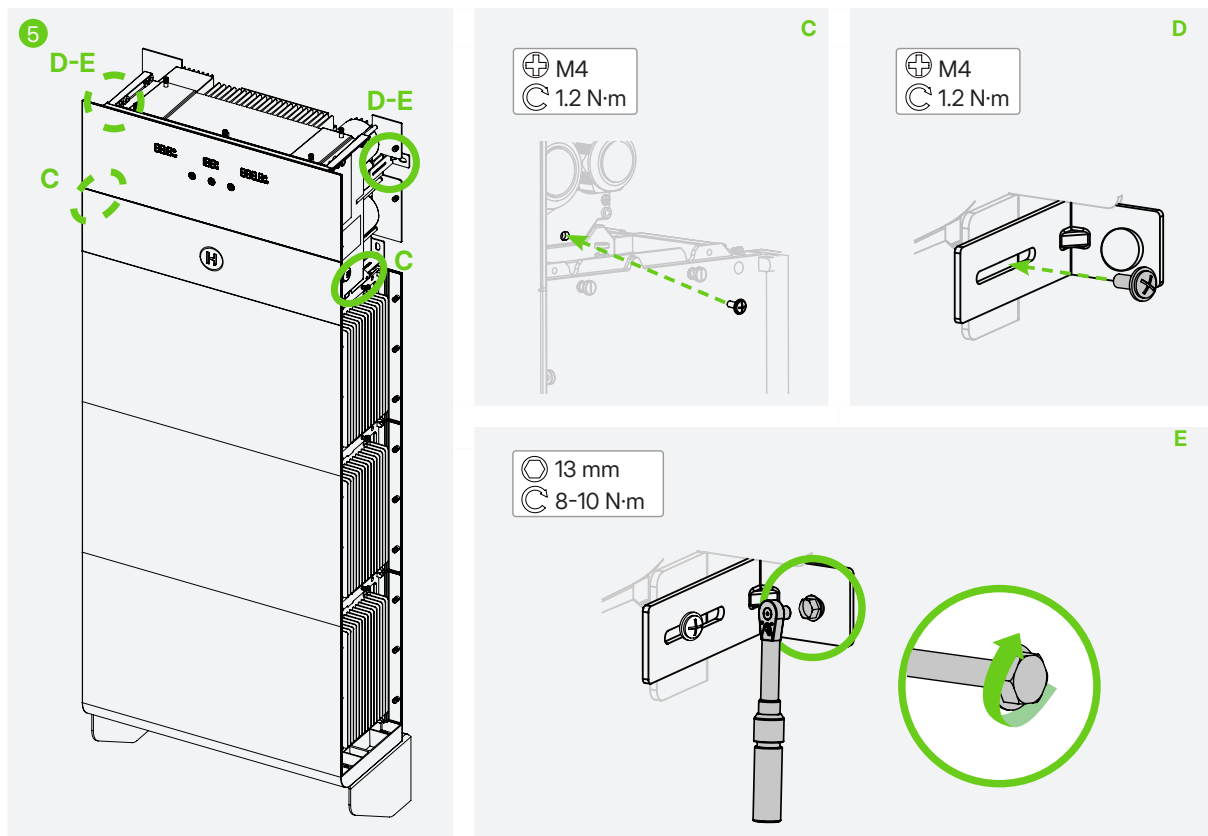**Step 6 Remove the wiring box cover.**

A. Unscrew the two screws on the lower-left side of the inverter.

B. Remove the wiring box cover.

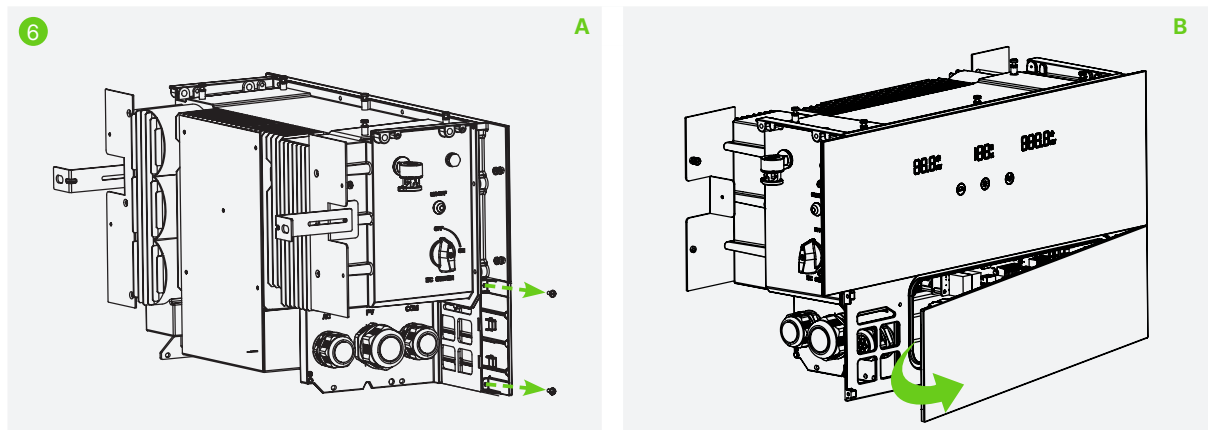

## 8 Electrical Connection

### ⚠ WARNING

- Before any electrical connections, keep in mind that the inverter has dual power supplies.
- Qualified personnel must wear personal protective equipment (PPE) during operation.
- To ensure safe connection and operation, it is recommended to install an overcurrent protection device (circuit breaker) while connecting the AC cable.

### 8.1 Wiring Diagram

#### 📘 NOTE


- Since Hoymiles inverter has a built-in leakage current detection circuit, it is recommended to use a Type A RCD. If required by local regulations, a Type B RCD is also permitted.
- The three-phase system supports three-phase unbalanced output, and the power of each phase can be controlled individually. Each phase can separately output 1/3 of the rated power of the inverter.
- In the remaining two phases without high power output requirements, any single phase can output 50% of the rated power of the inverter.

#### 8.1.1 Basic System

For Australia, New Zealand, South Africa, etc.

#### NOTICE

- This diagram is an example of application in which the neutral connects with PE in the distribution box.
- For countries such as Australia, New Zealand, South Africa, etc., please follow local wiring regulations.

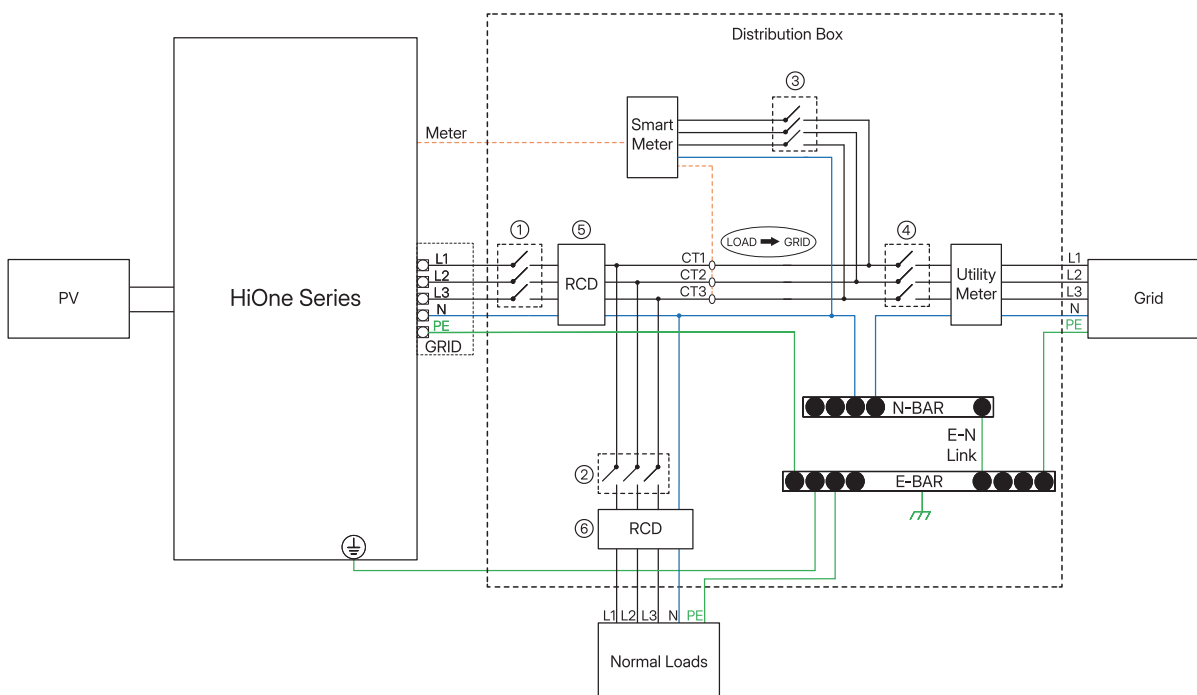


| ①               | ②                | ③                | ④            | ⑤          | ⑥         |
|-----------------|------------------|------------------|--------------|------------|-----------|
| 63 A AC Breaker | Depends on Loads | Depends on Meter | Main Breaker | 300 mA RCD | 30 mA RCD |




For Other Countries

NOTICE

- This diagram is an example of application in which the neutral is separated from the PE in the distribution box.
- For countries such as China, Germany, Italy, etc., please follow local wiring regulations.

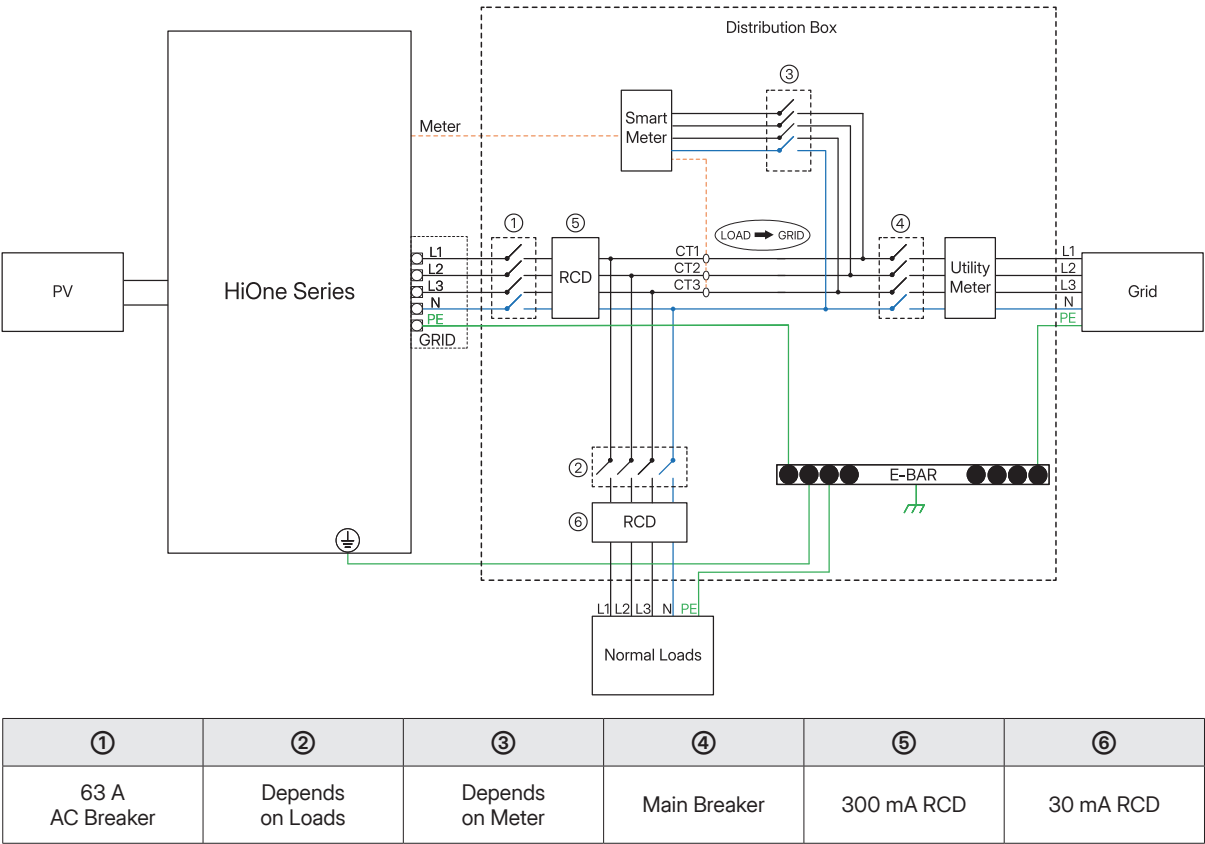

8.1.2 Whole Home Backup System

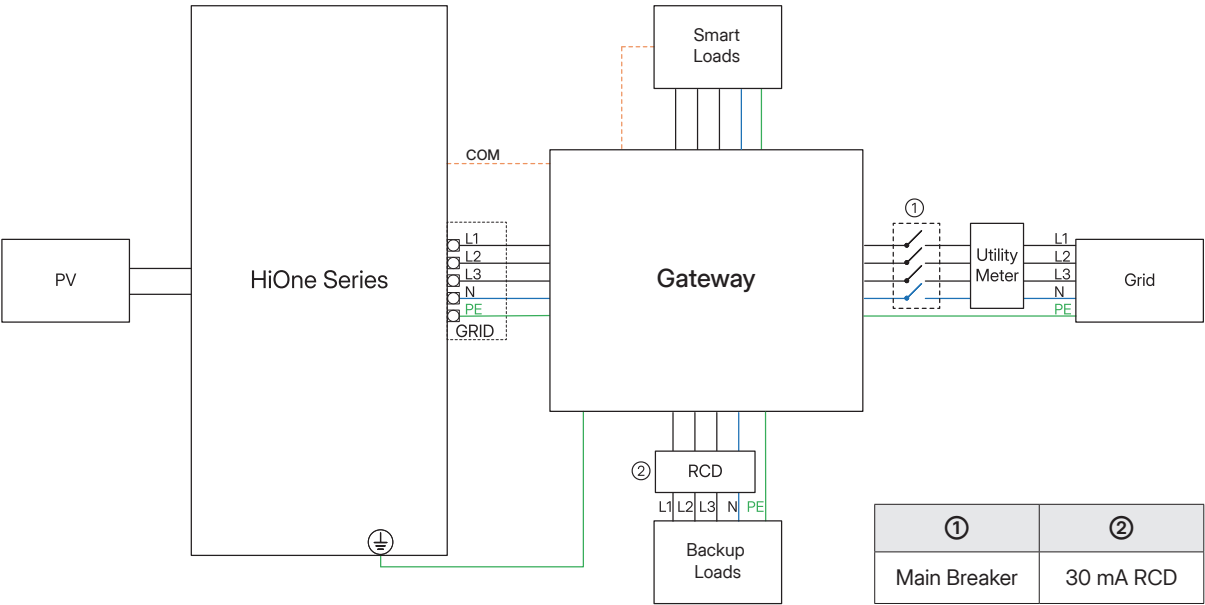


### 8.1.3 Partial Home Backup System

**For Australia, New Zealand, South Africa, etc.**

## NOTICE


- This diagram is an example of application in which the neutral connects with PE in the distribution box.
- For countries such as Australia, New Zealand, South Africa, etc., please follow local wiring regulations.

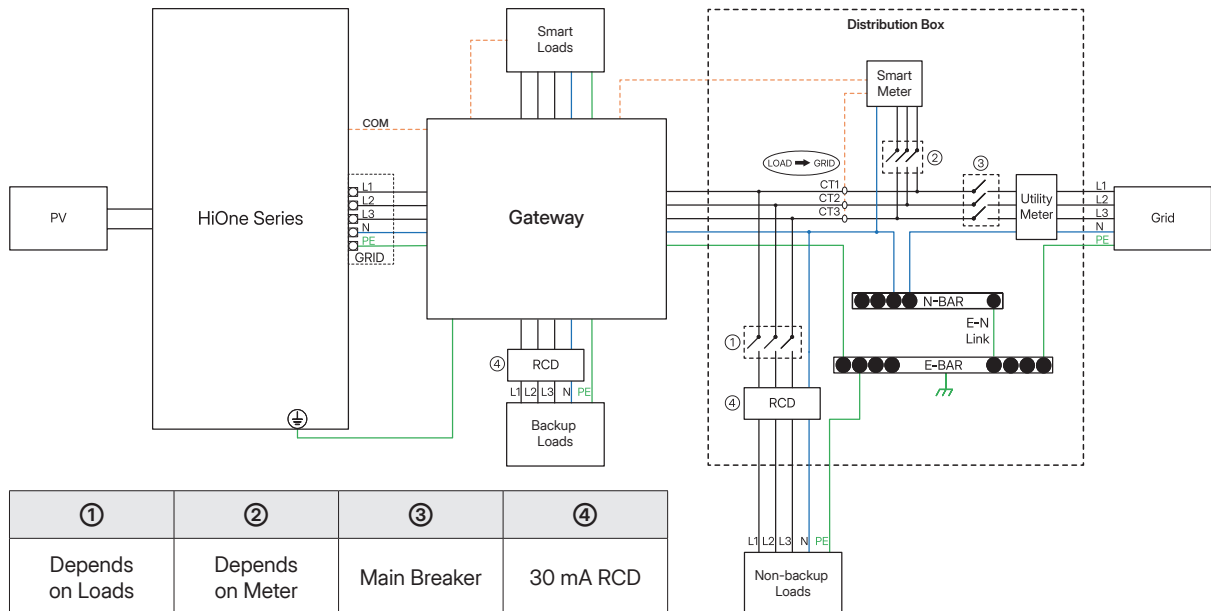

## For Other Countries

## NOTICE

- This diagram is an example of application in which the neutral is separated from the PE in the distribution box.
- For countries such as China, Germany, Italy, etc., please follow local wiring regulations.

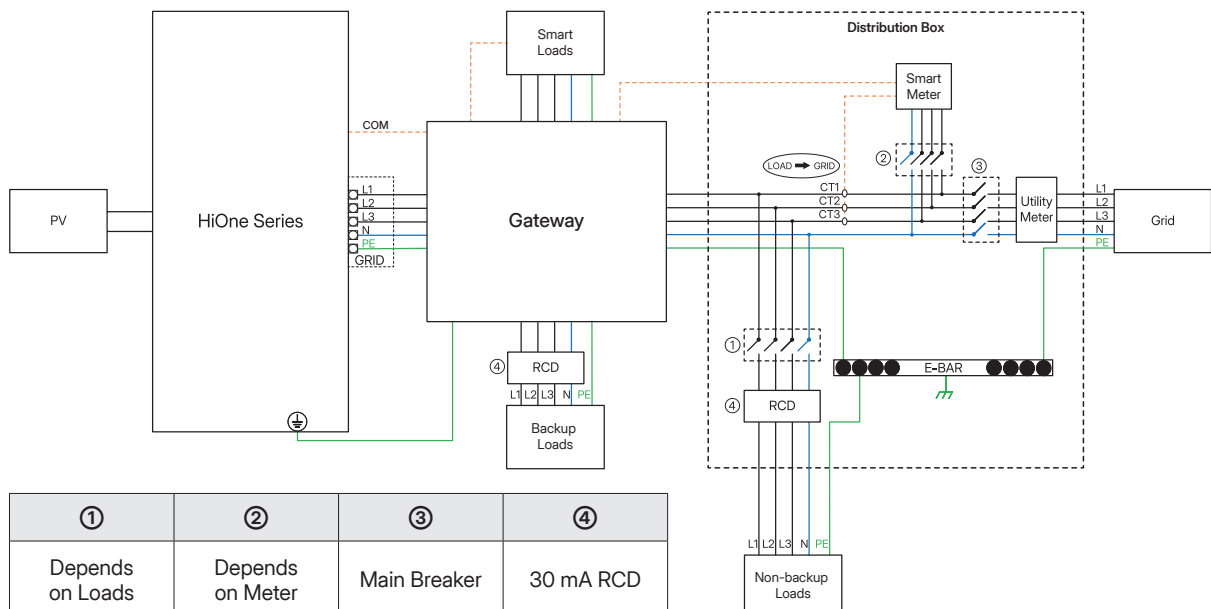


## 8.2 Recommended Cable List

The following tables provide the cable specifications recommended by Hoymiles. The cables used in actual installation can be larger than the recommended specifications, but cannot be smaller than the recommended specifications. Select the appropriate cables in accordance with local laws and regulations.

### **NOTE**

To ensure a reliable electrical connection, it is recommended to use crimp terminals when connecting cables to the inverter.

| Cable<br>(90°C, Copper) | Recommended Specification (mm <sup>2</sup> ) |                 |              | Stripping Length (mm)   |
|-------------------------|----------------------------------------------|-----------------|--------------|-------------------------|
|                         | HiOne-8/10T-G3                               | HiOne-12/16T-G3 | HiOne-20T-G3 | HiOne-8/10/12/16/20T-G3 |
| Ground                  | 2.5                                          | 4               | 6            | 12                      |
| AC                      | 2.5                                          | 4               | 6            | 18                      |
| PV                      | 4                                            |                 |              | 12                      |
| COM1                    | Standard CAT 5E/CAT 6 Ethernet Cable         |                 |              | /                       |
| COM2                    | 0.5-0.8                                      |                 |              | 11                      |
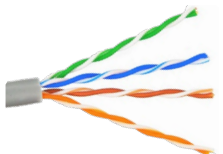
| Cable  | Picture                                                                             | Type                                                                                                                                 |
|--------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Ground |   | Yellow-green cable                                                                                                                   |
| AC     |  | Five-core copper cable                                                                                                               |
| PV     |  | Dedicated PV cable with a voltage rating of more than 1000 V, a temperature resistance of 105°C, and a fire resistance grade of VW-1 |
| COM1   |  | Standard CAT 5E/CAT 6 Ethernet cable                                                                                                 |
| COM2   |  | Two-core signal cable                                                                                                                |

8.3 Internal overview

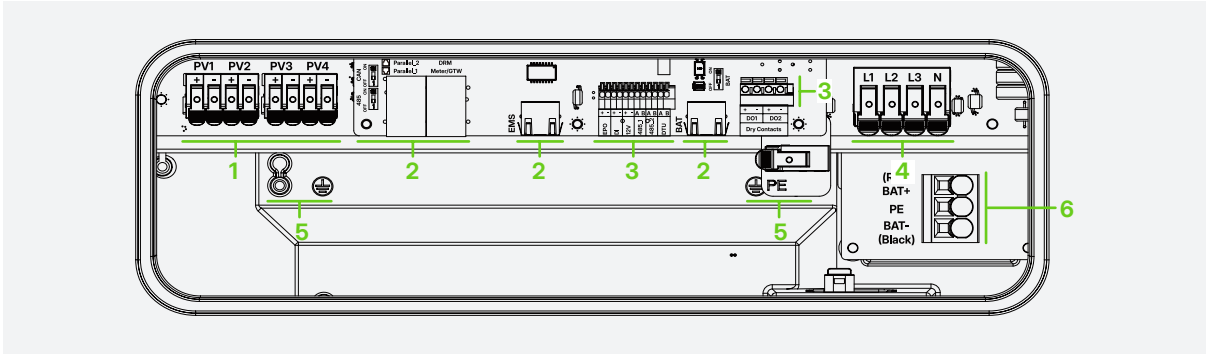



Figure 8-1 Internal Overview

| NO. | Description                    |
|-----|--------------------------------|
| 1   | PV Terminals                   |
| 2   | Communication Terminals (COM1) |
| 3   | Communication Terminals (COM2) |
| 4   | AC Terminals                   |
| 5   | Ground Terminals               |
| 6   | Battery Terminals              |

8.4 Ground Cable Connection

| Cable<br>(90°C, Copper) | Recommended Specification (mm <sup>2</sup> ) |              |              |              |              | Stripping Length (mm)   |
|-------------------------|----------------------------------------------|--------------|--------------|--------------|--------------|-------------------------|
|                         | HiOne-8T-G3                                  | HiOne-10T-G3 | HiOne-12T-G3 | HiOne-16T-G3 | HiOne-20T-G3 | HiOne-8/10/12/16/20T-G3 |
| Ground                  | 2.5                                          |              | 4            |              | 6            | 12                      |

- Step 1** Crimp the cable and ground terminal.
- Step 2** Connect the ground cable to the inverter.

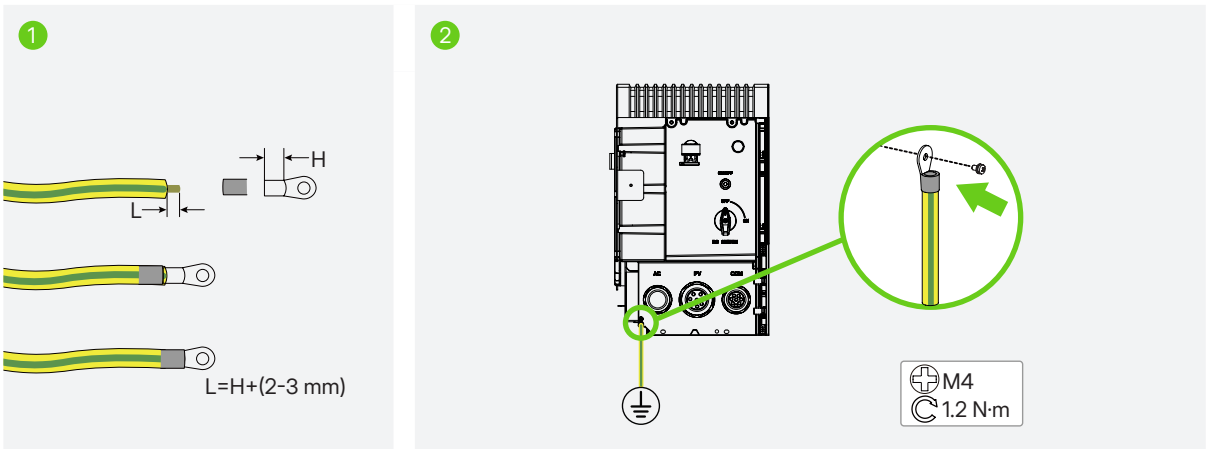

8.5 AC Cable Connection


 **WARNING**

Before connecting the AC cable, please make sure all requirements listed below are followed.

- An independent three or four-pole circuit breaker must be installed on the output side of the inverter to ensure safe disconnection from the grid.
- Multiple inverters cannot share one circuit breaker.
- Never connect a load between the inverter and the circuit breaker.
- Make sure that the overcurrent protection devices (OCPDs) (breakers) are turned off.
- Ensure the rated power of the EPS load does not exceed the rated output power of the inverter.
- Ensure that the starting power of inductive loads, such as air conditioners, refrigerators, and pumps, does not exceed the EPS peak power of the inverter. (The starting power of the air conditioner is at least 2 times the rated power. For details, refer to the appliance manual.) Otherwise, the inverter will stop output or even shut down with a fault alarm.
- Before proceeding to the next step, make sure that the AC voltages are 0 Vac through a multimeter.

 **NOTE**

- The colors for L1, L2, L3, N, and PE wires used in this manual are L1-Brown, L2-Black, L3-Grey, N-Blue, and PE-Yellow&Green.
- The wiring color code may vary. Please follow local laws and regulations for wiring.

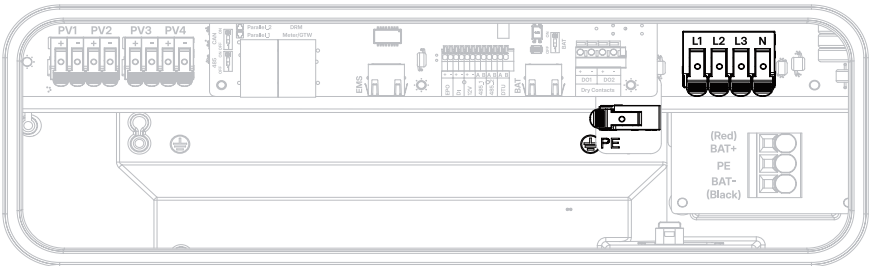


AC Terminals

Procedure

| Cable<br>(90°C, Copper) | Recommended Specification (mm <sup>2</sup> ) |              |              |              |              | Stripping Length (mm)   |
|-------------------------|----------------------------------------------|--------------|--------------|--------------|--------------|-------------------------|
|                         | HiOne-8T-G3                                  | HiOne-10T-G3 | HiOne-12T-G3 | HiOne-16T-G3 | HiOne-20T-G3 | HiOne-8/10/12/16/20T-G3 |
| AC                      | 2.5                                          |              | 4            |              | 6            | 18                      |



 **WARNING**

Ensure that the stripping length is 18 mm. If it is too short, the terminal may clamp onto the insulation instead of the conductor, causing overheating and creating a fire hazard.

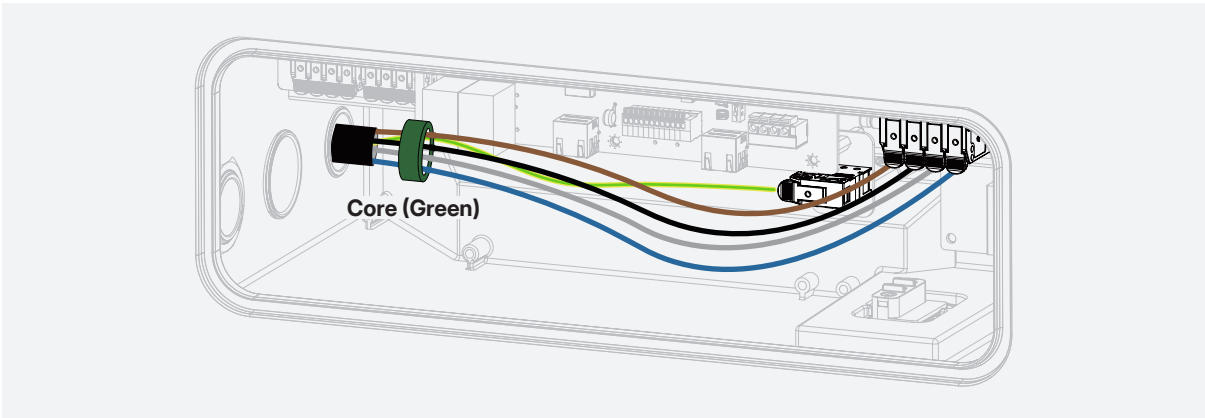

**Step 1** Strip the insulation of L1/L2/L3/N/PE wires by 18 mm.

**Step 2** Unscrew the cable gland on the left side of the inverter.



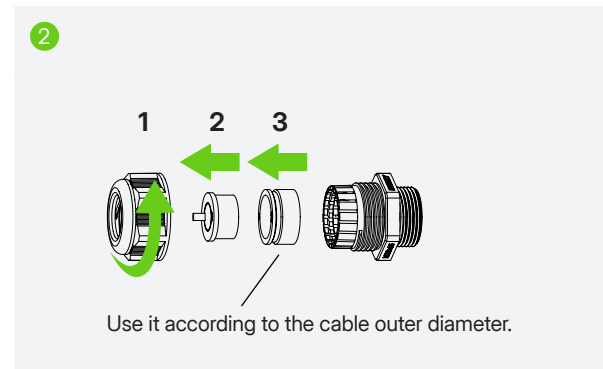
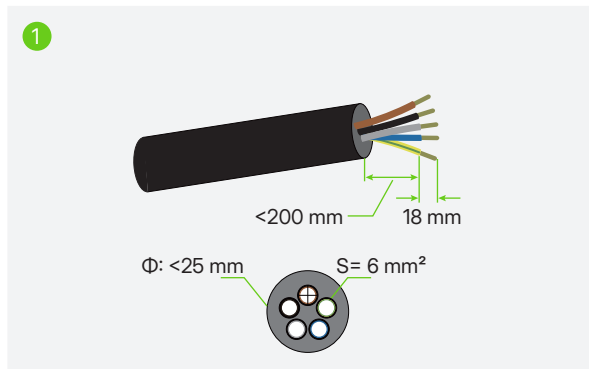


**Step 3** Thread the AC cable through the AC cable entry.

**Step 4** Connect the PE wire to the PE terminal.

**Step 5** Connect the L1/L2/L3/N wires to the corresponding terminals.

**Step 6** Gently pull the wires backward to ensure that they are firmly connected, and tighten the cable gland with a torque of 7 N·m to 8 N·m.

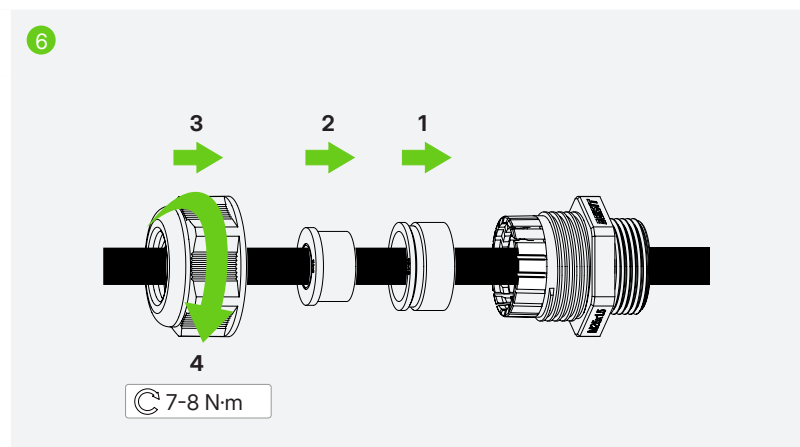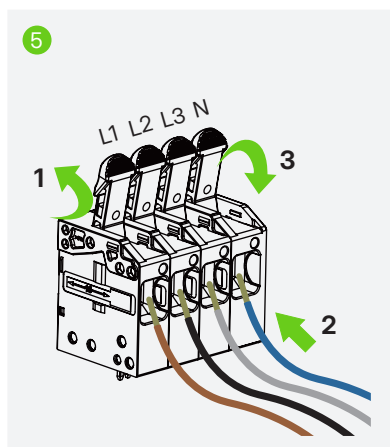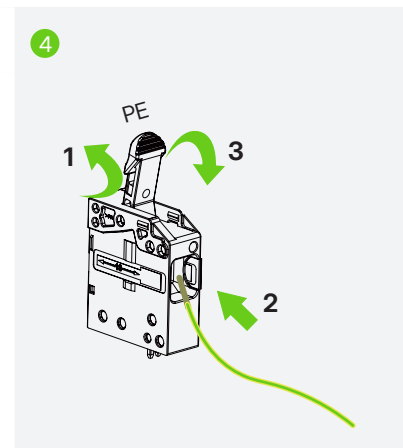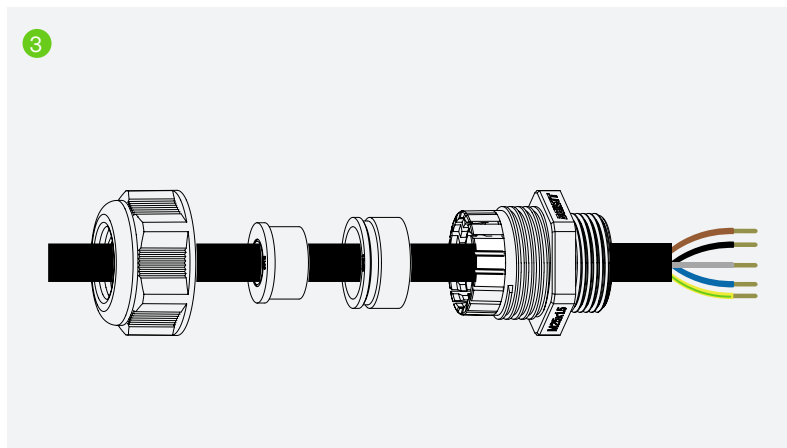


8.6 PV Cable Connection

 **WARNING**

Before connecting the PV cables, please make sure all requirements listed below are followed.

- The voltage, current, and power ratings of the panels to be connected are within the allowable range of the inverter. Ensure the polarity is correct, and please refer to the technical parameters in [13 Technical Datasheet](#) for voltage and current limits.
- If the PV cables are reversely connected or if the equipment is not working properly, do not turn off the DC switch. Otherwise, it may cause a DC arc, fire, or damage to the inverter. After the PV input current drops below 0.5 A, disconnect the DC switch and adjust the polarity of the PV strings.
- Since the equipment is a transformerless structure, please do not ground the outputs of PV panels.


| Cable<br>(90°C, Copper) | Recommended Specification (mm²) | Stripping Length (mm)   |
|-------------------------|---------------------------------|-------------------------|
|                         | HiOne-8/10/12/16/20T-G3         | HiOne-8/10/12/16/20T-G3 |
| PV                      | 4                               | 12                      |

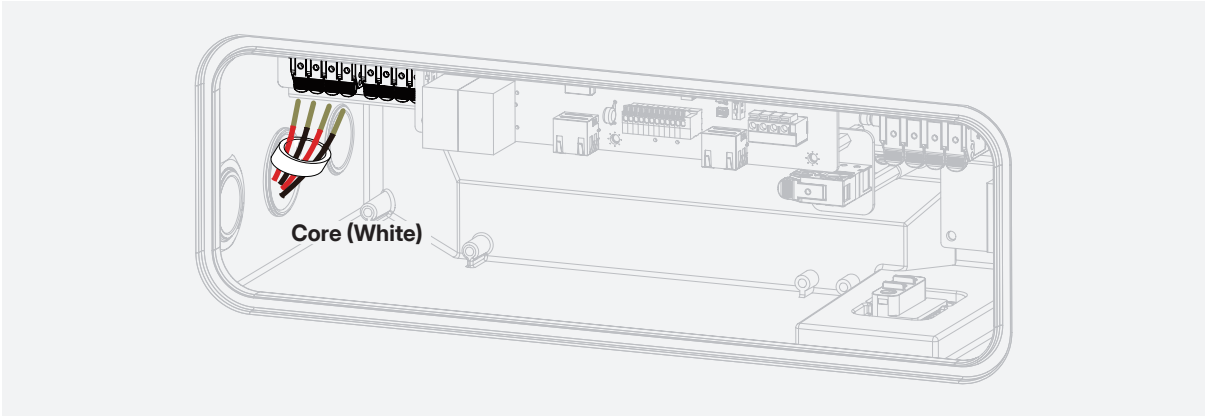

- Step 1** Unscrew the cable gland on the left side of the inverter, and remove the rubber plugs.
- Step 2** Strip the insulation of PV cables by 12 mm, and thread the PV cables through the PV cable entry.

 **NOTE**

To ensure sealing performance, remove the rubber plugs based on the actual number of cables.

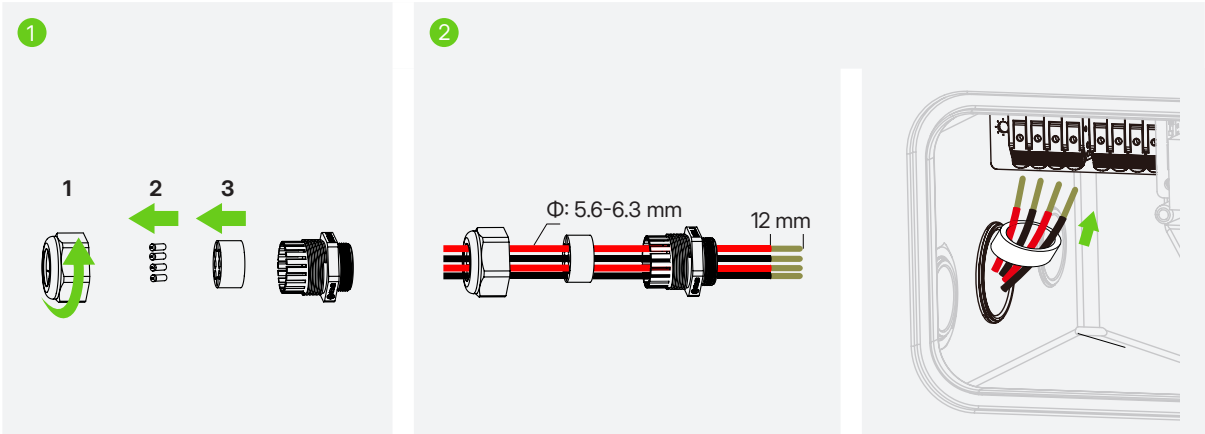


**Step 3** Raise the locking clip.

**Step 4** Insert the PV cables into the corresponding terminals.


**Step 5** Pull the locking clip downward to lock the connection. Gently pull the wires backward to ensure that they are firmly connected.

**Step 6** Tighten the cable gland with a torque of 10 N·m to 13 N·m.

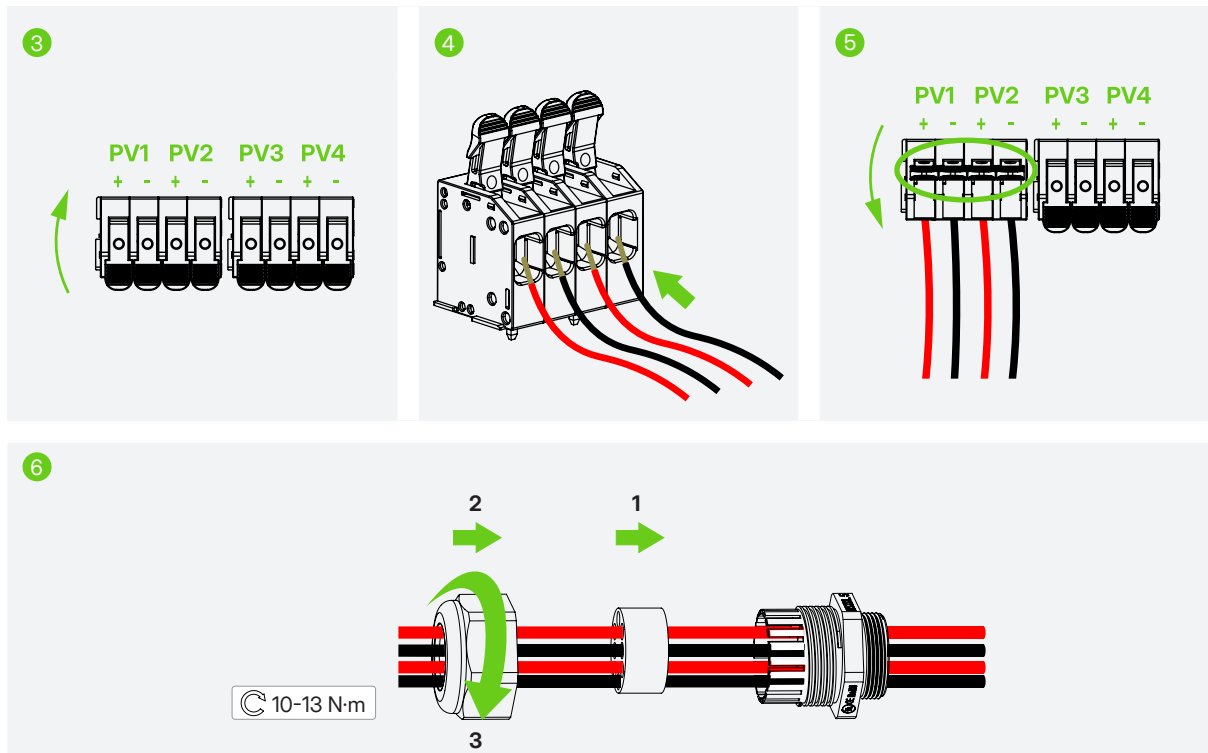

## 8.7 (Optional) Battery Parallel Connection


If the second battery tower needs to be installed, use the provided cable to connect the second battery tower to the inverter.

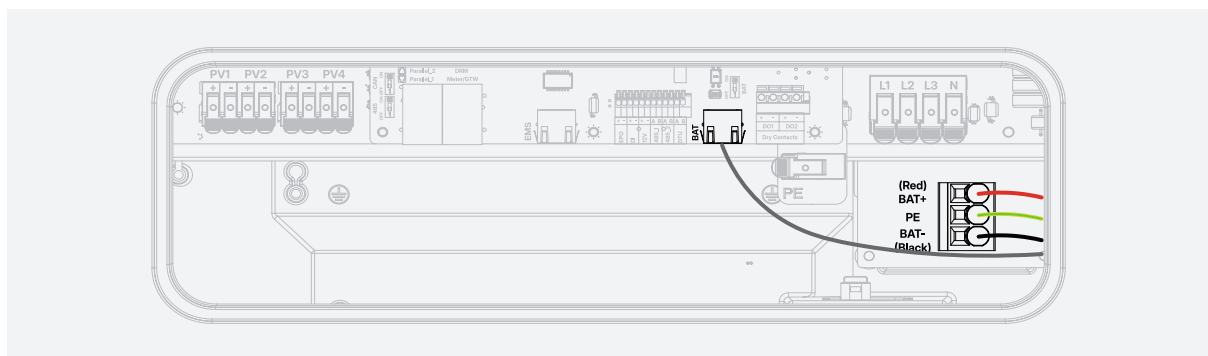



**Step 1** Follow the instructions in [7 Installation Steps](#) to install the second battery tower, and install the five stepped screws on the top of the second battery tower.


**Step 2** Remove the cover on the right side of the inverter.

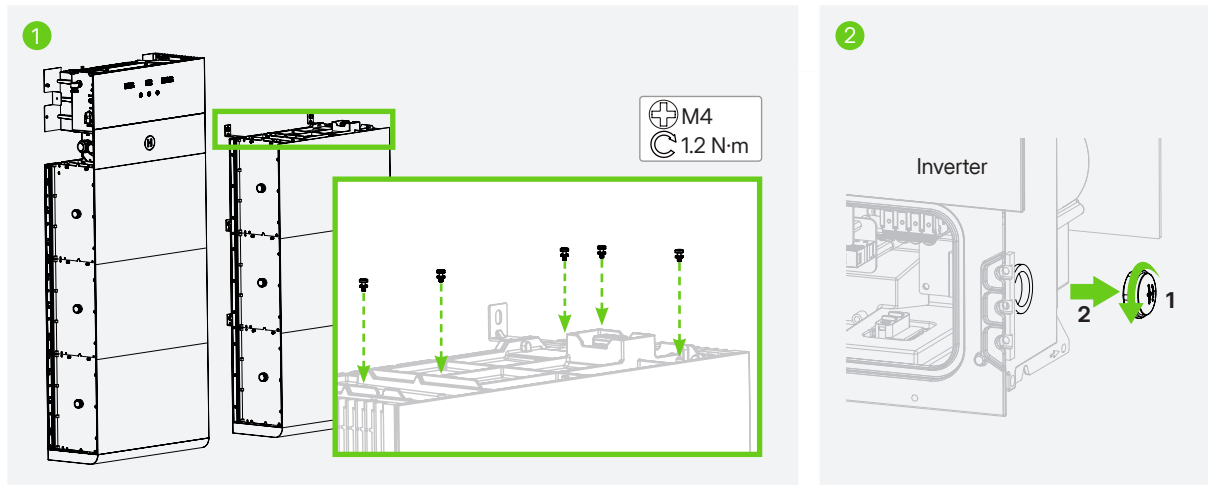

**Step 3** Thread the battery cable through the battery cable entry, and tighten the cable gland.

**Step 4** Insert the positive wire, negative wire, PE wire, and communication wire into corresponding terminals.


**Step 5** Cut off a piece of the decorative cover.

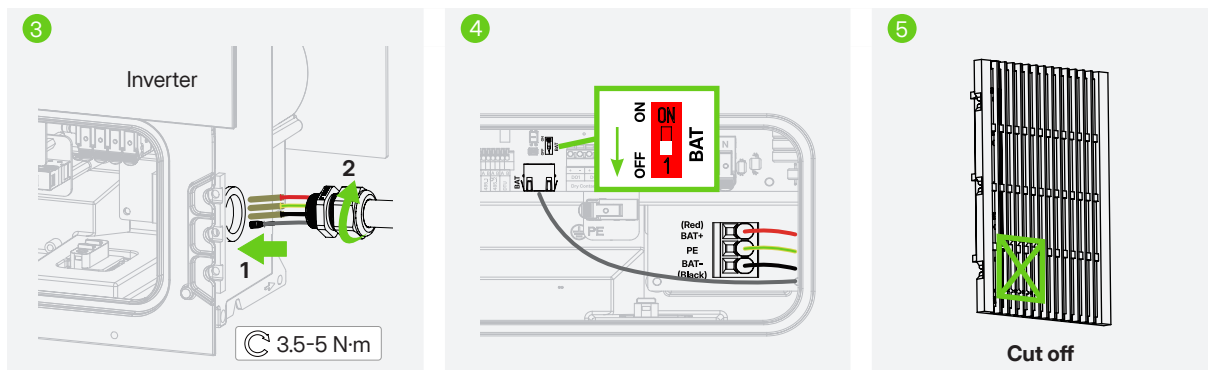


**Step 6** Install the decorative cover on the inverter.

**Step 7** Loosen but do not remove the screw on the battery cable.

**Step 8** Insert the quick connector end of the battery cable into the connector on the top of the second battery tower.

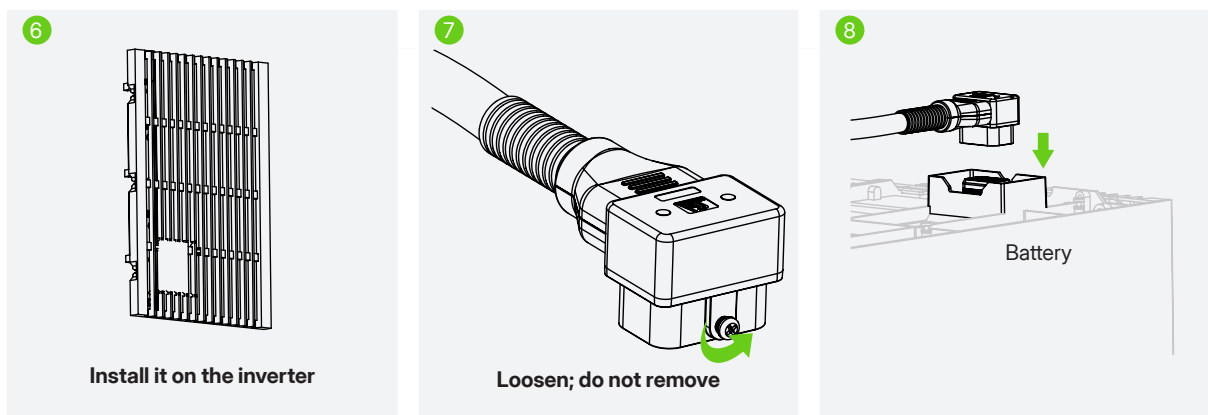

- Step 9 Tighten the screw on the battery cable.
- Step 10 Install the top cover.

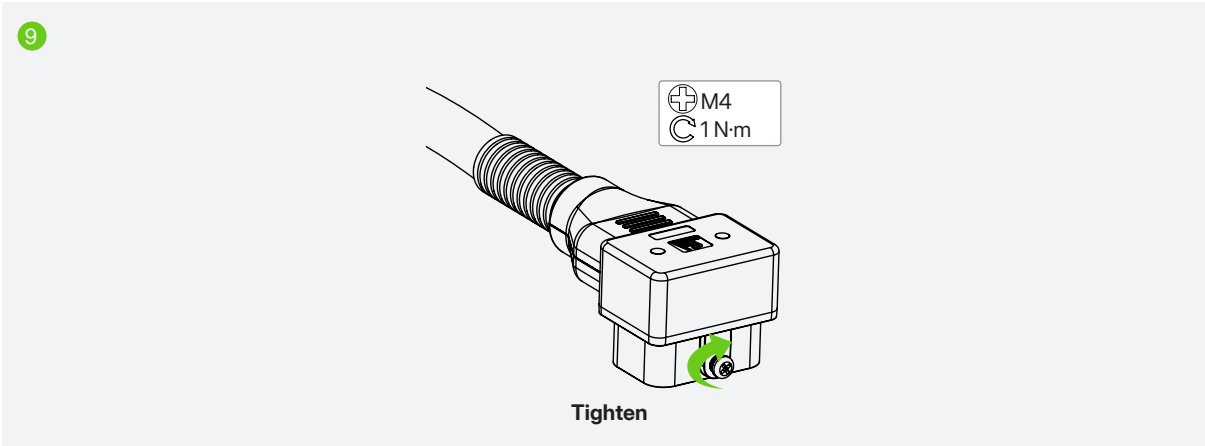

NOTE

ON  
OFF  
BAT

Ensure that this termination resistor is "OFF".

8.8 Communication Cable Connection (COM1)

The HiOne system includes one standard communication cable for connecting to the Meter/GTW port. If you need to connect additional devices to COM1, prepare communication cables that meet the recommended cable specifications.

| Cable | Recommended Specification (mm <sup>2</sup> ) |
|-------|----------------------------------------------|
|       | HiOne-8/10/12/16/20T-G3                      |
| COM1  | Standard CAT 5E/CAT 6 Ethernet Cable         |

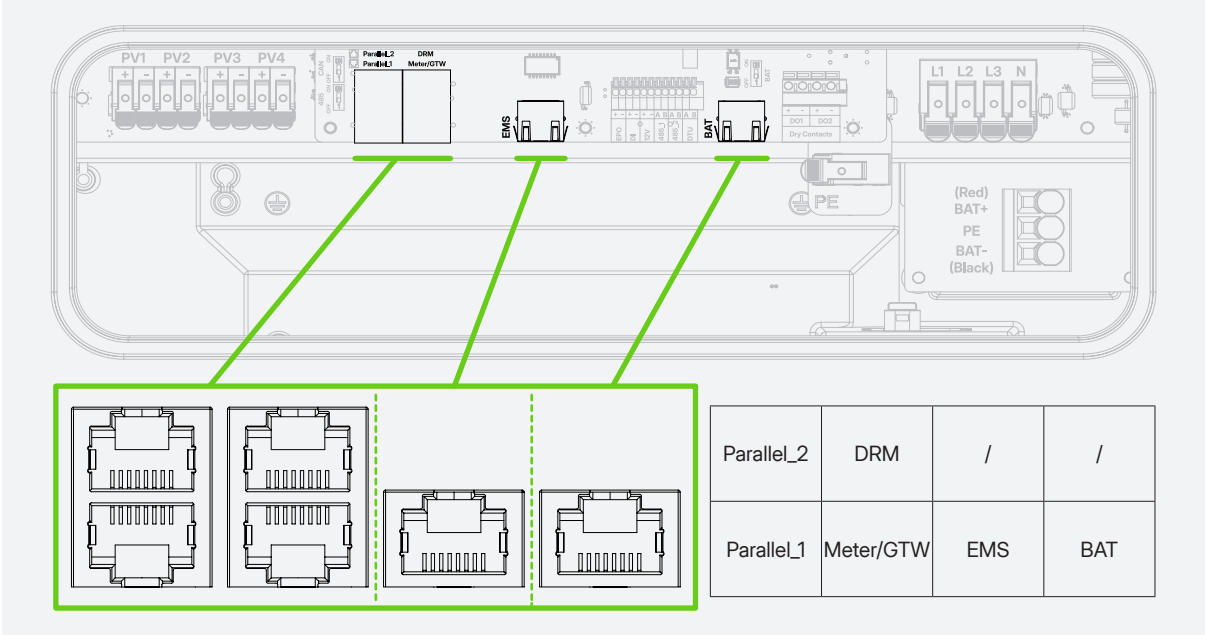


Figure 8-2 COM1 Overview

| Terminal   | PIN | Definition |           |        |            |            |      |            |            |
|------------|-----|------------|-----------|--------|------------|------------|------|------------|------------|
|            |     | 1          | 2         | 3      | 4          | 5          | 6    | 7          | 8          |
| Parallel_2 |     | NC         | GND       | CANH   | Psync-485A | Psync-485B | CANL | 485B       | 485A       |
| Parallel_1 |     | NC         | GND       | CANH   | Psync-485A | Psync-485B | CANL | 485B       | 485A       |
| DRM        |     | DRM1/5     | DRM2/6    | DRM3/7 | DRM4/8     | REF        | COM  | NC         | NC         |
| Meter/GTW  |     | CANH       | CANL      | GND    | 485A       | 485B       | GND  | +12V1A_OUT | +12V1A_OUT |
| EMS        |     | RX_P       | RX_N      | TX_P   | NC         | NC         | TX_N | NC         | NC         |
| BAT        |     | Button 2+  | Button 2- | NC     | NC         | +12V       | GND  | CANL       | CANH       |

**NOTE**

If the batteries are stacked in one battery tower, ensure that this termination resistor is "ON".



Taking **meter connection** as an example:


**Step 1** Unscrew the cable gland, and remove the rubber plugs.

**Step 2** Thread the cable through the communication cable entry at the left side of the inverter. Insert the RJ45 plug into the corresponding terminal until it clicks into place

**Step 3** Tighten the cable gland with a torque of 6.75 N·m to 7.5 N·m.

**NOTE**

- To ensure sealing performance, remove the rubber plugs based on the actual number of cables.
- If the wiring is incorrect, the system will work abnormally. Reconnect cables according to the PIN definition described above.

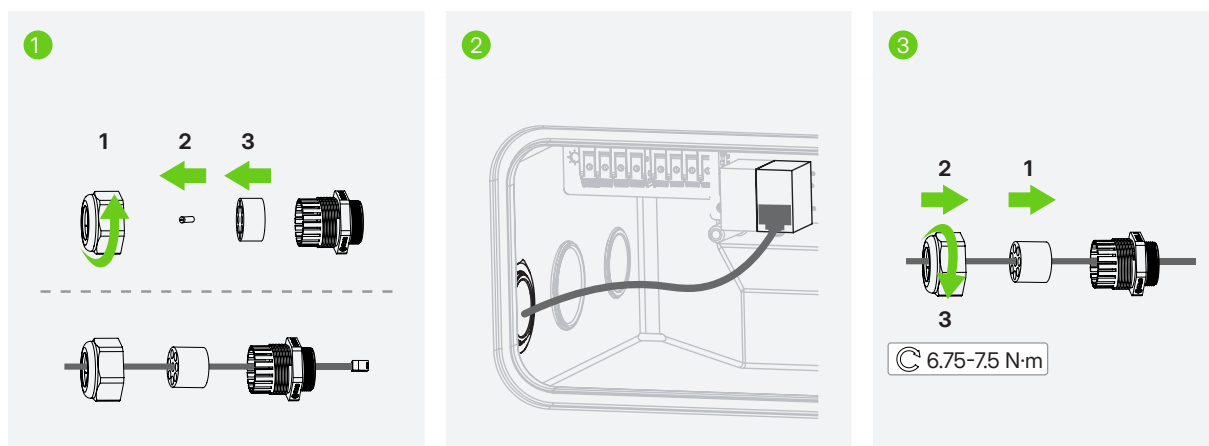

## 8.8.1 Smart Meter and CT Connection

The smart meter and CTs in the delivery package are necessary for the system installation and are used to provide the operating condition of the inverter via RS485 communication.

### ⚠ WARNING

Before connecting the smart meter and CT, ensure that the AC cables are totally isolated from the AC power source.

### NOTICE

- One smart meter can be used with only one inverter.
- All CTs must be used for one smart meter and should be connected on the same phase as the smart meter power cable.
- There is an arrow or label on the surface of CTs that indicates the correct mechanical orientation of the CT on the conductor under measurement. Please identify the arrow or label before installing the CT.

### NOTE

- This series inverter comes with Meter-1T-G3 or Meter-1T-G3 (2 CT Port) as standard.
- To install an AC coupled system, refer to [Appendix 1: Application of AC Coupled System](#).

**Step 1** Respectively connect the meter's terminals L1, L2, L3, and N to Grid L1, L2, L3, and N.

**Step 2** Respectively clamp the three CTs onto Grid L1, L2, and L3. Ensure the arrow on each CT points to the grid.

**Step 3** Connect the CTs to the meter's CT1 terminal.

**Step 4** Use a standard Ethernet cable to connect the meter's RS485 terminal and the inverter's meter terminal.

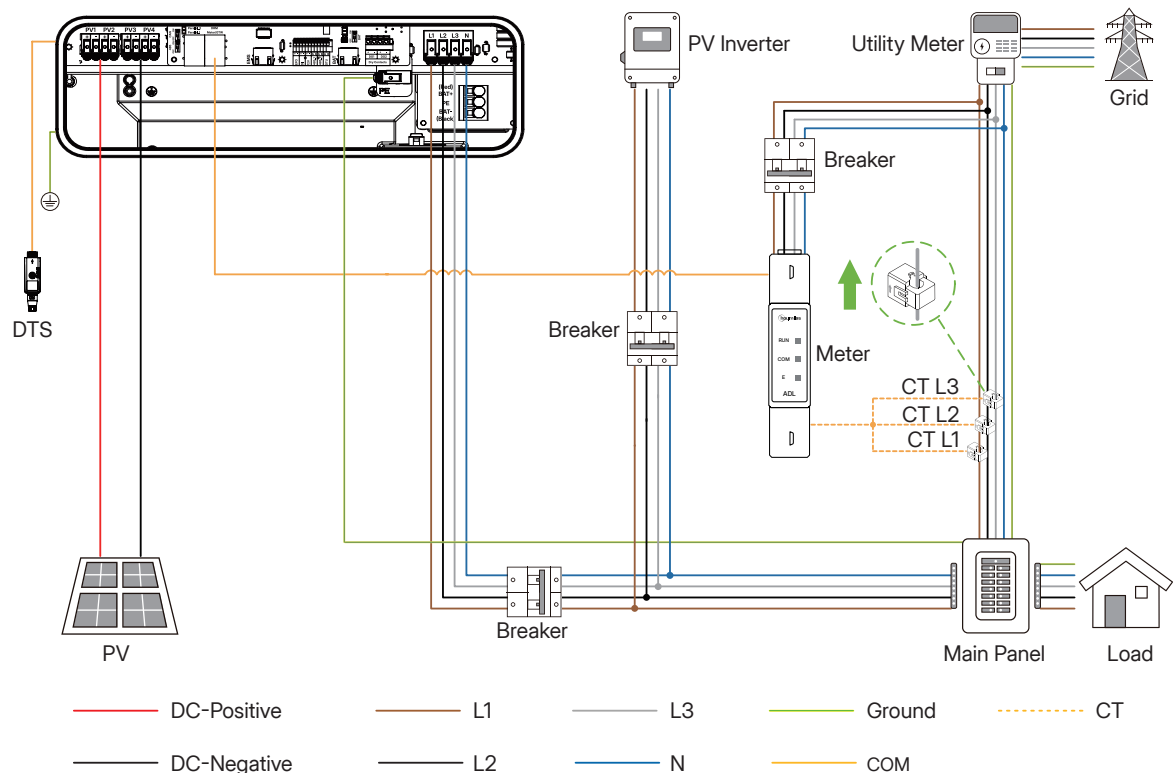


Figure 8-3 Smart Meter and CT Connection

## 8.8.2 DRM Connection

The DRM function is designed to support several demand response modes by certain control signals.

### For Australia and New Zealand

According to AS/NZS 4777.2, the inverter needs to support the function of demand response mode (DRM). With the use of an external control box, active or reactive power regulation can be realized in a timely and fast manner, and the inverter can work stably during the process of regulation.

#### Demand Response Modes

| Function | Description                                                                          |
|----------|--------------------------------------------------------------------------------------|
| DRM0     | Operate the disconnection device                                                     |
| DRM1     | Do not consume power                                                                 |
| DRM2     | Do not consume at more than 50% of rated power                                       |
| DRM3     | Do not consume at more than 75% of rated power AND supply reactive power if capable  |
| DRM4     | Increase power consumption (subject to constraints from other active DRMs)           |
| DRM5     | Do not generate power                                                                |
| DRM6     | Do not generate at more than 50% of rated power                                      |
| DRM7     | Do not generate at more than 75% of rated power AND absorb reactive power if capable |
| DRM8     | Increase power generation (subject to constraints from other active DRMs)            |

#### DRED Connection Circuit

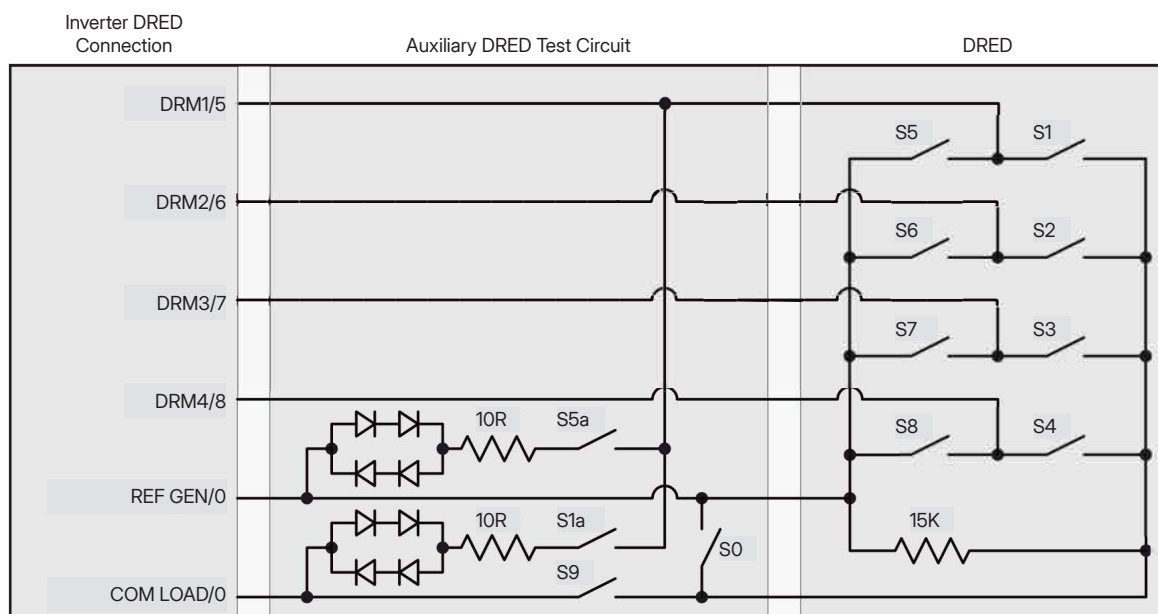


Figure 8-4 DRED Connection

#### App Configuration

On the S-Miles Installer App, enable the DRM function and set the DRM control mode according to the actual installation. For detailed instructions, refer to [10.3.2 Enable DRM Function](#).

For Germany

The HiOne series operates in accordance with German regulations §14a EnWG and §9 EEG. It can be connected via its communication port to an external control box approved by the grid operator.

Connection Circuit

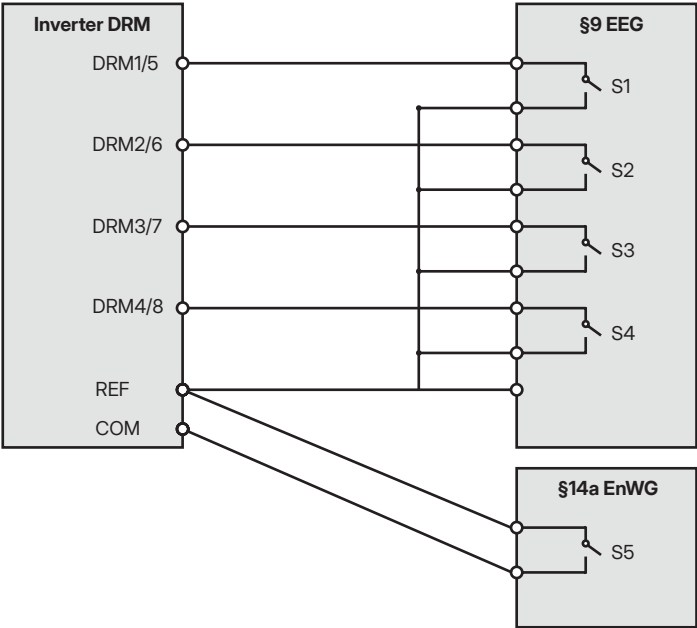


Figure 8-5 External Control Box Connection

| S1 | S2 | S3 | S4 | §9 EEG<br>Operation | Power Exported to the Grid |
|----|----|----|----|---------------------|----------------------------|
| 0  | 0  | 0  | 0  | None                | 100% (Unlimited)           |
| 1  | 0  | 0  | 0  | Close S1            | 100%                       |
| 0  | 1  | 0  | 0  | Close S2            | 60%                        |
| 0  | 0  | 1  | 0  | Close S3            | 30%                        |
| 0  | 0  | 0  | 1  | Close S4            | 0                          |

| S5 | §14a EnWG<br>Operation | Power Imported from the Grid |
|----|------------------------|------------------------------|
| 0  | None                   | 100% (Unlimited)             |
| 1  | Close S5               | < 4.2 kW                     |

App Configuration

On the S-Miles Installer App, enable the DRM function and set the DRM control mode according to the actual installation. For detailed instructions, refer to [10.3.2 Enable DRM Function](#).

For Austria

An external contactor should be connected to DRM4/8 and REF. Select a NO contactor or a NC contactor as required.

Connection Circuit

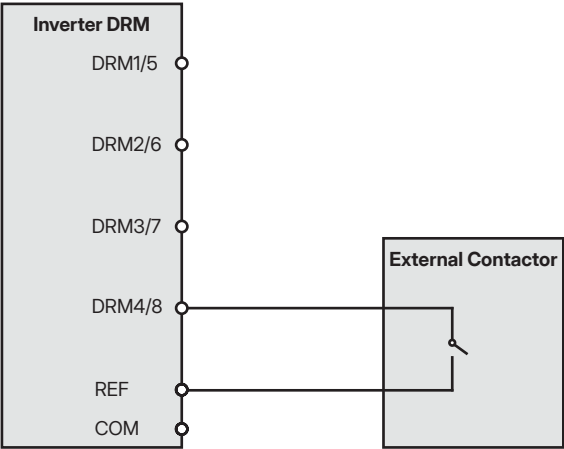


Figure 8-6 External Contactor Connection

App Configuration

On the S-Miles Installer App, enable the DRM function and set the DRM control mode according to the actual installation. For detailed instructions, refer to [10.3.2 Enable DRM Function](#).

8.9 Communication Cable Connection (COM2)

| Cable | Recommended Specification (mm²) | Stripping Length (mm)   |
|-------|---------------------------------|-------------------------|
|       | HiOne-8/10/12/16/20T-G3         | HiOne-8/10/12/16/20T-G3 |
| COM2  | 0.5-0.8                         | 11                      |

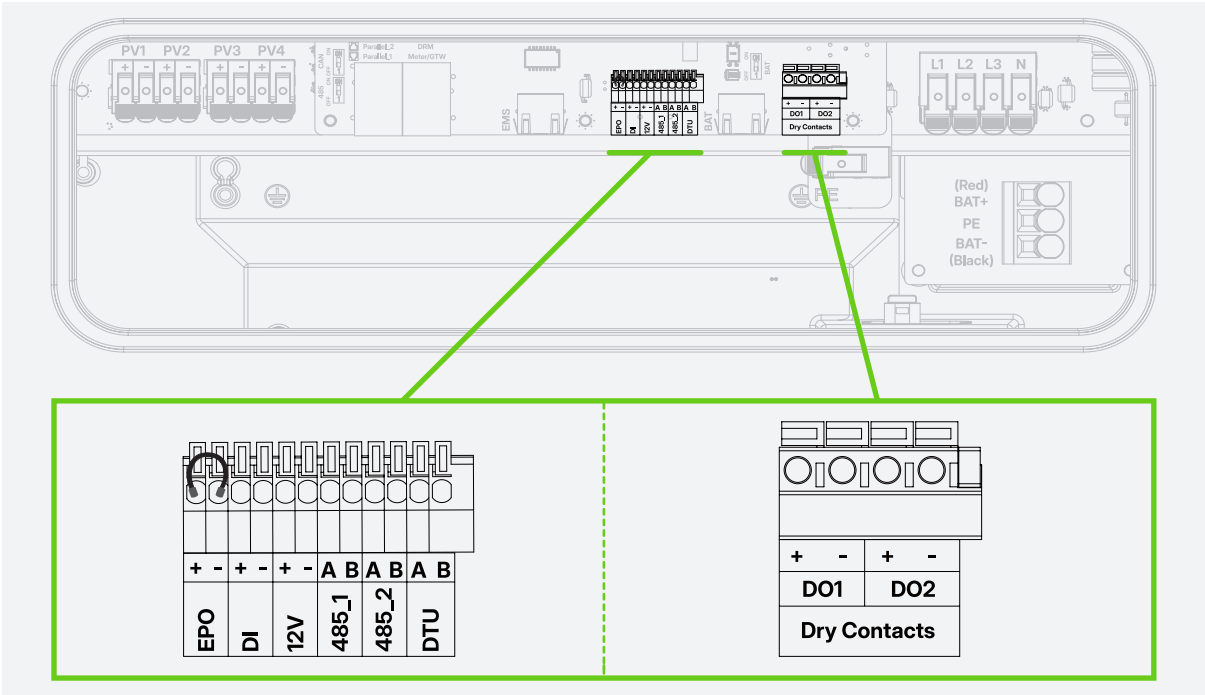


Figure 8-7 COM2 Overview

| Label           | Definition                                                               |
|-----------------|--------------------------------------------------------------------------|
| EPO             | For external Emergency Power Off switch.                                 |
| DI              | Reserved dry contact input.                                              |
| 12V             | 12V/1A output.<br>For heat pump control by connecting an external relay. |
| 485_1           | For EV charger control.                                                  |
| 485_2           | For third-party device control and EMS communication.                    |
| DTU             | For DTU communication.                                                   |
| DO1 (NO1, COM1) | Dry contact output.<br>For SG Ready heat pump control.                   |
| DO2 (NO2, COM2) | Reserved dry contact output.                                             |

Taking **DO1 connection** as an example:


**Step 1** Strip the insulation of the communication cable by 11 mm.

**Step 2** Unscrew the cable gland and remove the rubber plugs.

**NOTE**


To ensure sealing performance, remove the rubber plugs based on the actual number of cables.

**Step 3** Thread the cable through the communication cable entry on the left side of the inverter.

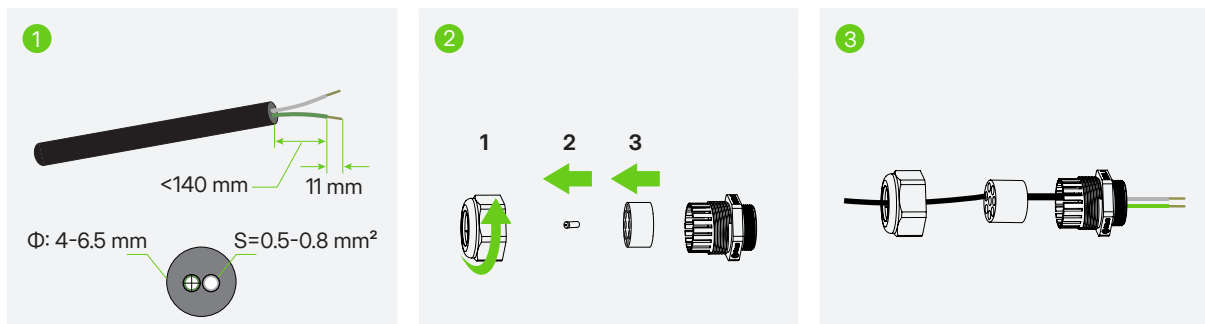

**Step 4** Connect the cable.

- Insert a screwdriver to press down the leaf spring.
- Insert the wires into the corresponding terminals, and remove the screwdriver.
- Gently pull the wires backward to ensure that they are firmly connected, and tighten the cable gland with a torque of 6.75 N·m to 7.5 N·m.

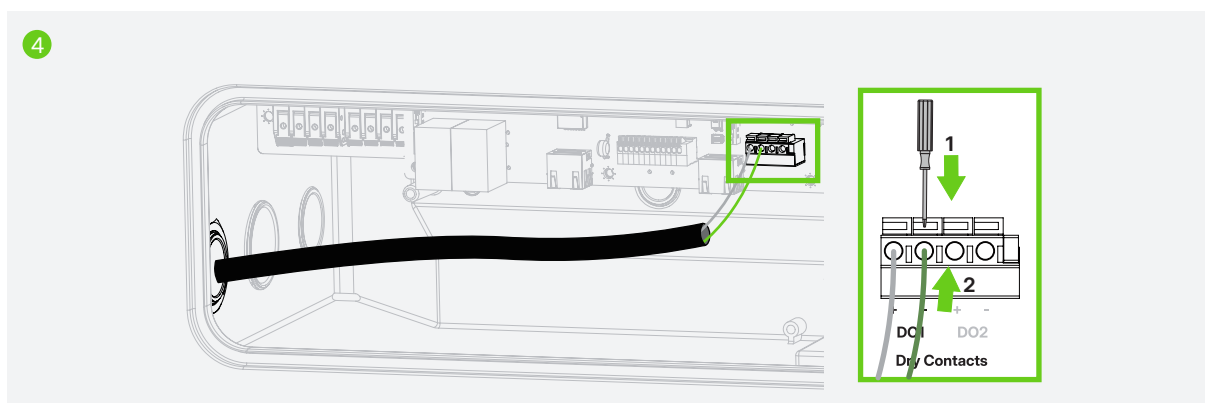




## 8.10 Installing the Wiring Box Cover

**Step 1** Put back the wiring box cover.

**Step 2** Insert the screws into the screw holes, and tighten the screws.

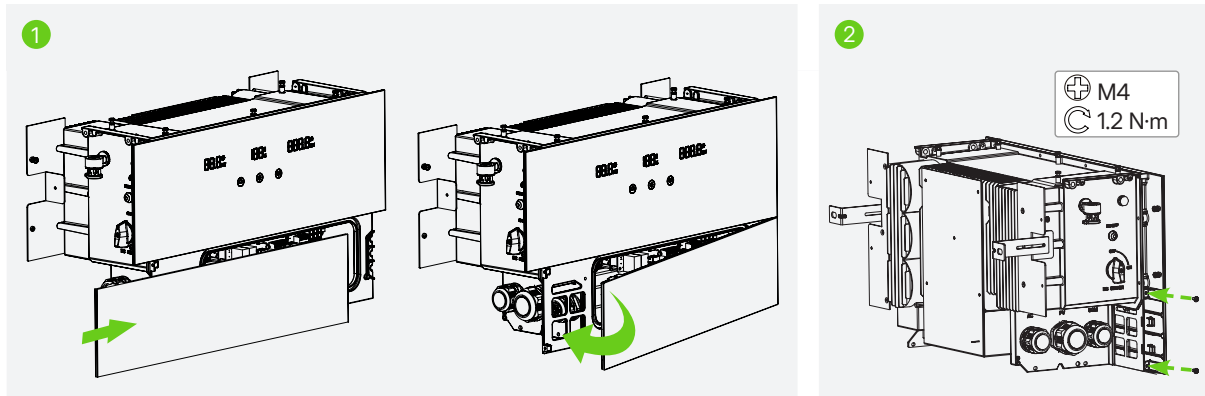


## 8.11 Installing the Data Transfer Stick (DTS)

### 8.11.1 DTS-WL-G3 (Wi-Fi Mode)

**Step 1** Remove the cover of the DTS terminal.


**Step 2** Insert the DTS into the DTS terminal. There will be a "Click" sound when it is plugged in correctly.

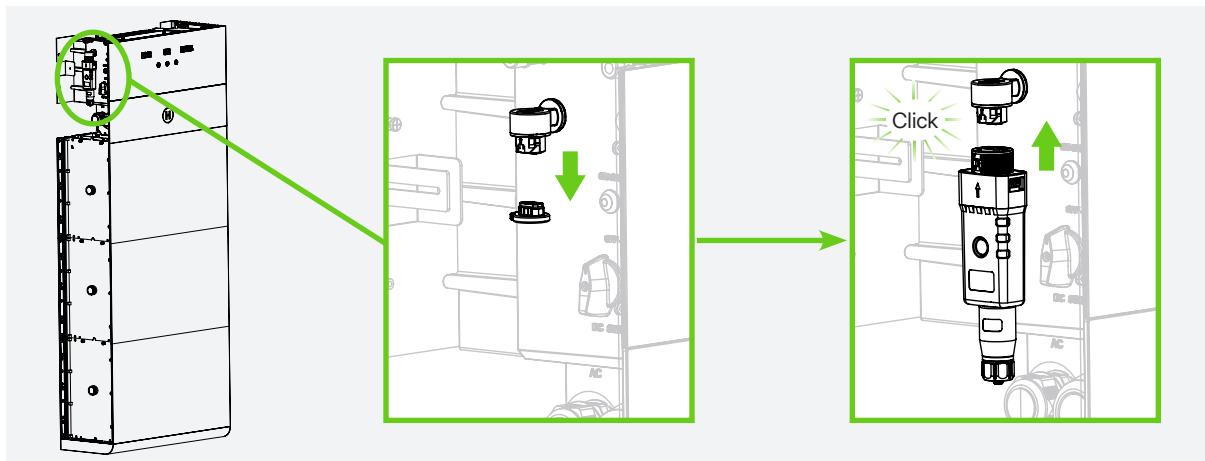


### 8.11.2 DTS-WL-G3 (LAN Mode)

**Step 1** Disassemble the DTS in sequence.

**Step 2** Thread the Ethernet cable through the parts and tighten them.

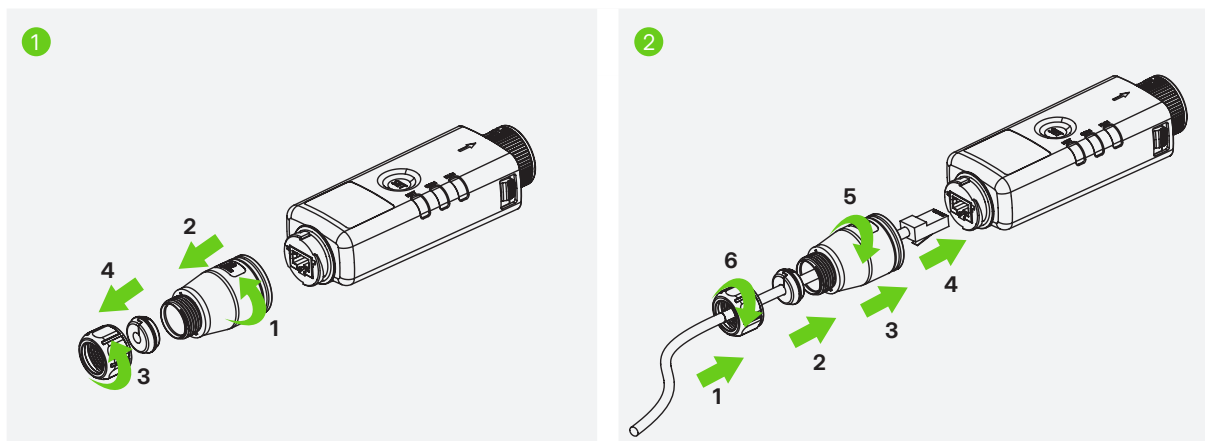


**Step 3** Remove the cover of the DTS terminal, and then insert the DTS into the DTS terminal. There will be a "Click" sound when it is plugged in correctly.

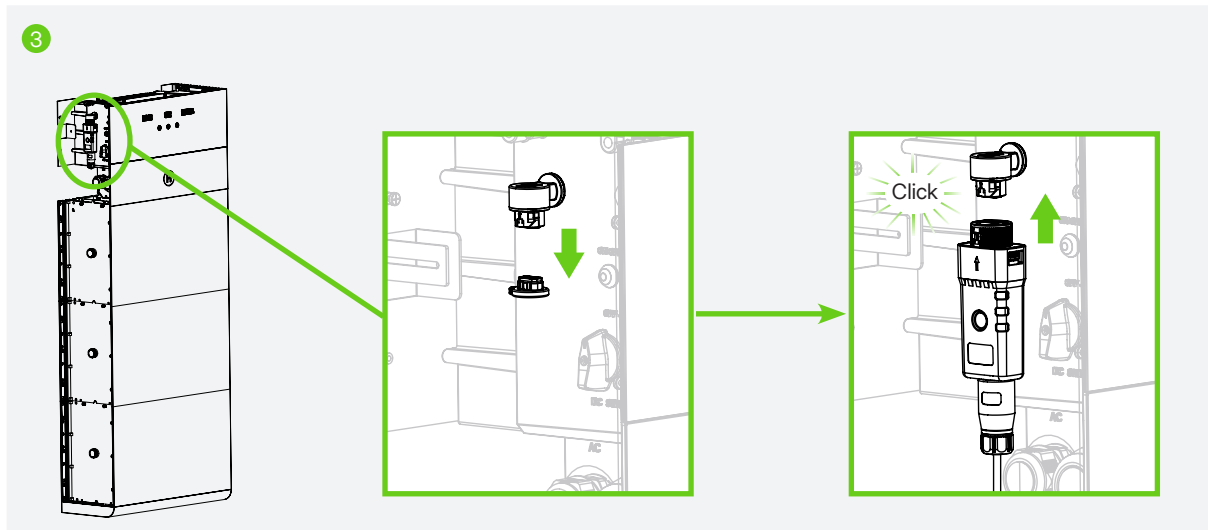

### 8.11.3 DTS-4G-G3 (4G Mode)

**Step 1** Remove the cover of the DTS terminal.

**Step 2** Insert the DTS into the DTS terminal. There will be a "Click" sound when it is plugged in correctly.

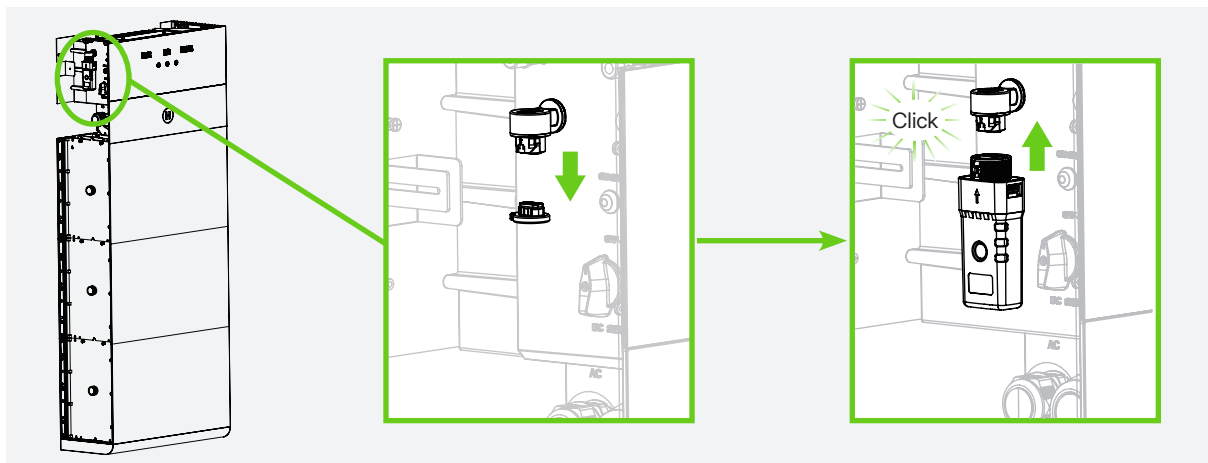

## 9 System Commissioning

### 9.1 Preparation

Before the commissioning of the product, make sure:

- The inverter DC switch and external circuit breaker are disconnected.
- The DIP switch is in the "OFF" State.
- The wiring follows the instructions in [8 Electrical Connection](#).
- The grid voltage is within the permissible range through the multimeter before turning on the AC switch.
- The rubber plugs in the unused terminals are not removed.
- Nothing is left on the top of the product.
- Cables are routed in a safe place or protected against mechanical damage.
- Warning signs and labels are intact.

### 9.2 System Power-on

**Step 1** Turn on the AC breaker between the inverter and the grid.


**Step 2** If the inverter is connected to the PV strings, rotate the DC switch to the "ON" position.

**Step 3** On the left side of the inverter, press the power button for 4 seconds until the LED indicators light up.

**Step 4** Check the [indicator status](#) to confirm the inverter is operating properly.

**Step 5** Install the decorative covers on both the left and right sides of the inverter.

**Step 6** Install the top cover to complete the installation.

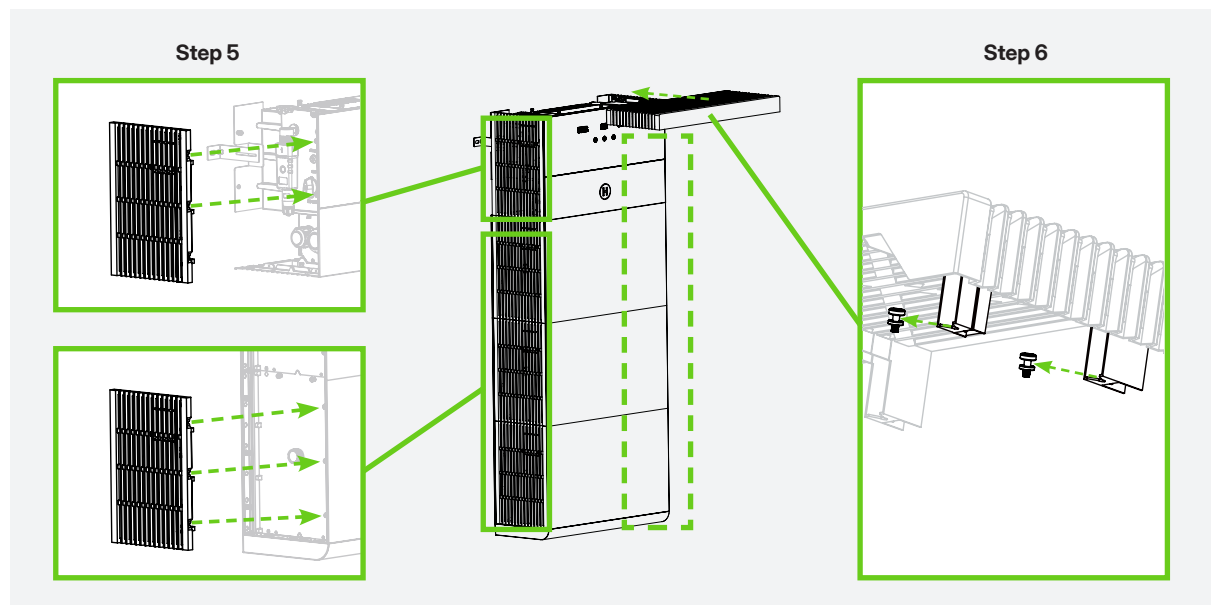

## 10 S-Miles Cloud

The S-Miles App has been developed for Hoymiles and offers the following features.

- Network configuration
- Local installation assistant
- System monitoring



Installer



End-user


Please download the S-Miles App from the Google Play Store or the App Store. The QR code above can also be scanned to download the App.

### NOTE

- Unless otherwise specified, the DTU mentioned in this manual refers to the DTS (Data Transfer Stick).
- In a residential energy storage system, the DTU displayed in the S-Miles Cloud refers to the DTS.
- The screenshots shown in this manual are for reference only. Since the App version will be updated periodically, the interface displayed on your screen may differ.
- For more information about S-Miles App, refer to [S-Miles Cloud User Manual \(App\)](#).

### 10.1 Start Commissioning




**Commissioning** is used to set and test a new residential energy storage system. It is a critical step to ensure that a new device and system can function properly according to the design specifications. During commissioning, you will:

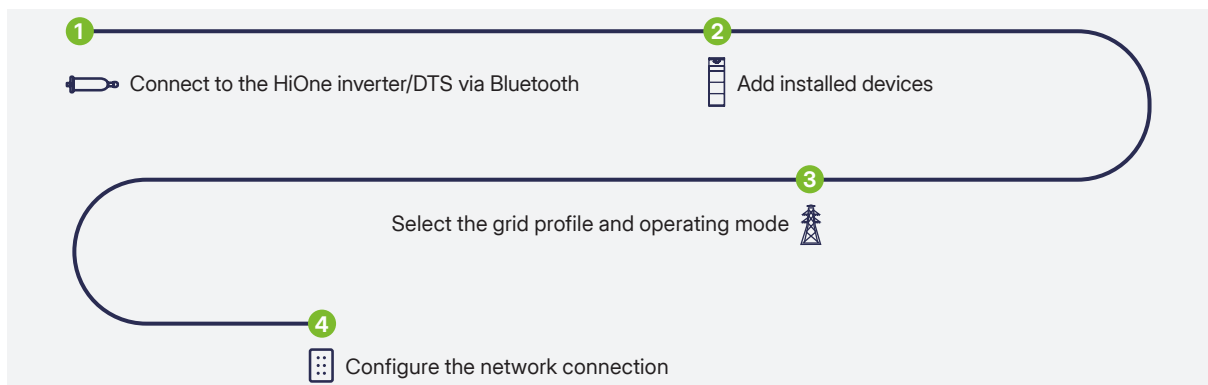

#### Step 1 Pair with the HiOne inverter/DTS

- For DTS software version V03.00.19 and later

- Tap **O&M** > **Toolkit**.
- Under **Via Bluetooth**, tap the HiOne inverter you want to connect.
- Enter the default password **123456**, then tap **Next**. Go to [step 2](#).

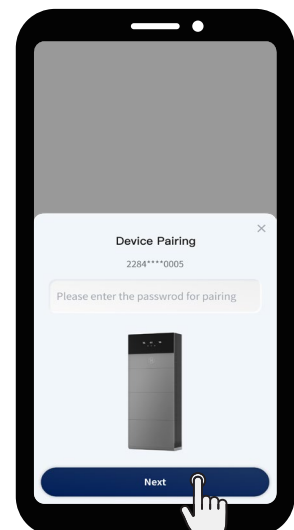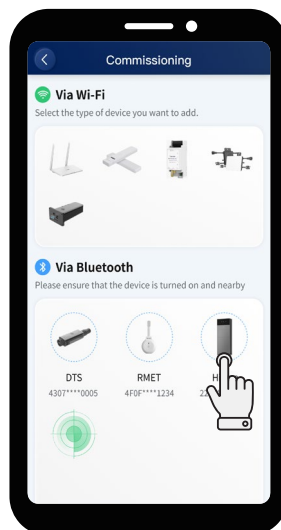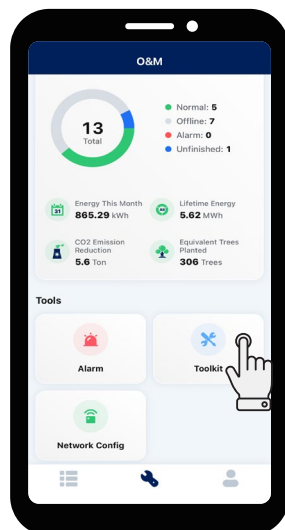


- **For DTS software version earlier than V03.00.19**

A. Tap  **O&M** >  **Toolkit**.

B. Under **Via Bluetooth**, tap the DTS you want to connect.

C. Enter the default password **123456**, then tap **Confirm**.

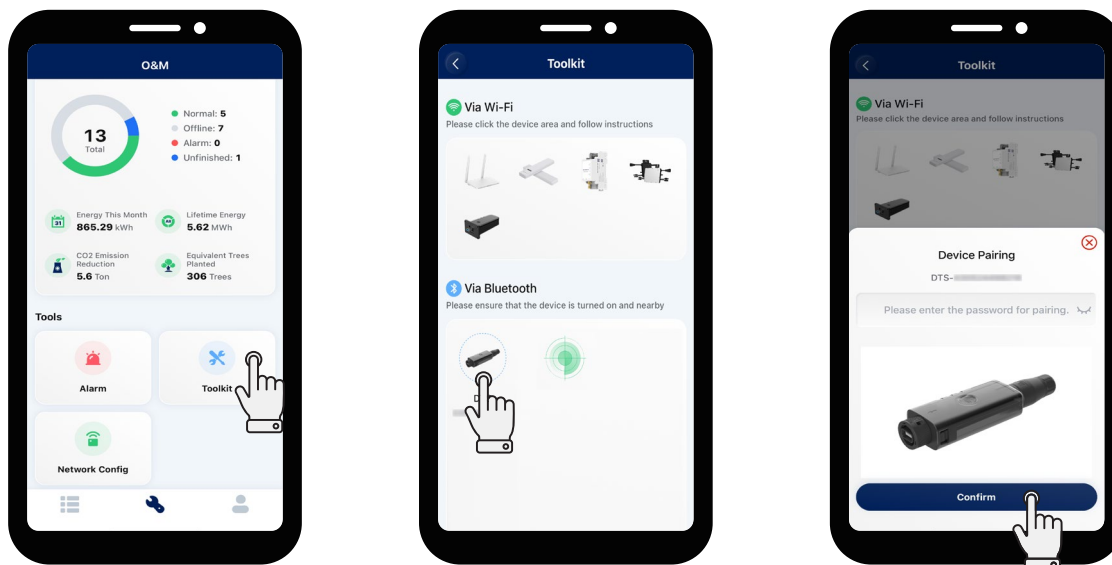


D. Tap **Go to Settings**.

 **NOTE**

Password setup is required only for the first connection.


E. Enter the current password and a new password, confirm the new password, and tap **Send to DTU**.

F. Tap  **Toolkit** again.

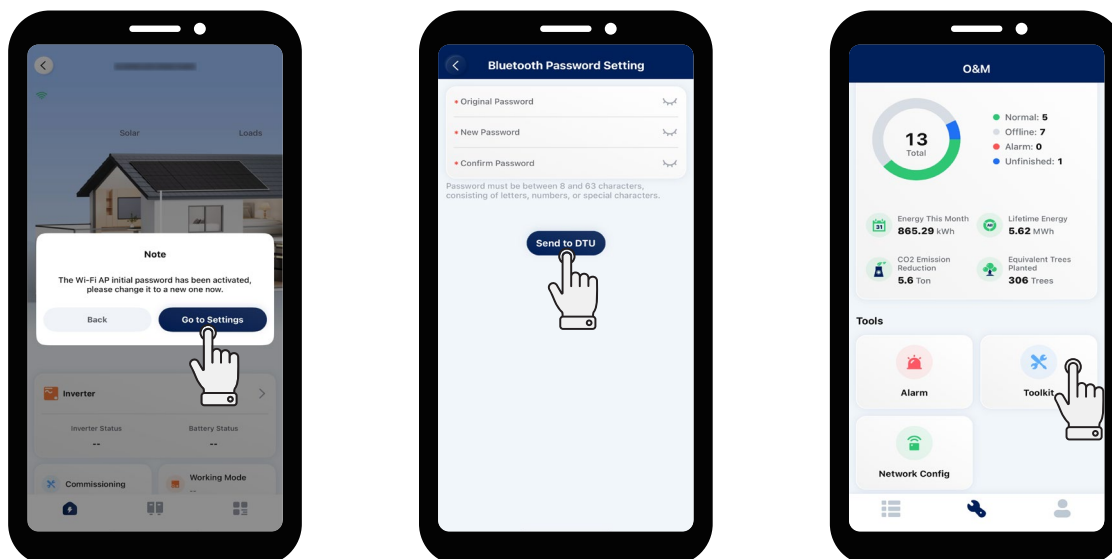

G. Under **Via Bluetooth**, tap the DTS again.


H. Enter the new password and tap **Confirm**.

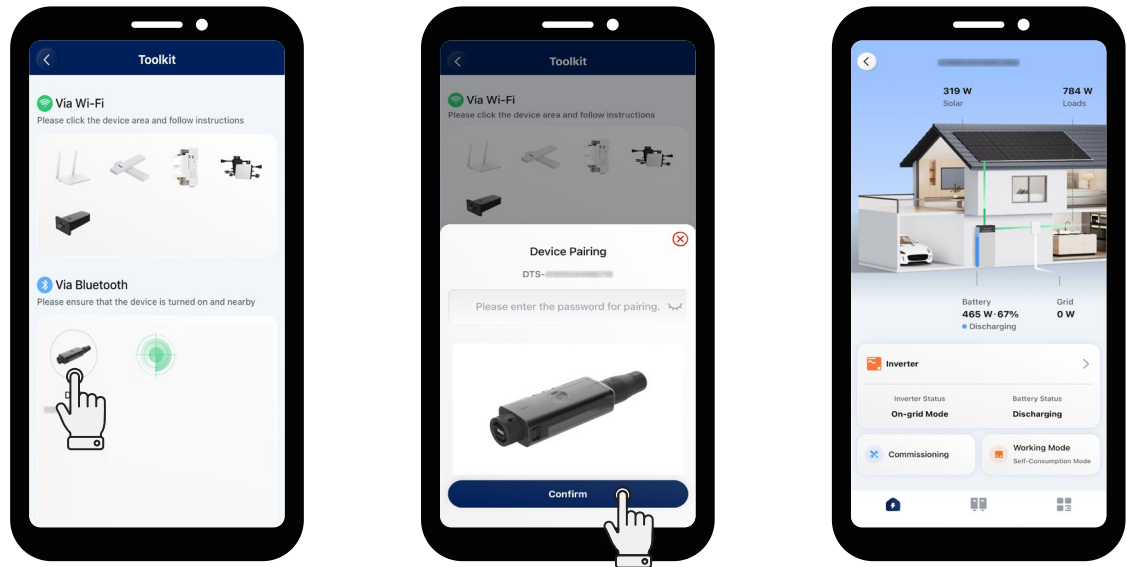

## Step 2 Start Commissioning

A. Tap **Toolkit** > **Commissioning**.

B. Follow the on-screen instructions and add devices based on your actual installation, then tap **Next**.

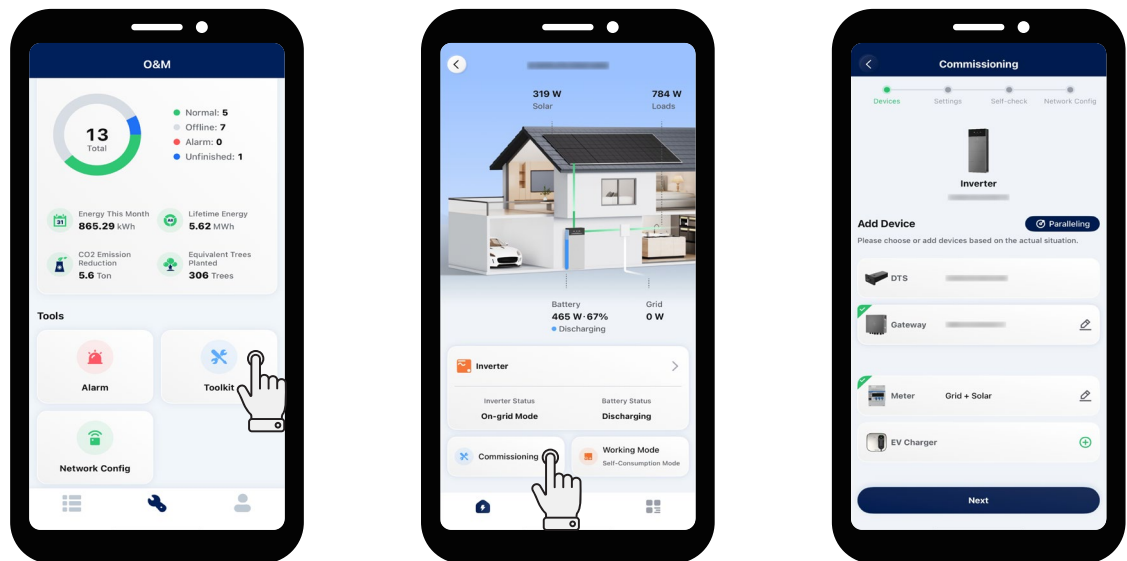

- **Parallel system**

If a parallel system is installed, tap **Paralleling**. All slave inverters will be added automatically.

**NOTE**

- The DTS must be connected to the master inverter.
- Slave inverters must be connected to the master via communication cables.
- One DTS supports communication with up to 10 inverters.



- **Gateway**


If a Hoymiles HiBox Gateway is installed, it will be automatically detected.

When the EPS port is connected, you can select "UPS" for faster switch between the on-grid mode and the off-grid mode. For details, refer to [10.3.1 Set Advanced Parameters](#).



- **Meter**

Tap **Meter**, enable **Meter Settings**, select the meter location according to the installation, and tap **Save**.

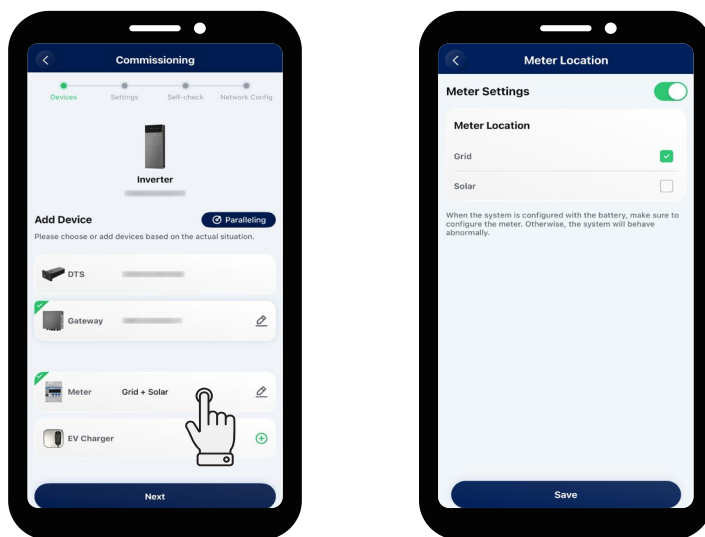


- **P1 Meter**

Refer to [Appendix 1: Application of P1 Meter](#).

- **EV Charger**


If an EV charger is installed, tap **EV Charger**. You can tap **Auto Search** or scan the QR code on the label to identify the serial number (SN), and tap **Save**.

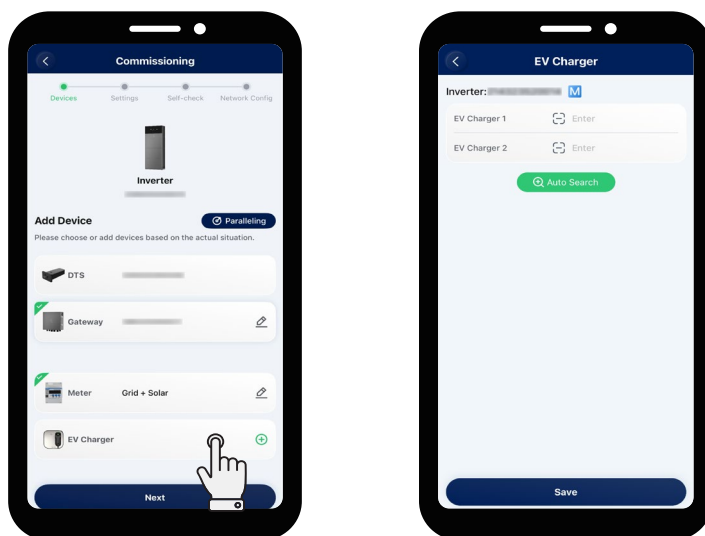



## C. Configure system settings.

- Select the grid profile for your region, then tap **Next**.
- Select the required working mode, then tap **Next**. For details, see [4.4 Working Modes](#).

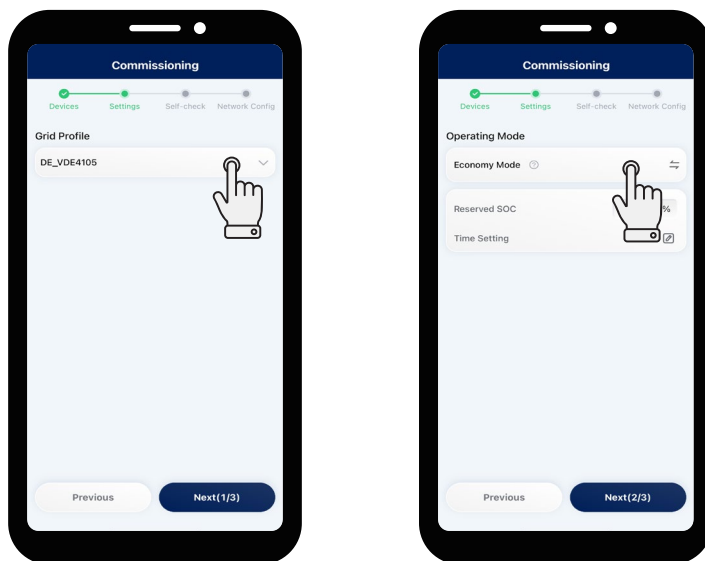D. Tap **Start Testing** for self-check.**NOTE**


- Before this operation, ensure that all DC, AC, and communication cables are correctly connected, and all AC and DC switches are turned on.
- The self-check results are valid only when the system is connected to the grid.
- If the CTs are in the wrong direction, the system will automatically modify the CT direction and phase sequence (figure on the right).

**CT Direction**

Fault Code:  
Incorrect Orientations of all CTs (Modified automatically)

**Troubleshooting Suggestion:**

1. The system has been modified automatically. No need to operate manually.

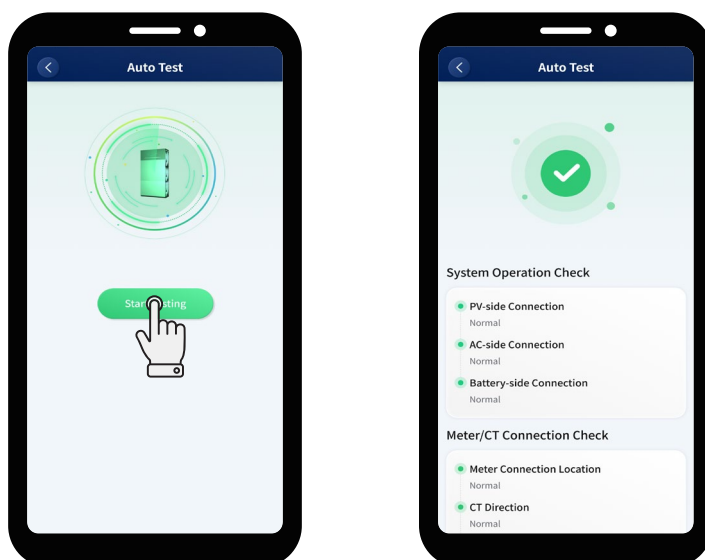

## E. Configure network.


• **Wi-Fi Mode**

- Select **Wi-Fi**, choose or enter the Wi-Fi name, enter the password, and tap **Finish**.
- When the network connects successfully, tap **Finish**.
- When prompted:
  - Tap **Stay at Toolkit** to remain on the Toolkit screen.
  - Tap **Go to Settings** to proceed to:
    - the Create Plant screen (if no plant has been created), or
    - the Plant Home screen (if a plant already exists).

• **LAN Mode**① **NOTE**

LAN mode applies only to DTS-WL-G3 when the DTS is connected to the router via an Ethernet cable.


- Select **Ethernet** and tap **Finish**.
- After the connection is successful, tap **Finish**.
- When prompted:
  - Tap **Stay at Toolkit** to remain on the Toolkit screen.
  - Tap **Go to Settings** to proceed to:
    - the Create Plant screen (if no plant has been created), or
    - the Plant Home screen (if a plant already exists).

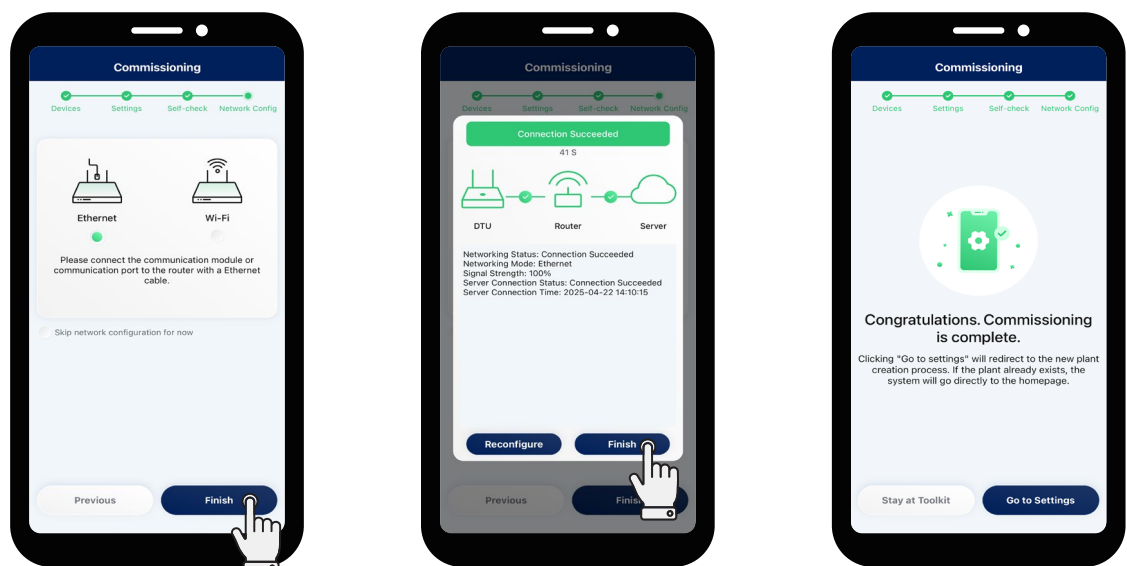

## 10.2 Create a Plant

**Step 1** Tap  in the upper left corner.

**Step 2** Enter the basic information and tap **Next**.

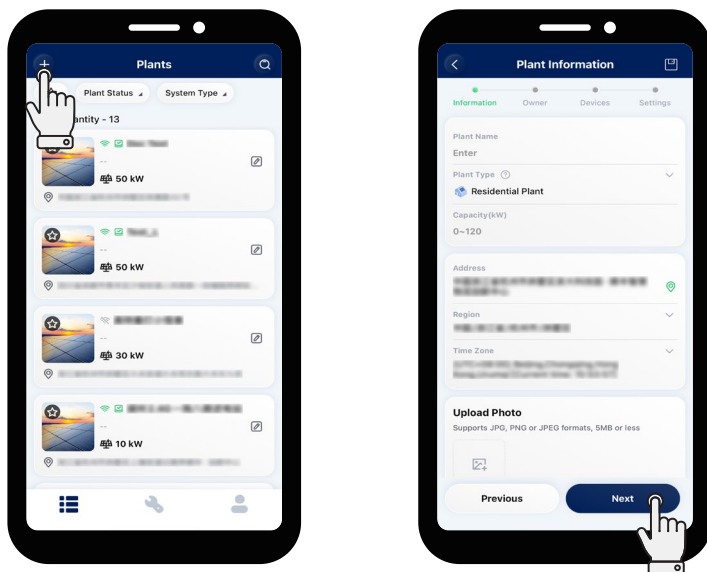

**Step 3** Tap  to create an owner.

### NOTE


If you don't want to create an owner, tap  **Select Owner** to select an existing owner.

**Step 4** Enter the login account, name, and password, confirm the password, enter Email and phone number as required, and tap **Save**.

### NOTE

It is recommended to enter an email address to help the owners reset the password when they forget it.


**Step 5** Tap **Next**.

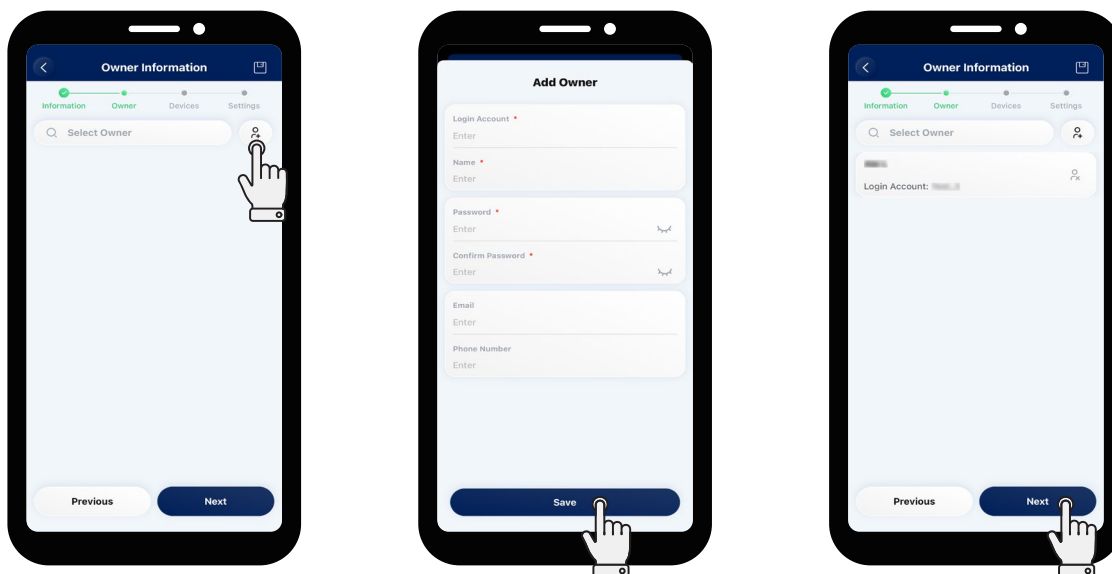

**Step 6** Tap  in the lower right.

**Step 7** Enter the DTU SN. The energy storage inverter SN will be automatically identified.


**Step 8** Tap **Finish**.

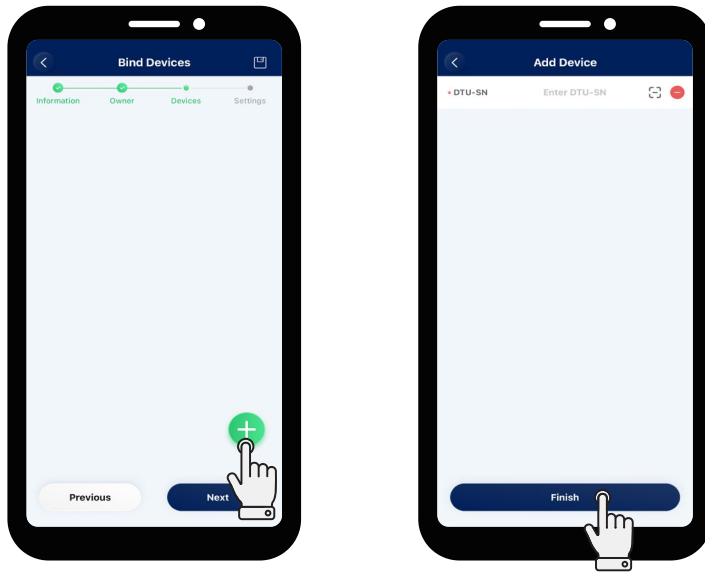

**Step 9** Tap **Next**.

**Step 10** (Optional) Set the currency type and the electricity price per unit (Sell and Buy).

**Step 11** Tap **Finish**.

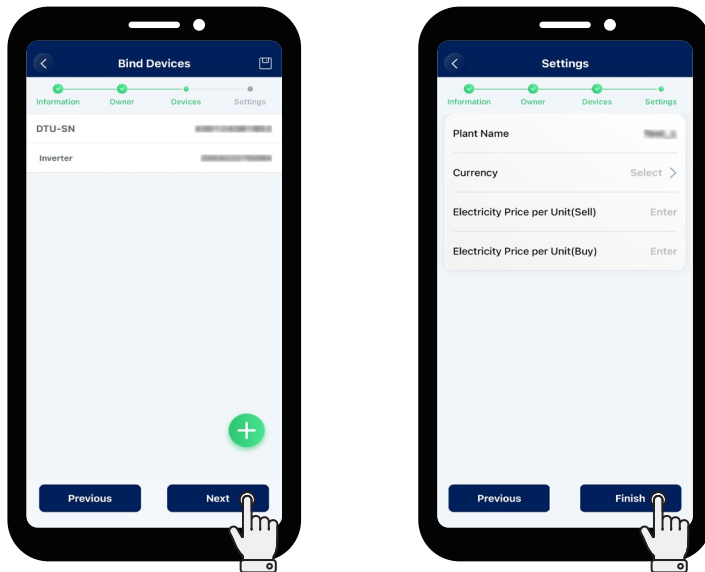


## 10.3 Perform System Settings

### 10.3.1 Set Advanced Parameters

**Step 1** Tap O&M > Toolkit, and tap in the lower right corner.

**Step 2** Tap **Advanced Settings** to set parameters of System, Battery, PV, Emergency Power Supply (EPS), and Generator, and tap **Save**.

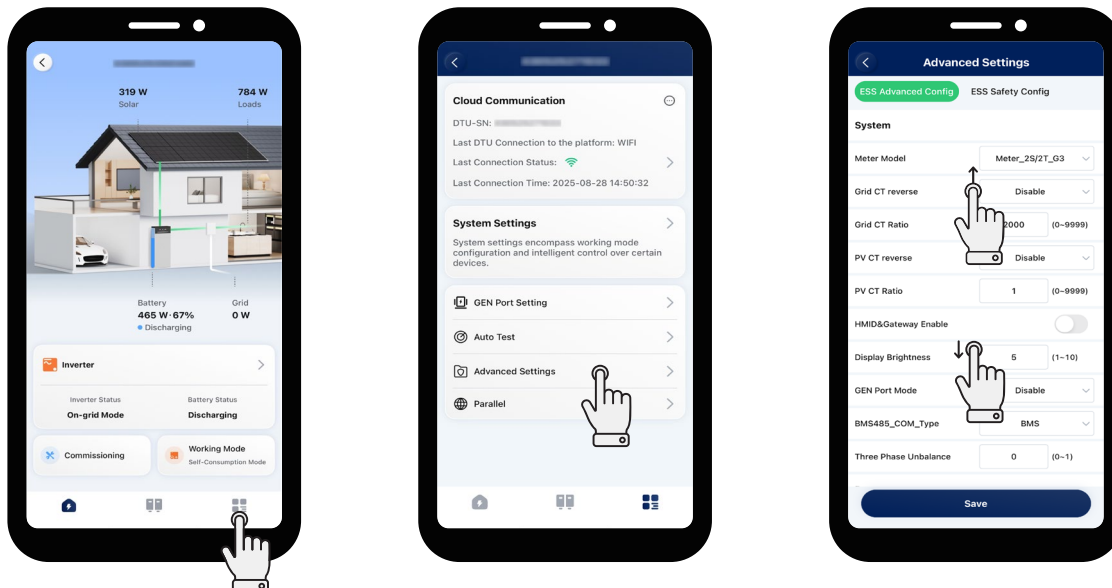

#### ★ System

| Parameter          | Description                                                                                                                                                                                                                                                                                                                                                                       | Default Value |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| Meter Model        | <ul style="list-style-type: none"> <li>For a single-phase inverter, select "Single-phase Meter", "Three-phase Meter", "Meter_1S/1T_G3", "Meter_2S/2T_G3", or "CT (Only G3)" according to actual installation.</li> <li>For a three-phase inverter, select "Three-phase Meter", "Meter_1S/1T_G3", "Meter_2S/2T_G3", or "CT (Only G3)" according to actual installation.</li> </ul> | No Meter      |
| Grid CT Reverse    | Enable it to get correct sampling current when the grid side CT is reversely connected.                                                                                                                                                                                                                                                                                           | Disable       |
| Grid CT Ratio      | Set the grid side CT ratio.                                                                                                                                                                                                                                                                                                                                                       | 2000          |
| PV CT Reverse      | Enable it to get correct sampling current when the PV inverter side CT is reversely connected.                                                                                                                                                                                                                                                                                    | Disable       |
| PV CT Ratio        | Set the PV inverter side CT ratio.                                                                                                                                                                                                                                                                                                                                                | 2000          |
| HMD&Gateway Enable | Manually enable or disable the HMD or HiBox Gateway                                                                                                                                                                                                                                                                                                                               | Disable       |
| Display Brightness | Set the brightness of LED indicators.                                                                                                                                                                                                                                                                                                                                             | 10            |
| GEN Port Mode      | Select "PV", "Generator", or "Smart Load (Only G3)" based on the actual installation.                                                                                                                                                                                                                                                                                             | Disable       |
| BMS485_COM_Type    | <ul style="list-style-type: none"> <li>If the RS485 port is connected to the battery, please select "BMS".</li> <li>If the RS485 port is connected to the microinverter DTU, please select "DTU Com".</li> </ul>                                                                                                                                                                  | BMS           |

|                       |                                                                                                                                          |   |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------|---|
| Three-phase Unbalance | When the loads of the three-phase inverter are not balanced, enable the three-phase unbalance function. It can compensate for each load. | 0 |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------|---|

## ★ Battery

| Parameter                                       | Description                                                                                        | Default Value |
|-------------------------------------------------|----------------------------------------------------------------------------------------------------|---------------|
| Max. Discharging Power                          | Set the maximum discharging power.                                                                 | 100%          |
| Max. Charging Power                             | Set the maximum charging power.                                                                    | 100%          |
| Max. SOC                                        | Set the maximum battery capacity as recommended by the battery manufacturer.                       | 100%          |
| Min. SOC                                        | Set the minimum battery capacity as recommended by the battery manufacturer.                       | 10%           |
| Min. SOC Force Charging Power                   | Set the power to forcibly charge the battery when the battery SOC falls below the set minimum SOC. | 200 W         |
| Reserved SOC Force Charging Power               | Set the power to charge the battery when the battery SOC falls below reserved SOC.                 | 2%            |
| Max. BAT Feed-in Power in Peak Time             | Set the maximum value of battery feed-in power in peak time.                                       | 100%          |
| Max. Grid Charging Power in Off-peak Time       | Set the maximum power to charge the battery from the grid in off-peak time.                        | 0 W           |
| Max. BAT Discharging Power in Partial Peak Time | Set the maximum value of battery discharging power in partial peak time.                           | 100%          |

## ★ PV

| Parameter        | Description                                         | Default Value |
|------------------|-----------------------------------------------------|---------------|
| MPPT Global Scan | If the PV Modules are shaded, enable this function. | Disable       |

## ★ Emergency Power Supply (EPS)

| Parameter | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Default Value |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| EPS Mode  | <ul style="list-style-type: none"> <li>When the EPS port is connected, you can select "EPS" or "UPS". For faster switch between the on-grid mode and the off-grid mode, please select "UPS". <ul style="list-style-type: none"> <li>▷ If "UPS" is selected, the system will directly switch to backup mode when the grid frequency or voltage is beyond normal range.</li> <li>▷ If "EPS" is selected, frequency and voltage ride-through (FVRT) will be initiated when the grid frequency or voltage is beyond normal range. If the frequency or voltage does not recover within the given time, the system will first report a fault and then switch to backup mode. Meanwhile, the loads connected to the Backup port will be shutdown.</li> </ul> </li> <li>When the inverter is used as a PV inverter, select "Disable".</li> </ul> | EPS           |


| Parameter       | Description                                                                                                                                                                               | Default Value |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| External Bypass | For inverters with an external ATS (EPS) Box, when the external bypass switch is enabled, the inverter EPS port works in the off-grid mode and will not work in the on-grid mode.         | Disable       |
| PV Only         | In off-grid mode, the hybrid inverter supports operation with PV when there is no battery connection.<br>(This function is not recommended since the system is unstable under this mode.) | Disable       |

## ★ Generator

| Parameter               | Range                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------------|
| GEN Location            | None/GenSide.<br>Select "GenSide" to ensure the normal operation of the generator.             |
| GEN Signal Setting      | Manual or DI/DO.<br>Select "Manual" if no dry contact; select "DI/DO" if dry contact is wired. |
| Min. Run Time           | 5-60 min                                                                                       |
| Max. Run Time           | 6-10 hour                                                                                      |
| Protection Interval     | 5-60 min                                                                                       |
| Synchronize Time        | 1-20 min                                                                                       |
| Shutdown Delay          | 1-20 min                                                                                       |
| GEN Rated Power         | 0-20000 W                                                                                      |
| High Voltage Limit      | 0-280 V                                                                                        |
| Low Voltage Limit       | 0-180 V                                                                                        |
| High Frequency Limit    | 0-70 Hz                                                                                        |
| Low Frequency Limit     | 0-59 Hz                                                                                        |
| Max. GEN Charging Power | 0-20000 W                                                                                      |

### 10.3.2 Enable DRM Function

- Step 1** Tap  **O&M** >  **Toolkit**, and tap  in the lower right corner.
- Step 2** Tap  **Advanced Settings** > **ESS Safety Config**.
- Step 3** Select the grid profile in your region and toggle on **DRM Function Activated**.
- Step 4** (For some countries) Set the mode of **DRM Control**.
- Step 5** Tap **Save**.

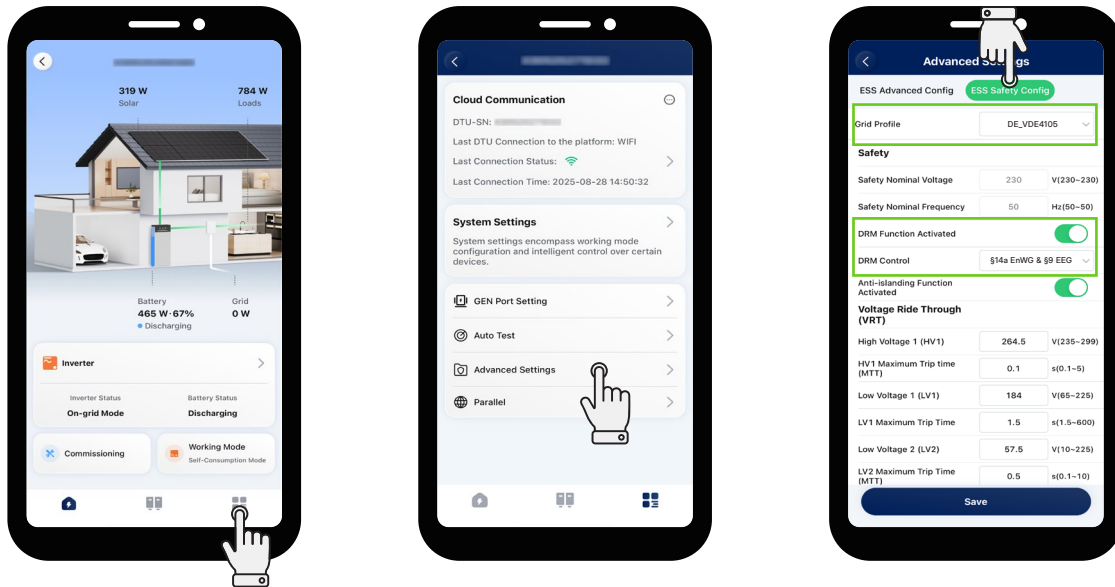

#### **NOTE**

- Only the installer can modify grid protection and power quality response mode parameters.
- The energy storage system must be updated to the latest firmware. To update the firmware, refer to [10.4 Upgrade the Firmware](#).
- Grid Profile and DRM Control for Germany**  
Grid Profile: DE\_VDE4105.  
DRM Control: §14a EnWG & §9 EEG.
- DRM Control for Austria**  
Zero Export (NO)  
Default state: open.  
When the contactor is closed, the inverter's feed-in power is 0%.  
When the contactor is open, the inverter's feed-in power is not limited and can be up to 100%.  
Zero Export (NC)  
Default state: closed.  
When the contactor is closed, the inverter's feed-in power is not limited and can be up to 100%.  
When the contactor is open, the inverter's feed-in power is 0%.  
Shutdown (NO)  
Default state: open.  
When the contactor is closed, the inverter shuts down.  
When the contactor is open, the inverter operates normally.  
Shutdown (NC)  
Default state: closed.  
When the contactor is closed, the inverter operates normally.  
When the contactor is open, the inverter shuts down.



### 10.3.3 Set Export Management Parameters


#### NOTE

- This function is enabled by default, and the default value of Max. Export Power Limit is 100%.
  - ESS refers to a single energy storage inverter or a parallel system.
  - The energy storage inverter cannot control the output power of other input devices connected to the grid side. It means that the feed-in power cannot be limited to 0 if other input devices are connected to the grid side.
  - If no input device is connected to the grid side, Max. Export Power Limit can be set to 0-100%.
- If no input device is connected to the grid side, and you do not need to limit the feed-in power, disable this function or skip this setting.
  - If an input device, such as a microinverter, is connected to the grid side, and you do not need to limit the feed-in power, disable this function.
  - If you need to limit the feed-in power, follow the instructions below to set Max. Export Power Limit.

**Step 1** Tap **O&M** > **Toolkit**, and tap in the lower right corner.

**Step 2** Tap **Advanced Settings** > **ESS Safety Config**, and slide your finger down to the bottom.

**Step 3** Ensure **Generation Control Function (GCF)** is enabled, and set the value of Max. Export Power Limit, and tap **Save**.

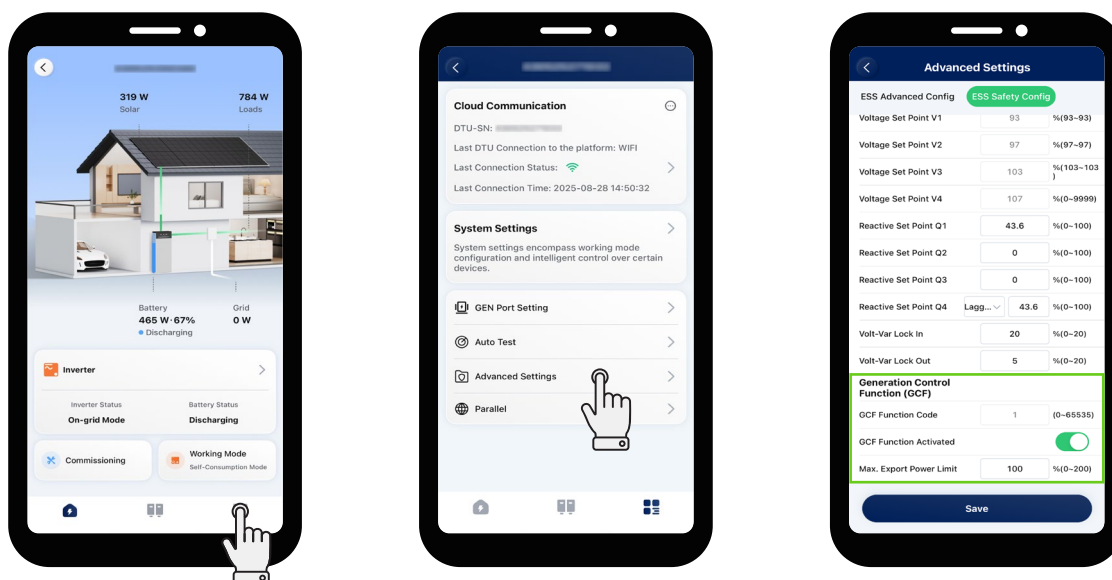

#### Scenario 1: Max. Export Power Limit is 0

The feed-in power of an Energy Storage System (ESS) is 0. If an input device, such as a microinverter, is connected to the grid side, its output power cannot be controlled; it will output power according to its logic.

#### Scenario 2: Max. Export Power Limit is 50%

The maximum allowable feed-in power is 50% of the rated power of ESS. If an input device, such as a microinverter, is connected to the grid side, it can operate at full power, and the energy storage inverter will adjust the output of ESS in real time according to the set Max. Export Power Limit.

#### Scenario 3: Max. Export Power Limit is 100%

The maximum allowable feed-in power is 100% of the rated power of ESS. If an input device, such as a microinverter, is connected to the grid side, it can operate with its full power, and the energy storage inverter will adjust the output of ESS in real time according to the set Max. Export Power Limit.

#### Scenario 4: Max. Export Power Limit is 150%

The maximum allowable feed-in power is 150% of the rated power of ESS. If an input device, such as a microinverter, is connected to the grid side, it can operate with its full power, and the energy storage inverter will adjust the output of ESS in real time according to the set Max. Export Power Limit.

### 10.3.4 Set Working Mode

#### **NOTE**


Only one mode can be selected at a time.

After the commissioning, if you want to change the working mode, follow the instructions below.

#### Method One

**Step 1** Tap O&M > Toolkit, and tap Working Mode.

**Step 2** Select one mode, set relevant parameters, and tap **Save**.

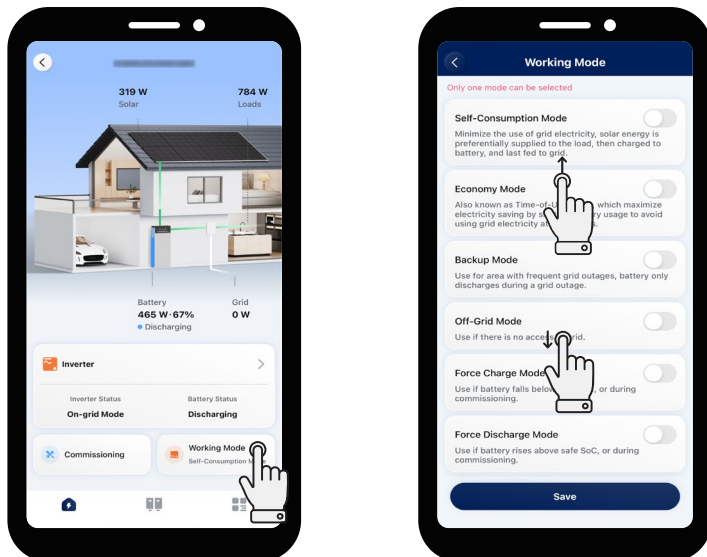


#### Method Two

**Step 1** Tap O&M > Toolkit, tap in the lower right corner, and tap **System Settings**.

**Step 2** Tap Working Mode.

**Step 3** Select one mode, set relevant parameters, and tap **Save**.

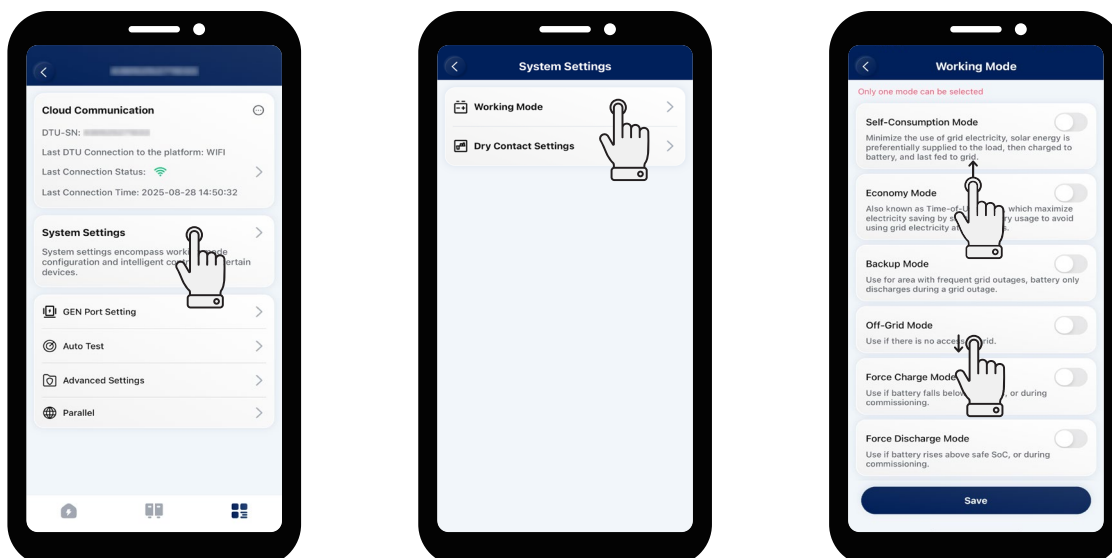

### 10.3.5 Set Dry Contact Function


#### **NOTE**

Only one mode can be selected at a time.

**Step 1** Tap **O&M** > **Toolkit**, tap in the lower right corner, and tap **System Settings**.

**Step 2** Tap **Dry Contact Settings**.

**Step 3** Select one mode, set relevant parameters, and tap **Save**.

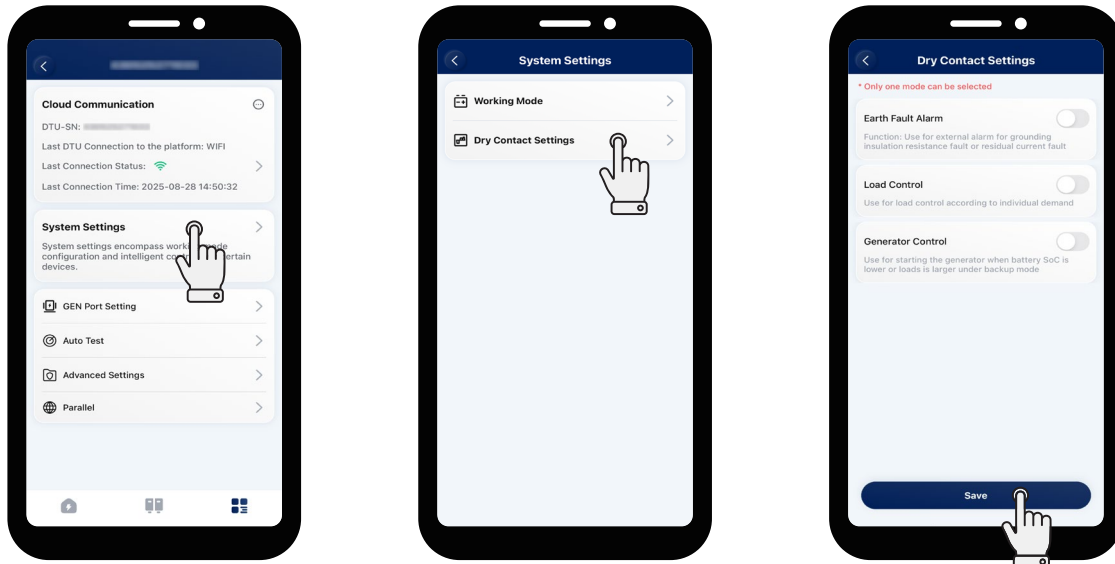

#### ★ Earth Fault Alarm

This function is used for external alarm caused by grounding insulation resistance fault or residual current fault. Disable the external alarm when the load is connected. This function is to produce alarm, not to cause tripping.

#### ★ Load Control

Load control can be used according to individual demand. This setting is to control whether the smart load works or not. There are five modes available as follows.

- **Manual Mode**  
The inverter can supply power to the smart load after you select this mode.
- **Scheduled Mode**  
Set the time period for the smart load to work. The inverter can supply power to the smart load during this set time, and the smart load will be disconnected at other times.
- **Intelligent Mode**

#### **NOTE**

Before selecting the intelligent mode, return to screen, tap **Advanced Settings**, and set the **GEN Port Mode** to **Smart Load (Only G3)**.

It is necessary to set the value of Min. Running Time and Rated Load Power.

In this mode, the inverter will detect the feed-in power generated by PV in real time. If the feed-in power exceeds the rated load power, the inverter can supply power to the smart load during the pre-set minimum running time. Once the time is up, the inverter will detect the feed-in power again. If the feed-in power is less than the rated load power, the smart load will be disconnected; conversely, the inverter will repeat the above process according to the same logic.

- **EPS Port Smart Control**

In this mode, battery protection SOC can be set.

In off-grid state, if the battery SOC is higher than the protection SOC, the inverter can supply power to the smart load; if the battery SOC is lower than the protection SOC, the smart load will be disconnected.

- Heat Pump Control

This function allows users to add up to four runtimes. According to the set power and battery SOC, the system can control the start and stop as well as the power of SG Ready heat pumps and compatible heat pumps of selected brands, maximizing the PV energy utilization.

| Parameter                          | Description                                                                                                      |
|------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Start Power                        | The heat pump will start when the export power reaches this value.                                               |
| Shutdown Power                     | The heat pump will shut down when the grid import power reaches this value.                                      |
| Battery Starting SOC (Optional)    | OFF by default. If it is ON, the heat pump will start when the battery SOC exceeds this value.                   |
| Battery Shutdown SOC               | The heat pump will shut down when the battery SOC falls below this value.                                        |
| Min. Single Runtime                | It has the highest priority. It refers to the minimum duration of a single operating cycle.                      |
| Max. Single-day Runtime (Optional) | OFF by default. If it is ON, the heat pump will shut down when the total runtime for the day reaches this value. |
| Runtime Settings                   | Up to four operating periods can be set.                                                                         |

### ★ Generator Control

- Exercise Mode

The generator starts regularly during the preset period to ensure the operation of the generator.

| Parameter  | Description                                                   |
|------------|---------------------------------------------------------------|
| Frequency  | It allows the generator to start regularly at this frequency. |
| Start Time | It allows the generator to start regularly at this time.      |
| Duration   | The generator will stop running after this duration.          |

- Running Mode

This mode is the off-grid operation mode of the generator, including manual mode and auto mode.

▷ Manual Mode

The manual mode is used to turn on or turn off the generator manually.

▷ Auto Mode

The auto mode is used to turn on or turn off the generator according to the battery capacity. The auto mode only supports generators controlled by Dry Contact. Otherwise, please select the manual mode.

| Parameter        | Description                                                                                                                           |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| GEN Start SOC    | Battery level (%) at or below which the generator starts in off-grid mode.                                                            |
| GEN Shutdown SOC | Battery level (%) at or above which the generator stops in generator mode.                                                            |
| Quiet Time       | Period during which the generator is disabled. Please note that enabling Quiet Time may affect power availability during those hours. |

- Battery Charge Time

| Parameter           | Description                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery Charge Time | The generator will charge the battery during the preset period.<br>To avoid wasting PV power, please choose the time period when the PV power is low. |

## 10.4 Upgrade the Firmware

### NOTE

During the firmware upgrade, do not power off the device.


When you enter the plant overview interface, there will be a pop-up window if there is a new firmware version.

#### Method One

**Step 1** Tap the target plant.

**Step 2** Tap **Upgrade**.

**Step 3** Tap **Upgrade**.

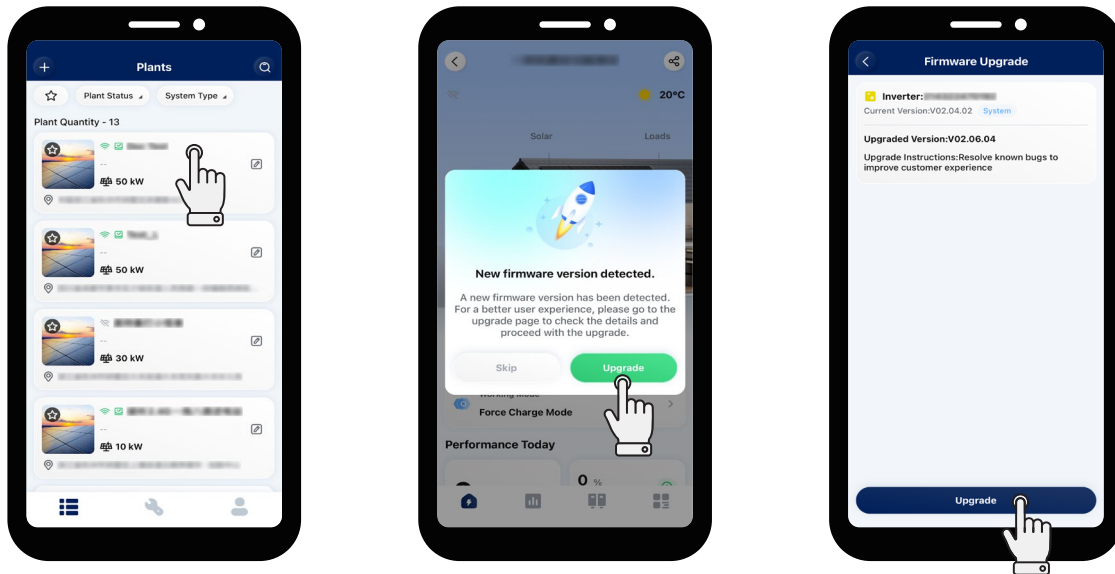


#### Method Two

If you have tapped **Skip** to perform other operations, you can also follow the instructions below to upgrade the firmware.

**Step 1** Tap  in the lower right corner.

**Step 2** Tap  **Firmware Upgrade > Upgrade**.

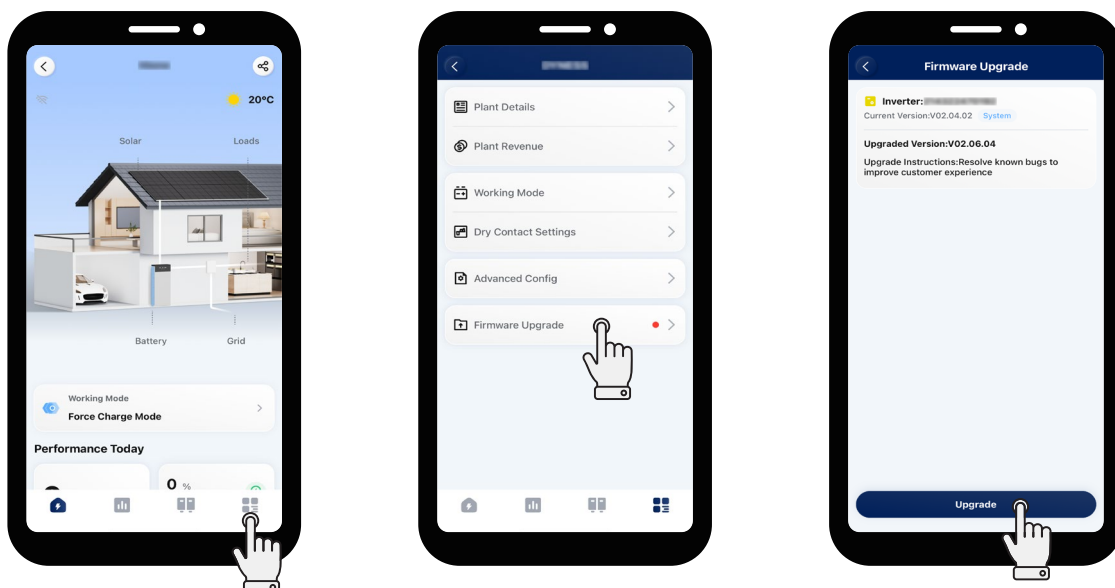

## 11 System Maintenance

### 11.1 System Power-off

**Step 1** Stop the product from working via the S-Miles App.

**Step 2** On the left side of the inverter, press the power button and hold for 6 s to power-off the device.

**Step 3** Disconnect the AC breaker between the inverter and the grid.

**Step 4** If the inverter is connected to the PV strings, rotate the DC switch to the "OFF" position.

**Step 5** Check whether the inverter indicators are off.

#### NOTICE

Wait at least 5 minutes after the LED indicators are off to release the internal energy.

### 11.2 Routine Maintenance

| Check Item              | Check Method                                                                                                                                                                                                                                                                                          | Maintenance Interval                                                                                                                        |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| System Operation Status | <ul style="list-style-type: none"> <li>Check whether the device is damaged or deformed.</li> <li>Check whether there is an abnormal sound when the device is working.</li> <li>Check whether the device parameters are set correctly.</li> </ul>                                                      | Once every 6 months                                                                                                                         |
| Electrical Connection   | <ul style="list-style-type: none"> <li>Check whether the cables are firmly connected and intact; in particular, ensure that the parts being contacted with the metal surface are not scratched.</li> <li>Check whether the waterproof plugs or covers of unused ports are firmly in place.</li> </ul> | The first inspection is 3 months after the first installation, and the subsequent inspections can be carried out once every 6 to 12 months. |
| Grounding Reliability   | Check whether the ground cables are firmly connected.                                                                                                                                                                                                                                                 | The first inspection is 3 months after the first installation, and the subsequent inspections can be carried out once every 6 to 12 months. |

## 11.3 Troubleshooting

When the system is in alarm, please log in to the S-Miles App to review. The possible causes and their troubleshooting are shown as follows.

| Display             | Possible Cause                                           | Handling Suggestions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid Overvoltage    | The grid voltage is higher than the permissible range.   | <p>Generally, the inverter will reconnect to the grid after the grid recovers. If the alarm occurs frequently:</p> <ol style="list-style-type: none"> <li>1. Make sure the ESS safety configuration of the inverter is set correctly.</li> <li>2. Make sure that the grid voltage in your area is stable and within the normal range.</li> <li>3. Check whether the cross-sectional area of the AC cable meets the requirement.</li> <li>4. If the alarm persists, contact Hoymiles technical support team.</li> </ol> |
| Grid Undervoltage   | The grid voltage is lower than the permissible range.    | <p>Generally, the inverter will reconnect to the grid after the grid recovers. If the alarm occurs frequently:</p> <ol style="list-style-type: none"> <li>1. Make sure the ESS safety configuration of the inverter is set correctly.</li> <li>2. Make sure that the grid voltage in your area is stable and within the normal range.</li> <li>3. Check whether the AC cable is firmly in place.</li> <li>4. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                |
| Grid Overfrequency  | The grid frequency is higher than the permissible range. | <p>Generally, the inverter will reconnect to the grid after the grid recovers. If the alarm occurs frequently:</p> <ol style="list-style-type: none"> <li>1. Make sure the ESS safety configuration of the inverter is set correctly.</li> <li>2. Make sure that the grid frequency in your area is stable and within the normal range.</li> <li>3. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                         |
| Grid Underfrequency | The grid frequency is lower than the permissible range.  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| No Grid             | The inverter detects that there is no grid connected.    | <p>Generally, the inverter will reconnect to the grid after the grid recovers. If the alarm occurs frequently:</p> <ol style="list-style-type: none"> <li>1. Check whether the grid supply is reliable.</li> <li>2. Check whether the AC cable is firmly in place.</li> <li>3. Check whether the AC cable is correctly connected.</li> <li>4. Check whether the AC circuit breaker is disconnected.</li> <li>5. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                             |

| Display               | Possible Cause                                                            | Handling Suggestions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------|---------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RCD Fault             | The residual leakage current is too high.                                 | <ol style="list-style-type: none"> <li>1. The alarm can be caused by high ambient humidity, and the inverter will reconnect to the grid after the environment is improved.</li> <li>2. If the environment is normal, check whether the AC and DC cables are well insulated.</li> <li>3. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                                                                                                         |
| PV Reverse Connection | The inverter detects that the PV strings are reversely connected.         | <ol style="list-style-type: none"> <li>1. Check whether the corresponding string is of reverse polarity. If so, disconnect the DC switch and adjust the polarity when the string current drops below 0.5 A.</li> <li>2. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                                                                                                                                                                         |
| PV Undervoltage       | The PV voltage is lower than the permissible range.                       | <ol style="list-style-type: none"> <li>1. Check whether the DC cable is firmly in place.</li> <li>2. Check whether there is a PV Module shaded. If so, remove the shade and ensure the PV Module is clean.</li> <li>3. Check whether the PV Module is in abnormal aging.</li> <li>4. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                                                                                                            |
| PV Overvoltage        | The PV voltage is higher than the permissible range.                      | <ol style="list-style-type: none"> <li>1. Check the specification and numbers of corresponding string PV Modules.</li> <li>2. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Over Temperature      | The temperature inside the inverter is higher than the permissible range. | <ol style="list-style-type: none"> <li>1. Make sure that the installation complies with the instructions from the User Manual.</li> <li>2. Check whether the alarm "Fan Fault" occurs. If so, replace the faulty fan.</li> <li>3. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                                                                                                                                                               |
| ISO Fault             | The insulation impedance of the PV string to the ground is too low.       | <ol style="list-style-type: none"> <li>1. Use a multimeter to determine if the resistance between the earth and the inverter frame is close to zero. If not, please ensure that the connection is good.</li> <li>2. If the humidity is too high, an isolation fault may occur. Attempt to restart the inverter. If the fault persists, check it again when the weather turns fine.</li> <li>3. Check the resistance to ground from the PV Module/cable. Take corrective measures in case of leading to a short circuit or damaged insulation layer.</li> <li>4. If the alarm persists, contact Hoymiles technical support team.</li> </ol> |



| Display                    | Possible Cause                                                         | Handling Suggestions                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Arc Fault                  | The inverter detects that there is an arc fault.                       | <ol style="list-style-type: none"> <li>1. Disconnect the DC switch and check whether DC cables are damaged and whether the wiring terminals are loose or in poor contact. If so, take corresponding corrective measures.</li> <li>2. After taking corresponding measures, reconnect the DC switch.</li> <li>3. If the alarm persists, contact Hoymiles technical support team.</li> </ol> |
| EPS Load Overpower         | The EPS load power is higher than the permissible range.               | <ol style="list-style-type: none"> <li>1. Reduce the power of EPS loads, or remove some EPS loads. The inverter will restart automatically.</li> <li>2. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                        |
| Meter Reverse Connection   | The inverter detects that the Meter or CT is reversely connected.      | <ol style="list-style-type: none"> <li>1. Make sure that the installation complies with the instructions from the User Manual.</li> <li>2. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                     |
| Meter Communication Fault  | The inverter detects that there is a meter communication fault.        | <ol style="list-style-type: none"> <li>1. Check whether the Meter communication cable and terminal are abnormal.</li> <li>2. Reconnect the Meter communication cable.</li> <li>3. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                              |
| Battery Reverse Connection | The inverter detects that the battery wirings are reversely connected. | <ol style="list-style-type: none"> <li>1. Check the battery for polarity correctness, and correct it if necessary.</li> <li>2. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                 |
| Battery Voltage Fault      | The battery voltage is higher than the permissible range.              | <ol style="list-style-type: none"> <li>1. Check if the battery input voltage is within the normal range.</li> <li>2. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                                                                           |
| BMS Communication Fault    | The inverter detects that there is a BMS communication fault.          | <ol style="list-style-type: none"> <li>1. Check whether the BMS communication cable and terminal are abnormal.</li> <li>2. Reconnect the BMS communication cable.</li> <li>3. If the alarm persists, contact Hoymiles technical support team.</li> </ol>                                                                                                                                  |
| BMS Battery Alarm          | The inverter detects that there is a battery fault from BMS.           | Try to restart the battery. If the fault persists, contact the battery manufacturer.                                                                                                                                                                                                                                                                                                      |
| BMS Battery Fault          | The inverter detects that there is a battery fault from BMS.           | Try to restart the battery. If the fault persists, contact the battery manufacturer.                                                                                                                                                                                                                                                                                                      |
| Relay Self-check Fault     | The inverter detects that there is a relay self-check fault.           | Try to restart the inverter. If the fault persists, contact Hoymiles technical support team.                                                                                                                                                                                                                                                                                              |

## 12 Decommissioning

### 12.1 Removing the Product

**Step 1** Power off the product as described in [11.1 System Power-off](#).

**Step 2** Disconnect all cables.

**Step 3** Remove the device from the wall.

### 12.2 Packing the Product

If the original package is available, put the product and its accessories into the package and keep them in a dry and proper place.

If the original package is not available, put the product and its accessories into a suitable package. The package should be easy to remove, can bear the weight of the product, and can be sealed properly.

### 12.3 Disposing of the Product

If the product can not be used and needs to be disposed of, dispose of the product and its accessories in accordance with the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

In accordance with the WEEE and its implementation in national law, the electrical devices must be collected separately and recycled in an environmentally responsible manner. We recommend that you return your used device to your dealer or obtain information regarding a local, authorized collection and disposal system. Failure to comply with this EU Directive may result in a negative impact on the environment.

## 13 Technical Datasheets

### 13.1 HiOne-(8-20)T-G3

| Model                                                   | HiOne-8T-G3                     | HiOne-10T-G3         | HiOne-12T-G3 | HiOne-16T-G3 | HiOne-20T-G3 |
|---------------------------------------------------------|---------------------------------|----------------------|--------------|--------------|--------------|
| Battery                                                 |                                 |                      |              |              |              |
| Battery type                                            | Li-ion                          |                      |              |              |              |
| Battery voltage range (V)                               | 720-950                         |                      |              |              |              |
| Compatible battery model                                | HiOne-6B-G3, HiOne-8B-G3        |                      |              |              |              |
| Number of modules                                       | 1-8 <sup>(1)</sup>              |                      |              |              |              |
| PV Input                                                |                                 |                      |              |              |              |
| Recommended max. PV power (W)                           | 16000                           | 20000                | 24000        | 32000        | 40000        |
| Max. input voltage (V)                                  | 1000                            |                      |              |              |              |
| Rated voltage (V)                                       | 720                             |                      |              |              |              |
| Start-up voltage (V)                                    | 170                             |                      |              |              |              |
| MPPT voltage range (V)                                  | 150-950                         |                      |              |              |              |
| Max. input current (A)                                  | 20/20/20                        | 20/20/20             | 20/20/20/20  | 20/20/20/20  | 20/20/20/20  |
| Max. short circuit current (A)                          | 30/30/30                        | 30/30/30             | 30/30/30/30  | 30/30/30/30  | 30/30/30/30  |
| MPPT number/Max. input strings number                   | 3/3                             | 3/3                  | 4/4          | 4/4          | 4/4          |
| AC Output                                               |                                 |                      |              |              |              |
| Rated output power (W)                                  | 8000                            | 10000                | 12000        | 16000        | 20000        |
| Max. on-grid output apparent power (VA)                 | 8800                            | 11000 <sup>(2)</sup> | 13200        | 17600        | 22000        |
| Max. output current (A)                                 | 13.3                            | 16.7                 | 20.0         | 26.7         | 33.3         |
| Max. off-grid output apparent power (VA) <sup>(3)</sup> | 12000 (10s)                     | 15000 (10s)          | 18000 (10s)  | 24000 (10s)  | 30000 (10s)  |
| Grid form                                               | 3L/N/PE                         |                      |              |              |              |
| Nominal AC output voltage (V)                           | 380/400                         |                      |              |              |              |
| Nominal grid frequency (Hz)                             | 50/60                           |                      |              |              |              |
| Power factor                                            | >0.99 (0.8 leading-0.8 lagging) |                      |              |              |              |
| THDi (@rated output)                                    | <3%                             |                      |              |              |              |
| Efficiency                                              |                                 |                      |              |              |              |
| Max. efficiency                                         | 98.5%                           |                      |              |              |              |
| EU efficiency                                           | 98.0%                           |                      |              |              |              |

| Model                                       | HiOne-8T-G3                                                                                                                                                            | HiOne-10T-G3       | HiOne-12T-G3            | HiOne-16T-G3            | HiOne-20T-G3            |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-------------------------|-------------------------|-------------------------|
| Protection                                  |                                                                                                                                                                        |                    |                         |                         |                         |
| Anti-islanding protection                   | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| PV string input reverse polarity protection | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| Insulation resistor detection               | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| Residual current monitoring unit            | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| AC overcurrent protection                   | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| AC short circuit protection                 | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| AC overvoltage and undervoltage protection  | Integrated                                                                                                                                                             |                    |                         |                         |                         |
| Surge protection                            | DC Type II / AC Type II                                                                                                                                                |                    |                         |                         |                         |
| General                                     |                                                                                                                                                                        |                    |                         |                         |                         |
| Dimensions (W × H × D [mm])                 | 620 × 360 × 255                                                                                                                                                        |                    |                         |                         |                         |
| Weight (kg)                                 | 31                                                                                                                                                                     |                    |                         |                         |                         |
| Mounting                                    | Wall-mounted / Floor-standing                                                                                                                                          |                    |                         |                         |                         |
| Operating temperature (°C)                  | -30 to +65 (>45, derating)                                                                                                                                             |                    |                         |                         |                         |
| Relative humidity                           | 0-95%, no condensation                                                                                                                                                 |                    |                         |                         |                         |
| Cooling                                     | Natural convection                                                                                                                                                     | Natural convection | Intelligent air cooling | Intelligent air cooling | Intelligent air cooling |
| Topology (Solar / Battery)                  | Transformerless / High-frequency isolation                                                                                                                             |                    |                         |                         |                         |
| Altitude (m)                                | ≤4000                                                                                                                                                                  |                    |                         |                         |                         |
| Protection degree                           | IP66                                                                                                                                                                   |                    |                         |                         |                         |
| User interface                              | LED & App                                                                                                                                                              |                    |                         |                         |                         |
| Communication                               | RS485, Bluetooth, Wi-Fi / Ethernet / 4G (optional)                                                                                                                     |                    |                         |                         |                         |
| Warranty                                    | 10 Years                                                                                                                                                               |                    |                         |                         |                         |
| Standard Compliance                         |                                                                                                                                                                        |                    |                         |                         |                         |
| Grid connection standard                    | IEC 61727, IEC 62116, EN 50549-1&10, NF EN 50549-1&-10, VDE-AR-N 4105, DIN VDE V 0124-100, PN-EN 50549-1, NC RfG, CEI0-21, AS/NZS 4777.2, PEA/MEA, TOR Erzeuger Type A |                    |                         |                         |                         |
| Safety / EMC standard                       | IEC/EN 61000-6-1, IEC/EN 61000-6-3, EN 62920, IEC/EN 62109-1&2                                                                                                         |                    |                         |                         |                         |

(1) Up to four Modules can be stacked in one battery tower.

(2) For Belgium, the maximum output apparent power is equal to the nominal output apparent power.

(3) Applicable only when the inverter is connected to Hoymiles HiBox Gateway.

## 13.2 HiOne-6B-G3/HiOne-8B-G3

| Model                                       | HiOne-6B-G3                                                                           |                    | HiOne-8B-G3 |
|---------------------------------------------|---------------------------------------------------------------------------------------|--------------------|-------------|
| Battery Data                                |                                                                                       |                    |             |
| Battery type                                | LiFePO <sub>4</sub>                                                                   |                    |             |
| Cell capacity (Ah)                          | 314                                                                                   |                    |             |
| Cycle life                                  | 8000 <sup>(1)</sup>                                                                   |                    |             |
| Total energy (kWh)                          | 6                                                                                     | 8                  |             |
| Usable energy (kWh)                         | 5.85 <sup>(2)</sup>                                                                   | 7.8 <sup>(2)</sup> |             |
| Depth of discharge                          | 100% <sup>(3)</sup>                                                                   |                    |             |
| Max. charging/discharging power (kW)        | 3                                                                                     | 4                  |             |
| Peak discharge power (kW)                   | 4.5 (10 s)                                                                            | 6 (10 s)           |             |
| Max. stackable quantity                     | 4                                                                                     |                    |             |
| Max. parallel quantity                      | 2                                                                                     |                    |             |
| General                                     |                                                                                       |                    |             |
| Dimensions (W × H × D [mm])                 | 620 × 360 × 255 (single pack)                                                         |                    |             |
| Weight (kg)                                 | 55                                                                                    | 67                 |             |
| Mounting                                    | Wall-mounting / Floor-standing                                                        |                    |             |
| Installation environment                    | Indoor / Outdoor                                                                      |                    |             |
| Storage temperature range (°C)              | -25 to +60                                                                            |                    |             |
| Charging/discharging temperature range (°C) | -20 to +55                                                                            |                    |             |
| Protection degree                           | IP66                                                                                  |                    |             |
| Cooling                                     | Natural convection                                                                    |                    |             |
| Altitude (m)                                | ≤4000                                                                                 |                    |             |
| Relative humidity range                     | 5% - 95%                                                                              |                    |             |
| Compatible inverters                        | HiOne-(8-20)T-G3, HiOne-(3.6-12)S-G3                                                  |                    |             |
| Standard compliance                         | IEC/EN 60730-1, IEC/EN 61000-6-1&3, UN 38.3, IEC/EN 62619, IEC/EN 63056, IEC/EN 62477 |                    |             |
| Warranty                                    | 10 Years                                                                              |                    |             |

(1) This value is provided by the Cell manufacturer and is based on the following conditions: SOH=70%, 0.5 C charge/discharge rate at 25±2°C.

(2) This value is measured at the beginning of life under the following conditions: 100% depth of discharge, 0.2 C charge/discharge rate at 25±2°C.

(3) This value refers to the usable energy capacity of the battery. To keep the battery in good condition, recharge it within 7 days after it has been fully discharged.

## Appendix 1: Application of P1 Meter

### NOTE

The P1 meter is not included in the standard package of the HiOne series. You need to purchase it separately.

### P1 Meter Introduction


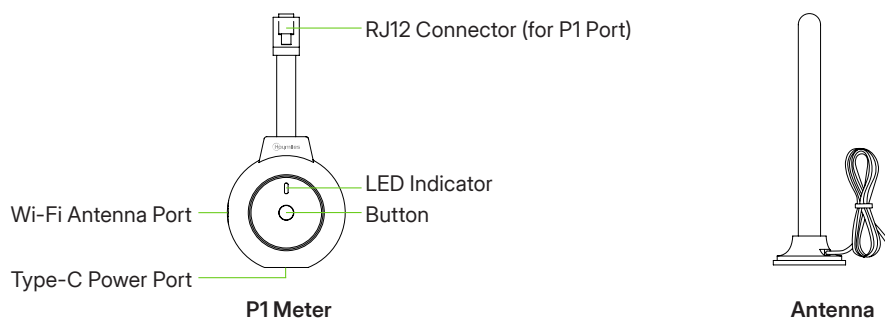


Figure 14-1 P1 Meter Package Contents and Appearance

| Button Action  | Function                                              |
|----------------|-------------------------------------------------------|
| Press for 3 s  | Turn on Bluetooth, and Bluetooth starts broadcasting. |
| Press once     | Confirm Bluetooth connection.                         |
| Press for 10 s | Reset the device.                                     |

| LED                                                       | Time Gap                  | Indication                                                                        |
|-----------------------------------------------------------|---------------------------|-----------------------------------------------------------------------------------|
| Alternating blue and green flashing                       | 1 s                       | Upgrade mode                                                                      |
| Alternating blue and green flashing                       | Blue: 2 s<br>Green: 0.5 s | Abnormal mode                                                                     |
| Flashing blue                                             | 1 s                       | Bluetooth broadcasting                                                            |
| Flashing blue                                             | 0.5 s                     | Waiting for button confirmation to connect Bluetooth (Maximum waiting time: 15 s) |
| Solid blue                                                | -                         | Bluetooth connected                                                               |
| Flashing green                                            | 2 s                       | Network not configured / Factory resetting                                        |
| Flashing green                                            | 0.5 s                     | Network configured, connecting to network / Network connection failed             |
| Solid green                                               | -                         | Network connected, but no data communication                                      |
| Solid green with blue flashing once per data transmission | -                         | Data communicating                                                                |

## System Diagram

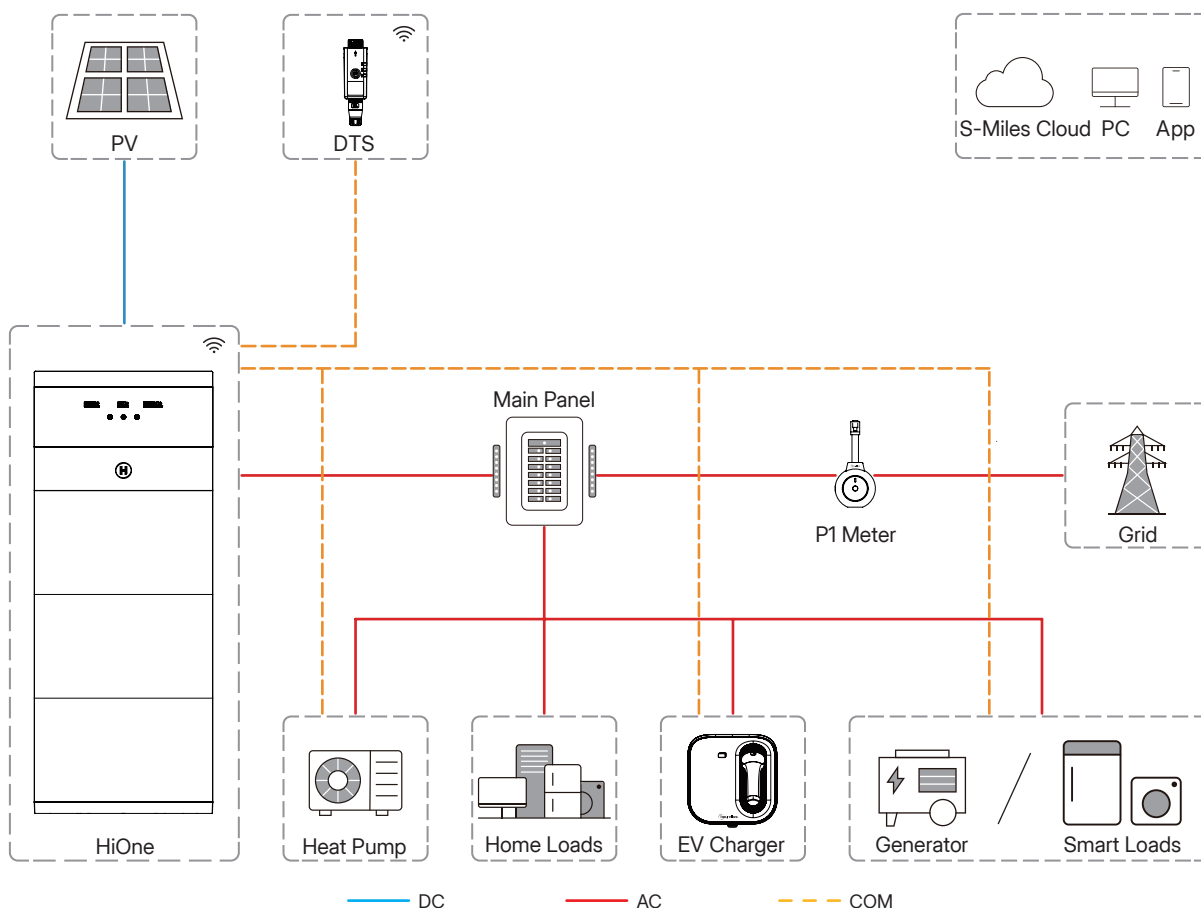


## How to Connect the P1 Meter

## NOTE

Before installation, make sure the P1 communication of the residential smart meter is turned on.


**Step 1** Insert the P1 meter into the P1 port of the smart meter. For the DSMR 5.0 smart meter, if the P1 meter is powered on, the LED indicator will flash green.

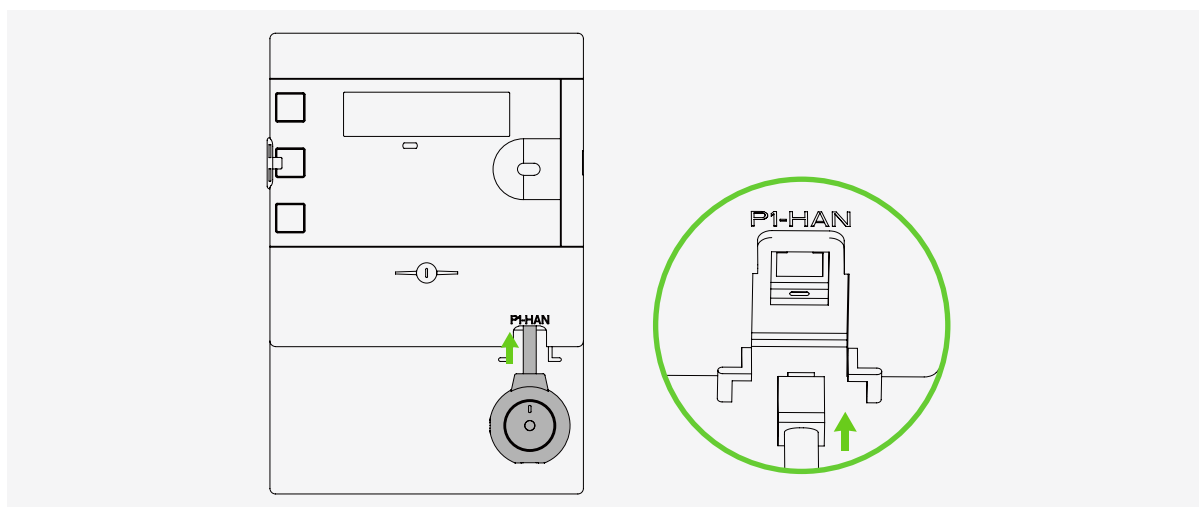


## NOTE

The actual position of the P1 port may vary depending on the smart meter, but it is typically labeled as "P1".

**Step 2** For the DSMR 4.0 smart meter, you need to connect the P1 meter to a power adapter (5 V, > 0.5 A) through the Type-C power port. If the P1 meter is powered on, the LED indicator will flash green.

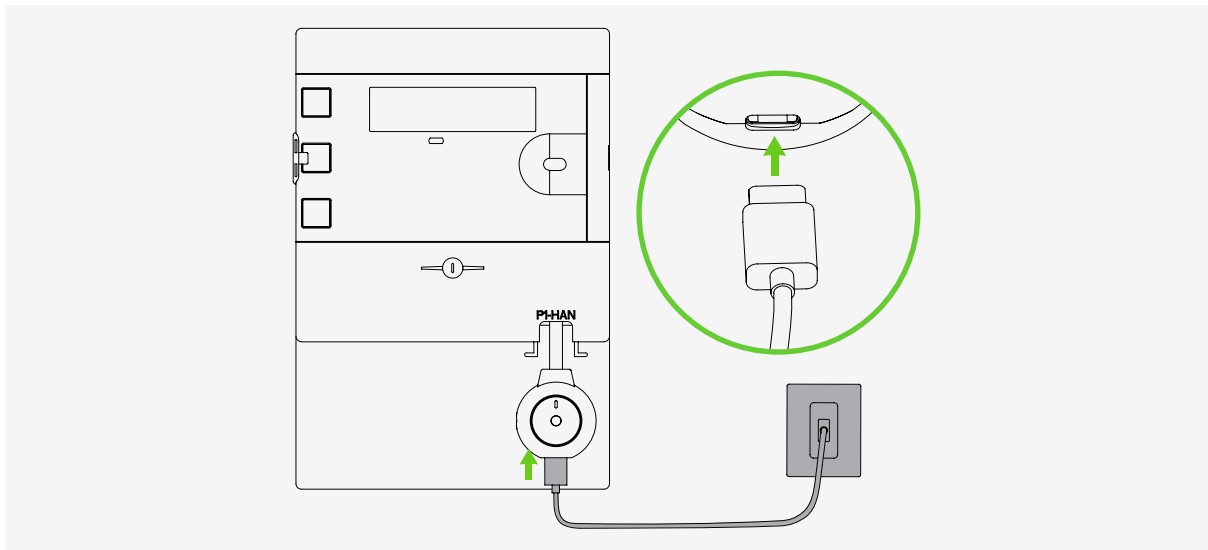

**Step 3** Connect the magnetic mount antenna's cable to the P1 meter's Wi-Fi antenna port, and securely attach the antenna body to a nearby metal component.



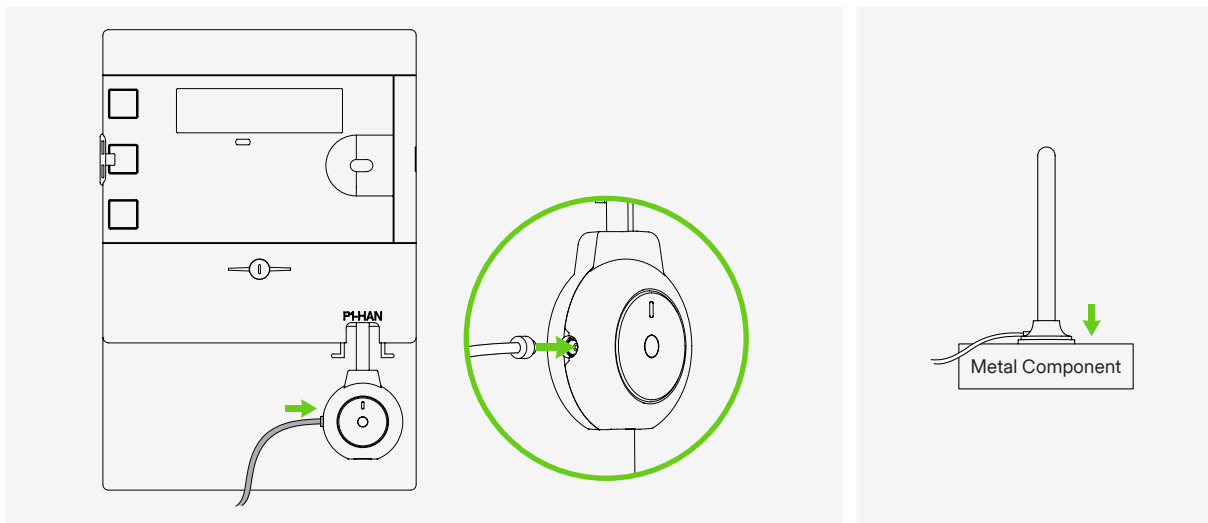






## Online Setting

### Step 1 Connect to the P1 meter

- Tap **O&M** > **Network Config**.
- Press the button on the P1 meter for 3 seconds. Its LED indicator will flash blue, indicating Bluetooth starts broadcasting.
- Under **Via Bluetooth**, tap the P1 meter you want to connect.
- Within 30 seconds, press the button on the P1 meter.

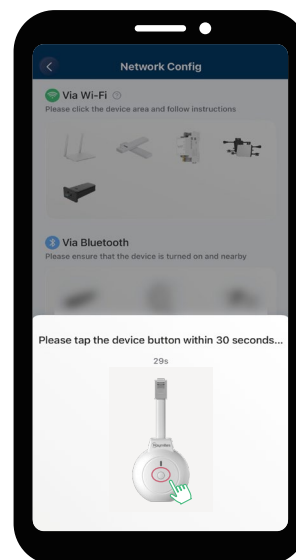
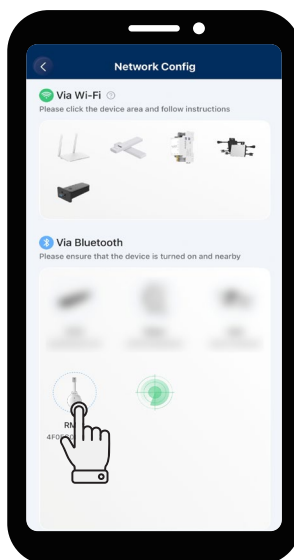
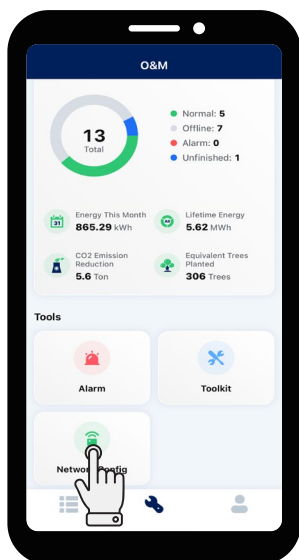


- Select a Wi-Fi network and enter the password. Then, tap **Send**.
- Wait for the network connection to succeed.

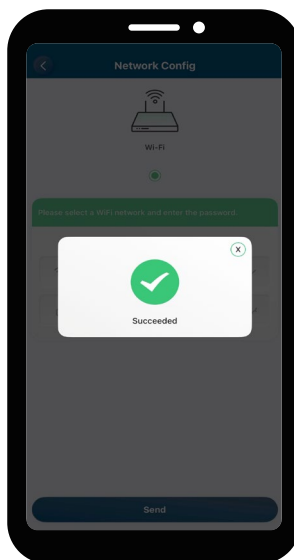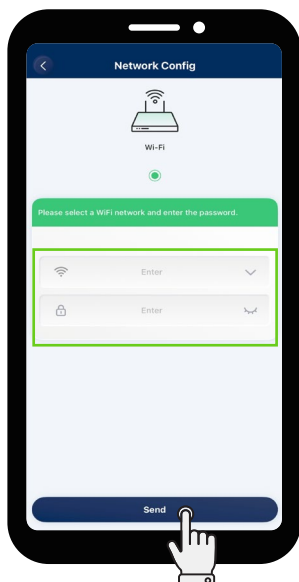




## Step 2 Check the P1 meter status

- Return to the O&M screen. Tap **Toolkit**.
- Under **Via Bluetooth**, tap the P1 meter you want to check.
- Check the real-time data of the P1 meter.

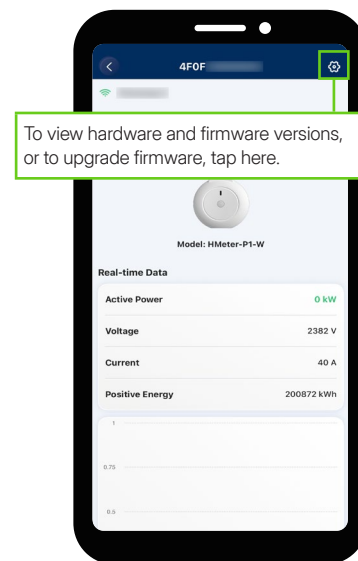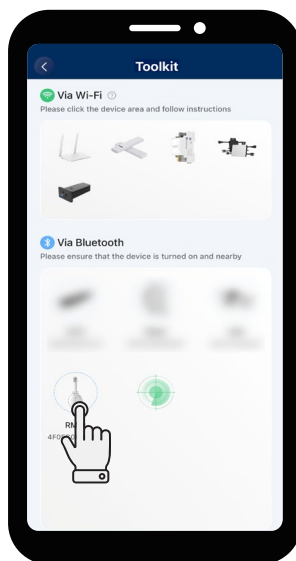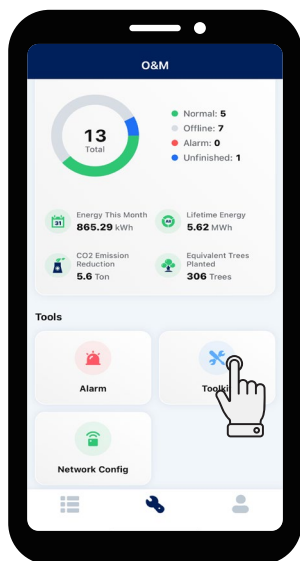


## Step 3 Start commissioning

- Return to the O&M screen. Tap **Toolkit**.
- Under **Via Bluetooth**, tap the DTS connected to the HiOne inverter.
- Tap **Commissioning**.

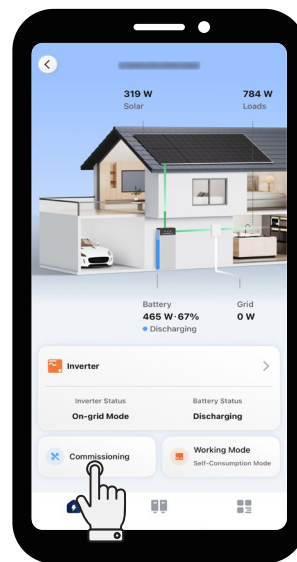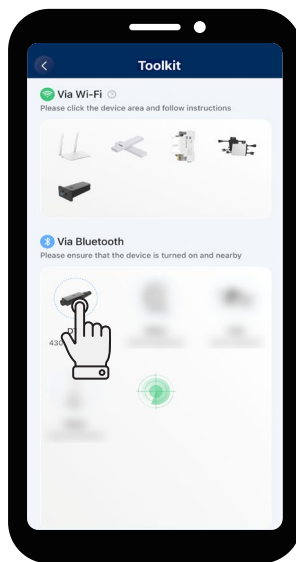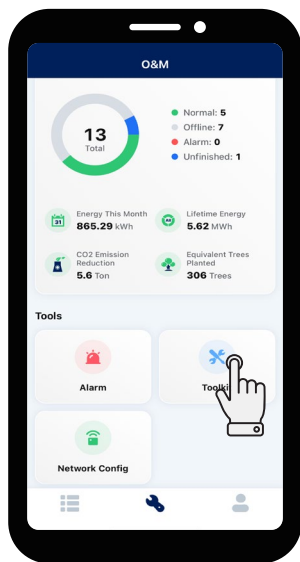

D. Tap **P1 Meter** > **Add Now**.


E. Tap the P1 meter you want to add. Then, tap **Confirm**.

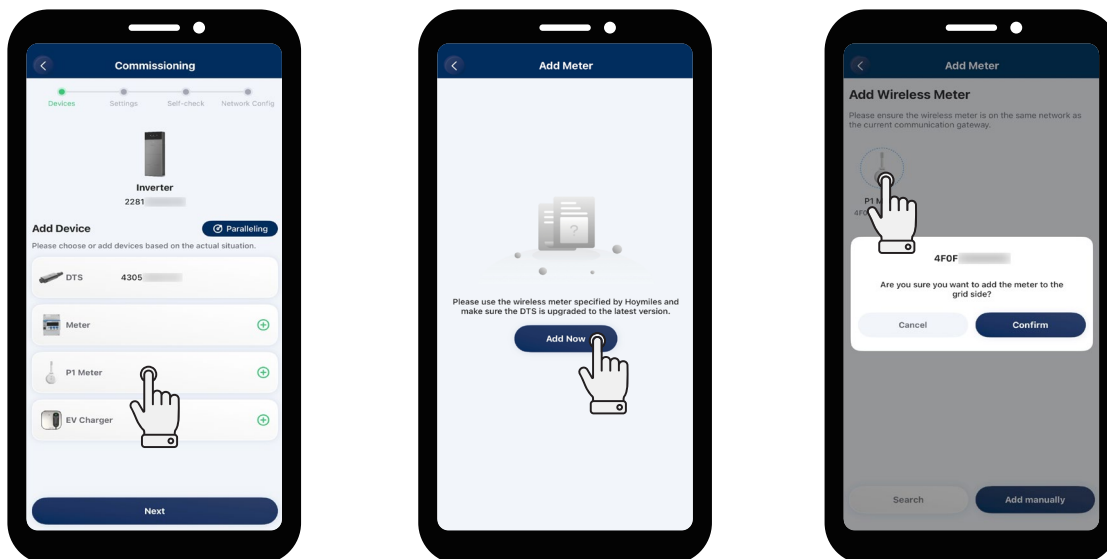

F. Wait for the P1 meter SN to be displayed, which means the P1 meter has been successfully added.

Then, tap the arrow in the upper left corner to return to the previous screen.

G. Tap **Next** and follow the on-screen instructions to proceed with commissioning. For details, refer to **Step 2 C-E** in [10.1 Start Commissioning](#).

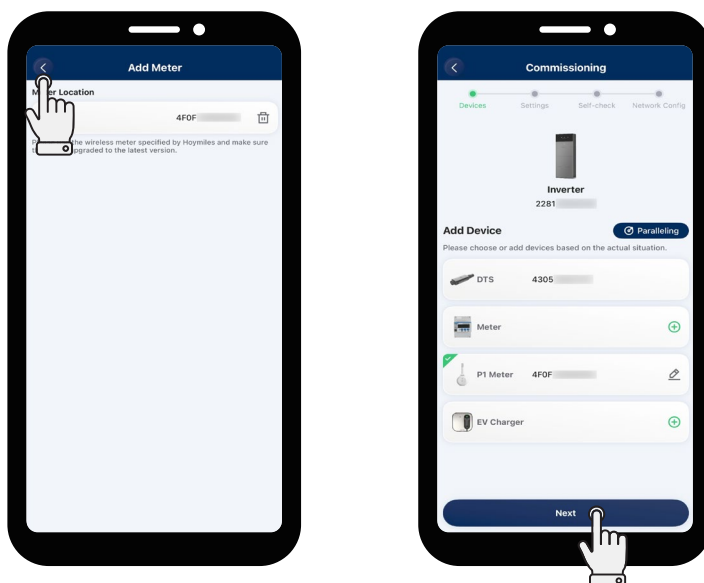

## Appendix 2: Application of AC Coupled System

### Overview

The HiOne series is compatible with any grid-connected inverter (PV inverter or microinverter). With the HiOne series, a PV system can be retrofitted into a PV Energy Storage System (ESS), allowing more self-consumption energy and backup energy.

#### NOTE

- If power export management is required, the power of the PV inverter shall be less than the battery charging power. The zero-export function will be disabled after the battery is fully charged.
- In off-grid mode, do not connect a PV inverter and a generator to the HiOne inverter at the same time.

### System Diagram

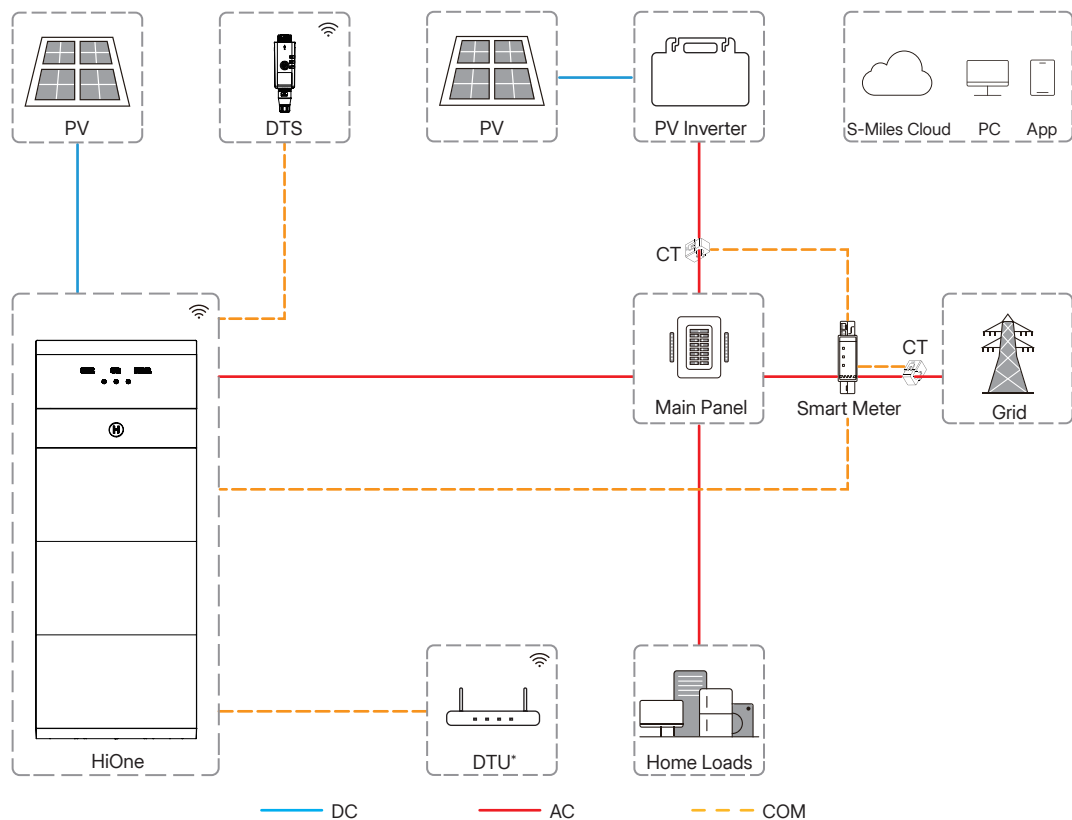


Figure 15-1 AC Coupled System

#### NOTE

If the PV system uses Hoymiles microinverters, connect the DTU-Pro or DTU-Pro-S to the HiOne inverter.

### How to Connect the Meter and CTs

The Hoymiles dual-CT solution requires only one meter. One CT is installed on the grid side, and the other is installed on the PV inverter side. The S-Miles Cloud monitoring platform provides a visualized view of the AC coupled system data in a single plant.

#### NOTE

- This series inverter comes with Meter-1T-G3 or Meter-1T-G3 (2 CT Port) as standard.
  - ▷ If the meter you received is Meter-1T-G3, Meter-2T-G3 must be purchased separately from Hoymiles.
  - ▷ If the meter you received is Meter-1T-G3 (2 CT Port), another set of CTs must be purchased separately from Hoymiles.
- In an AC coupled system, the grid side CTs must be connected to the meter's CT1 terminal, and the PV inverter side CTs must be connected to the meter's CT2 terminal.

- Step 1** Respectively connect the meter's terminals L1, L2, L3, and N to Grid L1, L2, L3, and N.
- Step 2** Respectively clamp the grid side CTs onto Grid L1, L2, and L3. Ensure the arrow on each CT points to the grid.
- Step 3** Connect the CTs to the meter's CT1 terminal.
- Step 4** Respectively clamp the PV inverter side CTs onto L1, L2, and L3. Ensure the arrow on each CT points to the opposite direction of the PV inverter.
- Step 5** Connect the CTs to the meter's CT2 terminal.
- Step 6** Use a standard Ethernet cable to connect the meter's RS485 terminal and the inverter's meter terminal.

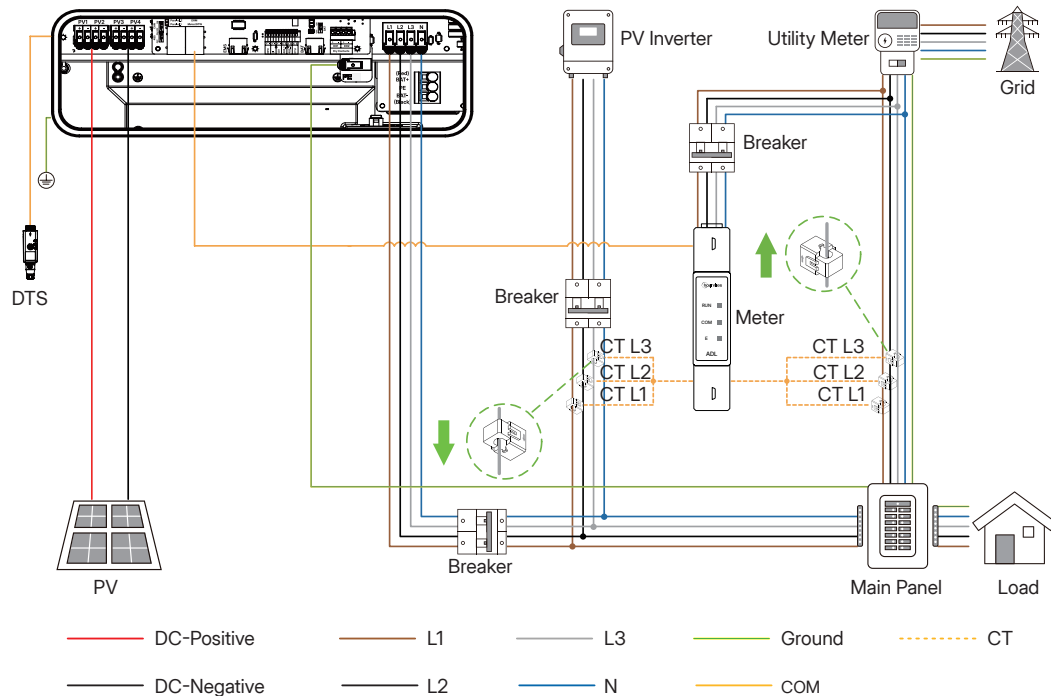


Figure 15-2 Meter and CT Connection

### How to Connect the DTU to HiOne inverter

Connect the DTU's RS485 terminals to the DTU terminals on the HiOne inverter.

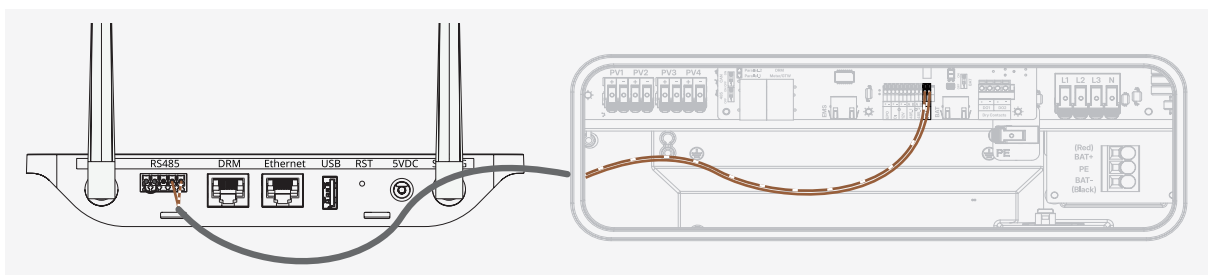





Figure 15-3 Connecting DTU to HiOne Inverter

### Online Setting

After completing the electrical connection, add the HiOne inverter to your plant and configure the parameters on the S-Miles Cloud platform.

The following shows how to add the HiOne inverter. For other instructions, refer to [10 S-Miles Cloud](#) or [S-Miles Cloud User Manual \(App\)](#).

- Step 1** Open S-Miles Installer App.
- Step 2** Find the plant and tap > **Devices**.
- Step 3** Tap to enter the HiOne inverter SN. Then, tap **Save**.
- Step 4** Return to the Plants Screen. Tap next to , and tap **Networking**.

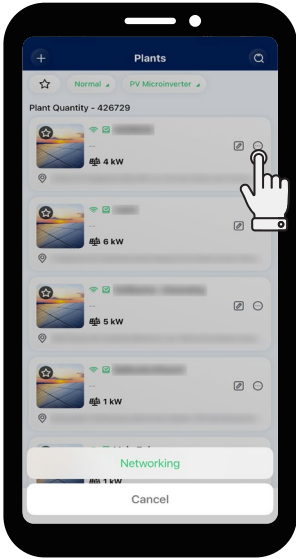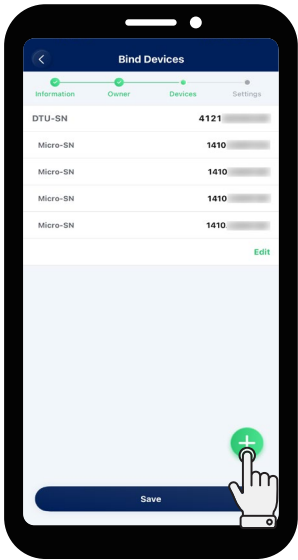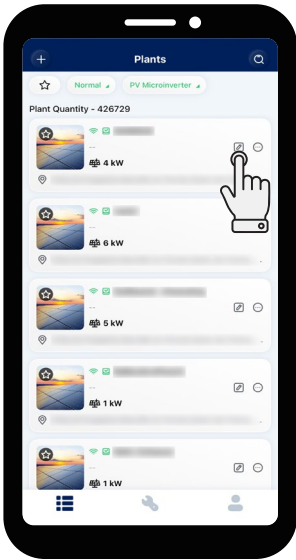

## Appendix 3: Application of Smart Load

System Diagram


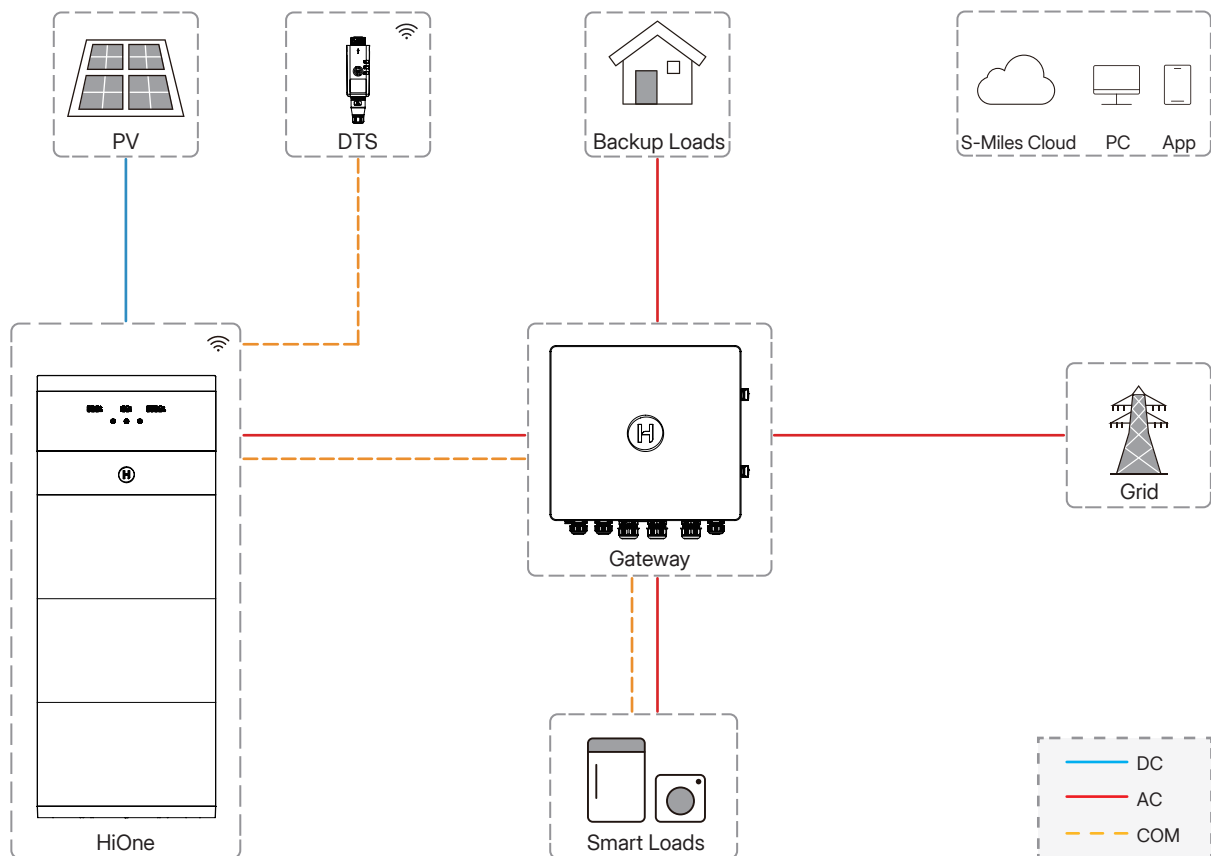


Figure 16-1 Smart Load System

### How to Achieve Smart Load Connection

Smart load operation is performed through the HiBox's SMART PORT terminals.

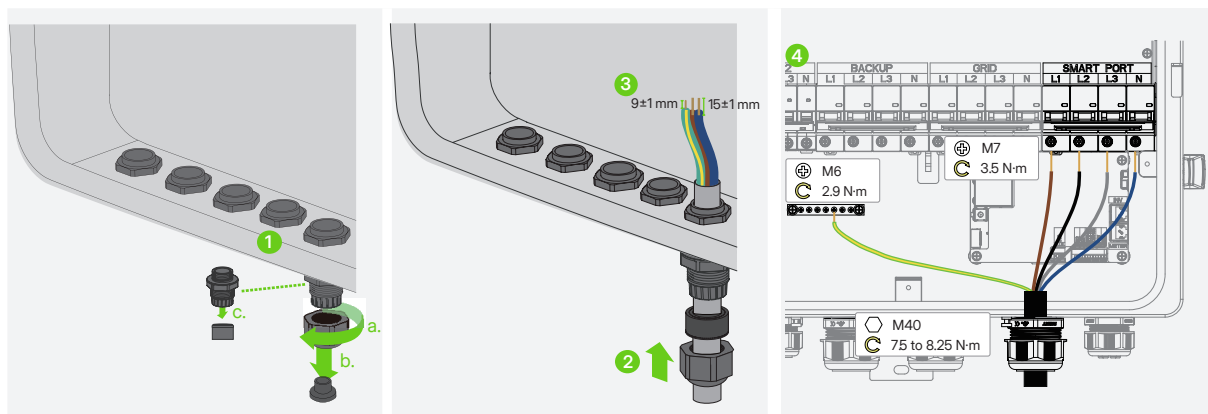

#### NOTE

The cable specifications should meet the following requirements.

| Type                                         | Core Conductor Cross-Section | Outer Diameter |
|----------------------------------------------|------------------------------|----------------|
| Outdoor use, five-core copper flexible cable | 16 to 25 mm <sup>2</sup>     | 24 to 32 mm    |

### Online Setting

After completing the electrical connection, configure the parameters on the S-Miles Cloud platform. For detailed instructions, refer to [10.3.5 Set Dry Contact Function](#) or [S-Miles Cloud User Manual \(App\)](#).

## Appendix 4: Application of EV Charger

### Overview

The EV charger is used to charge electric vehicles. It must be installed in a fixed location and connected to the AC power supply. The EV charger communicates with the HiOne inverter or the HiBox Gateway to enable intelligent charging control.

### Validity

This function is valid for:

- VAT-11-G2
- VAT-22-G2

If there is no Gateway in your system, follow the instructions below. For systems with Gateways, see [page 87](#).

### For Systems Without Gateways

#### System Diagram

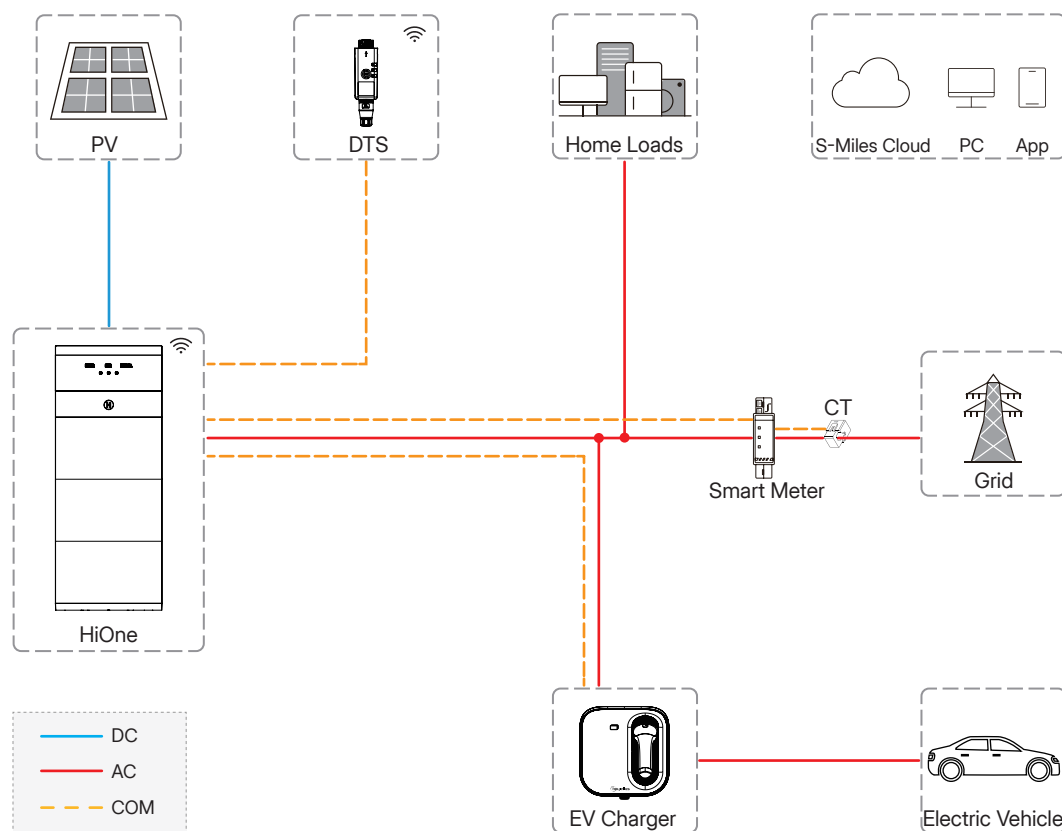


Figure 17-1 EV Charger System Without Gateway



### How to Achieve EV Charger Communication Connection

Connect the EV charger's RS485A and RS485B terminals to the 485\_1A and 485\_1B terminals on the HiOne series inverter.

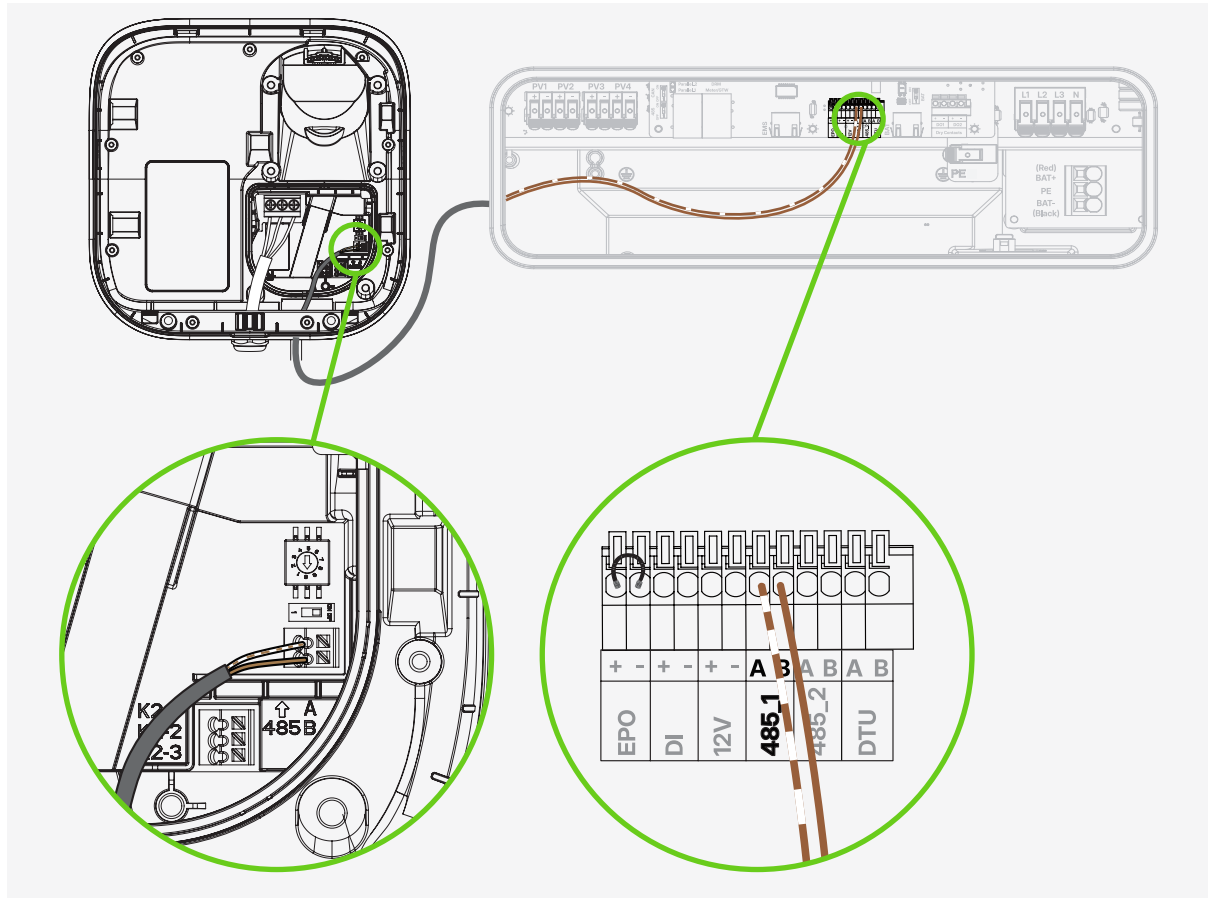


Figure 17-2 Communication Connection

### Online Setting

After completing the electrical connection, configure the parameters on the S-Miles Cloud platform. For detailed instructions, refer to [10 S-Miles Cloud](#), [EV Charger User Manual](#), or [S-Miles Cloud User Manual \(App\)](#).

## For Systems With Gateways

### System Diagram

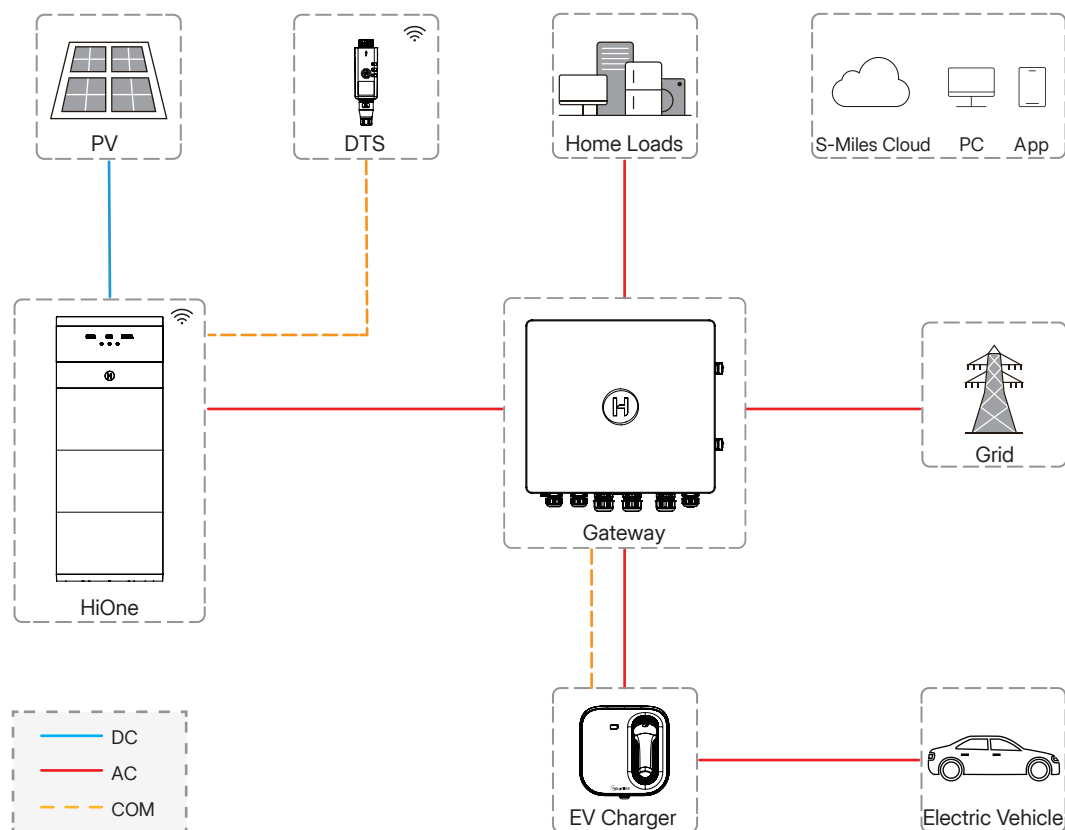


Figure 17-3 EV Charger System With Gateway

### How to Achieve EV Charger Communication Connection

For systems with Gateways, the EV charger communicates with the Gateway. The Gateway has two versions of communication terminals. The difference is the terminal name, as highlighted below.

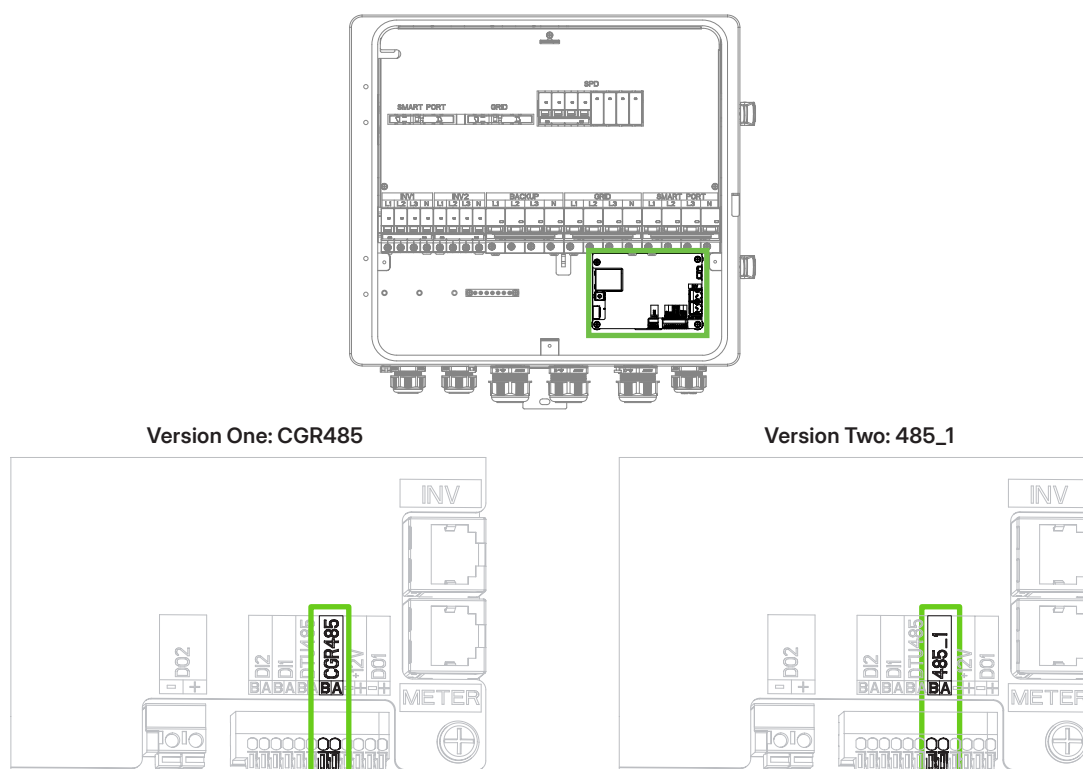


Figure 17-4 Two Versions of Gateway Communication Terminals

For version one, connect the EV charger's RS485A and RS485B terminals to the CGR485A and CGR485B terminals on the Gateway.

For version two, connect the EV charger's RS485A and RS485B terminals to the 485\_1A and 485\_1B terminals.

The illustration below takes version one as an example.

**NOTE**

If there is a Gateway in your system, the EV charger's communication terminals must be connected to the Gateway, not the HiOne inverter.

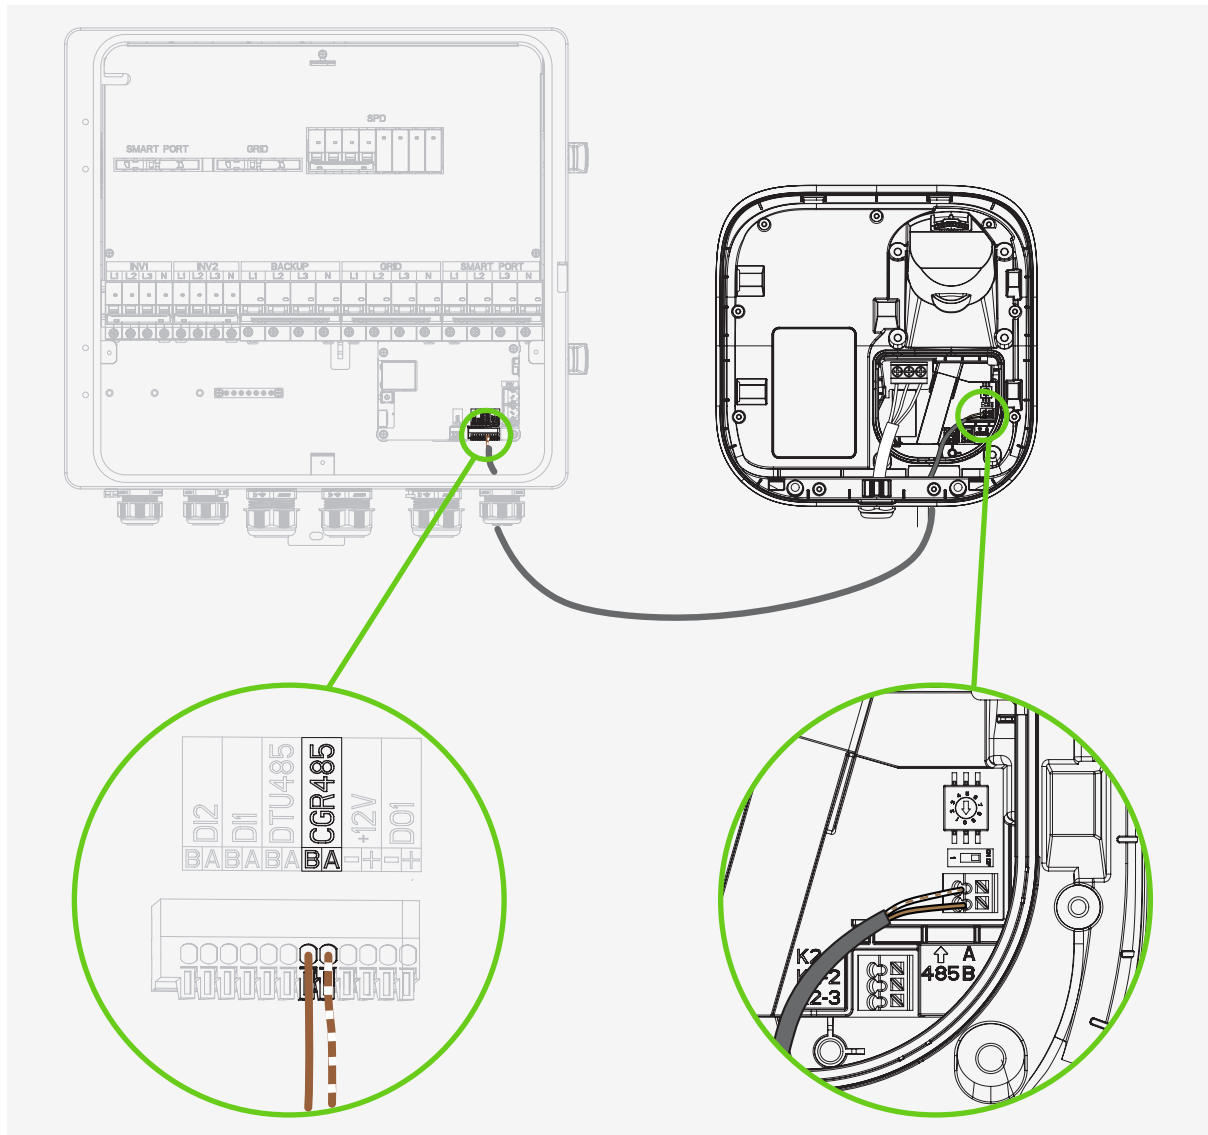


Figure 17-5 Communication Connection

### Online Setting

After completing the electrical connection, configure the parameters on the S-Miles Cloud platform. For detailed instructions, refer to [10 S-Miles Cloud](#), [EV Charger User Manual](#), or [S-Miles Cloud User Manual \(App\)](#).

## Appendix 5: Application of Heat Pump

### Overview

In many European households, heat pump systems (heat pumps or electric modulating heaters) are commonly used. By connecting the heat pump control ports to the inverter, you can:

- Control the heat pump's startup.
- Manage its power usage.
- Optimize PV energy use through intelligent control. Excess PV power can be converted into thermal energy for storage.

### System Diagrams

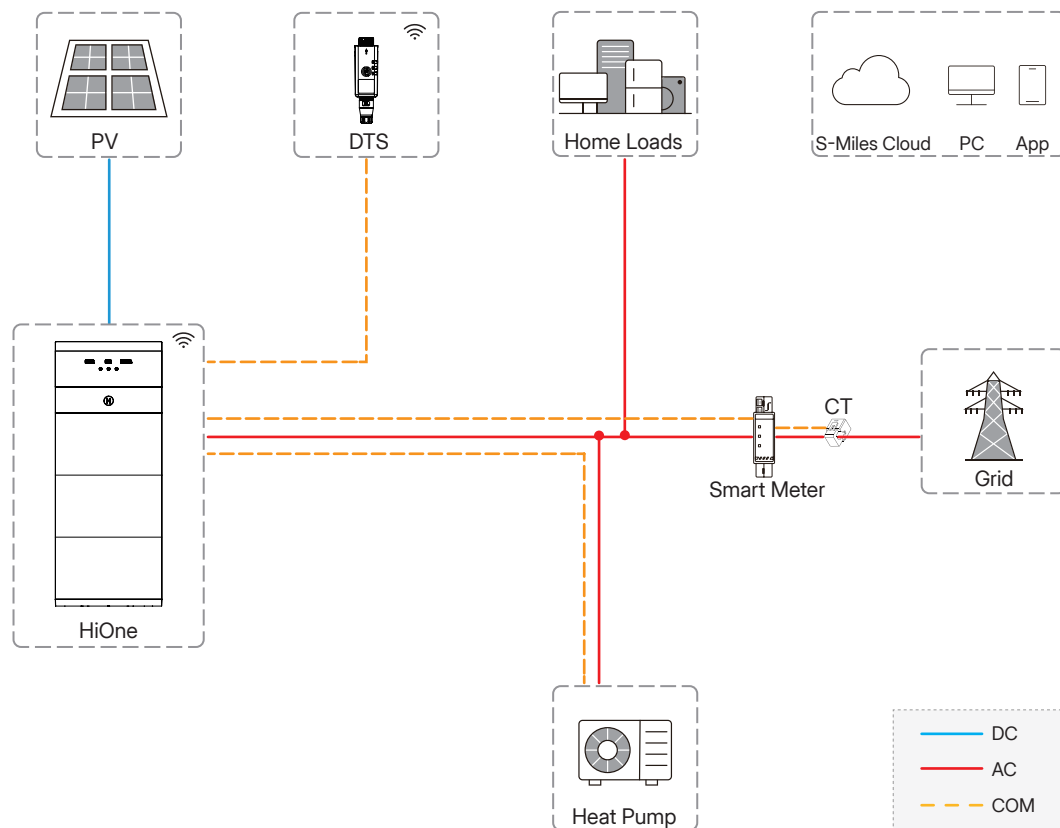


Figure 18-1 Heat Pump System (Without Gateway)

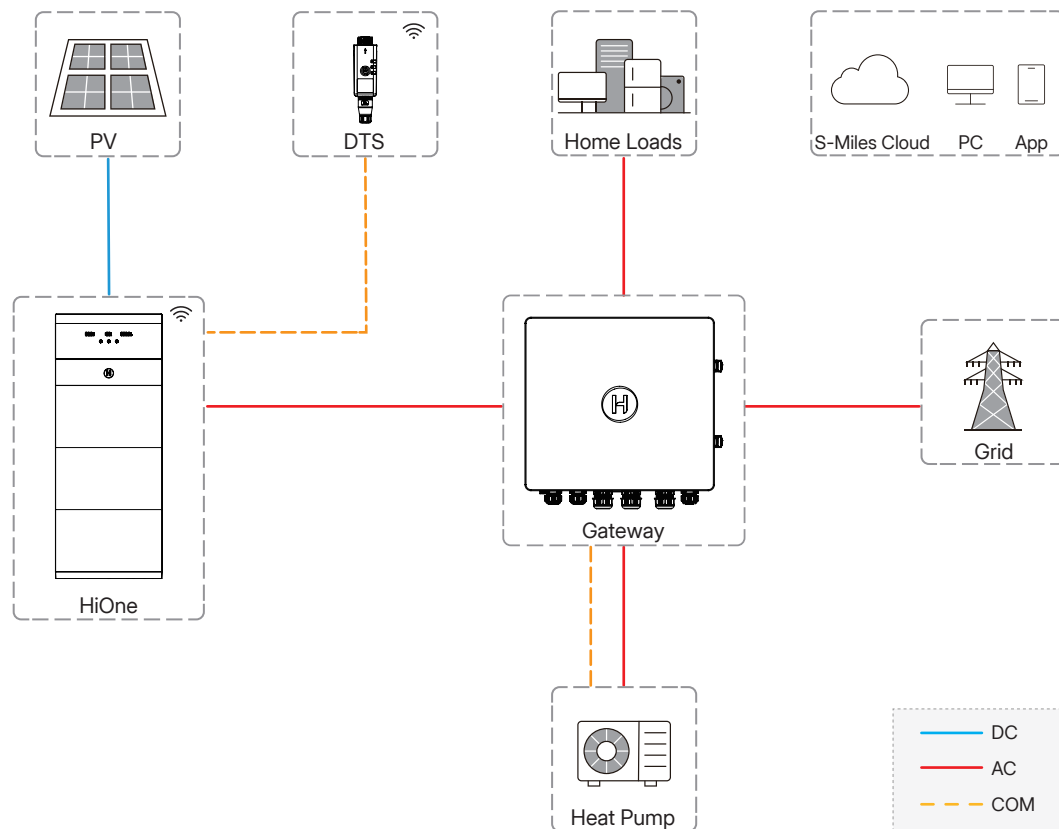


Figure 18-2 Heat Pump System (With Gateway)

The HiOne inverter currently supports SG Ready heat pumps and selected compatible heat pump brands. If your heat pump is SG Ready, follow the instructions below. For heat pumps of selected compatible brands, see [page 92](#).

## For SG Ready Heat Pumps

## How to Achieve Electrical Connection

- **For systems without Gateways**, connect the heat pump to the DO1 terminals of the HiOne inverter.

If an external relay (12 V, 100 mA) is required, short DO1+ to 12 V+. Then connect the communication cable to DO1- and 12 V-.

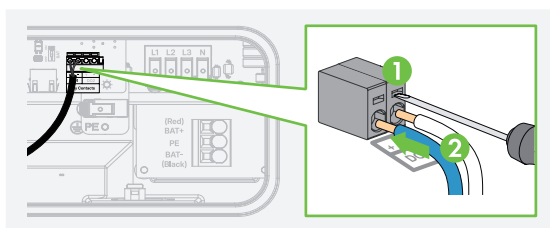


Figure 18-3 Dry Contact Control

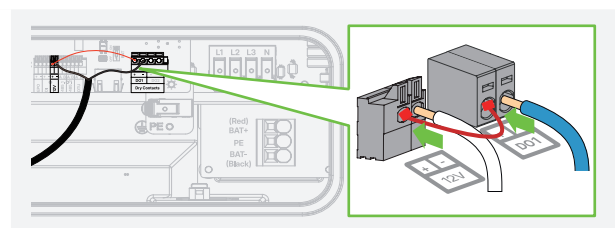


Figure 18-4 12 V @100 mA External Relay Control

- **For systems with Gateways,** connect the heat pump to the DO1 terminals of the Gateway.  
If an external relay (12 V, 100 mA) is required, short DO1- to 12 V-. Then connect the communication cable to DO1+ and 12 V+.

**NOTE**

If there is a Gateway in your system, the heat pump's communication terminals must be connected to the Gateway, not the HiOne inverter.

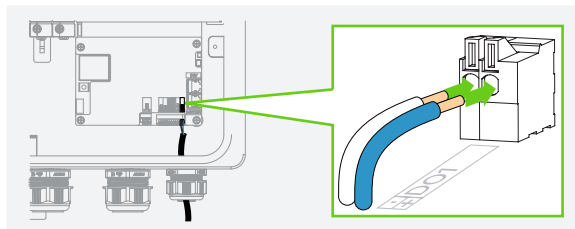


Figure 18-5 Dry Contact Control

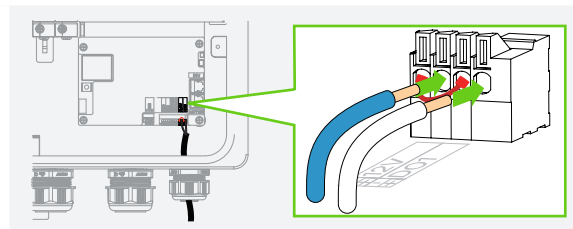


Figure 18-6 12 V @100 mA External Relay Control

### Online Setting

After completing the electrical connection, set the control mode on the S-Miles Cloud platform.


**Step 1** Open S-Miles Installer App.

**Step 2** Find the plant and tap the name to open the plant homepage.

**Step 3** Tap  in the lower right corner.

**Step 4** Tap  **Heat Pump Control**.

**Step 5** Set the control mode and tap **Save**.

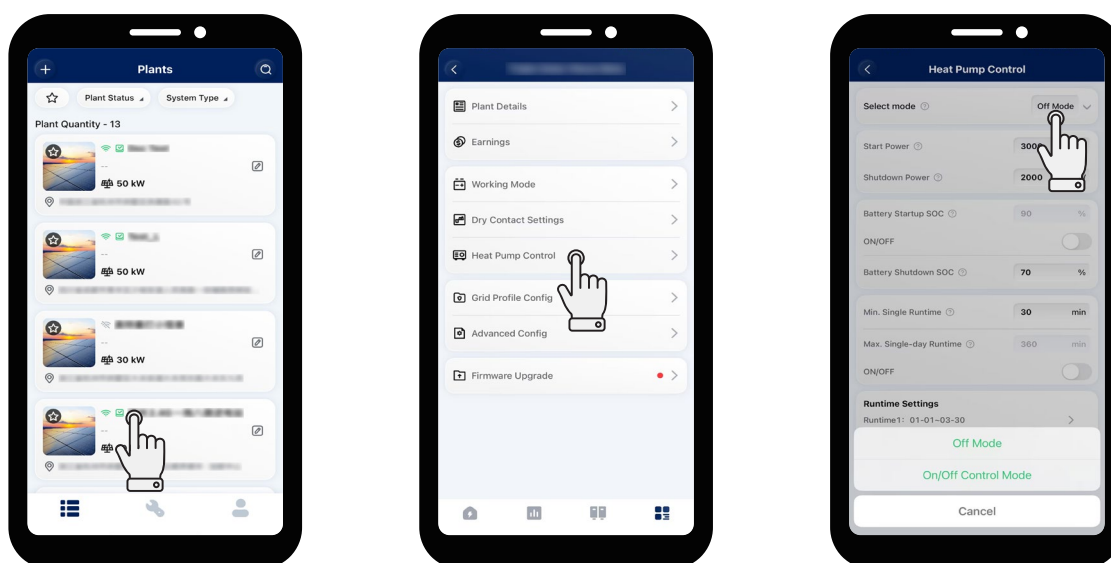

Two control modes are available:

| Mode                | Description                                                           |
|---------------------|-----------------------------------------------------------------------|
| Off Mode            | The heat pump is completely shut down. No control signals are output. |
| On/Off Control Mode | The heat pump is controlled only by on/off signals.                   |

| Parameter                       | Description                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------|
| Start Power                     | The heat pump will start when the export power reaches this value.                             |
| Shutdown Power                  | The heat pump will shut down when the grid import power reaches this value.                    |
| Battery Starting SOC (Optional) | OFF by default. If it is ON, the heat pump will start when the battery SOC exceeds this value. |

| Parameter                          | Description                                                                                                      |
|------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Battery Shutdown SOC               | The heat pump will shut down when the battery SOC falls below this value.                                        |
| Min. Single Runtime                | Highest priority. It refers to the minimum duration of a single operating cycle.                                 |
| Max. Single-day Runtime (Optional) | OFF by default. If it is ON, the heat pump will shut down when the total runtime for the day reaches this value. |
| Runtime Settings                   | Up to four operating periods can be set.                                                                         |

**NOTE**

- Shutdown conditions have higher priority than start conditions. Even if the start conditions are met, the system checks the shutdown conditions. If any shutdown condition is met, the heat pump will not start.
- In off-grid mode, Battery Starting SOC must be set.
- If no battery is connected, only Start Power and Shutdown Power need to be set.
- The interval between disabling and re-enabling the heat pump must be at least 10 minutes.

### For Heat Pumps of Selected Compatible Brands

#### How to Achieve Connection

- For systems without Gateways, connect the heat pump to the 485\_1 terminals of the HiOne inverter.

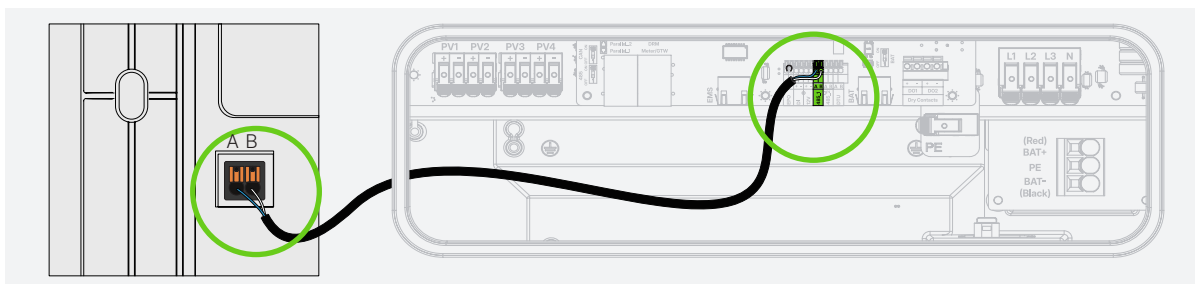


Figure 18-7 Connecting Heat Pump to HiOne Inverter

- For systems with Gateways, connect the heat pump to the HiBox Gateway. The Gateway has two versions of communication terminals. The difference is the terminal name, as highlighted below.

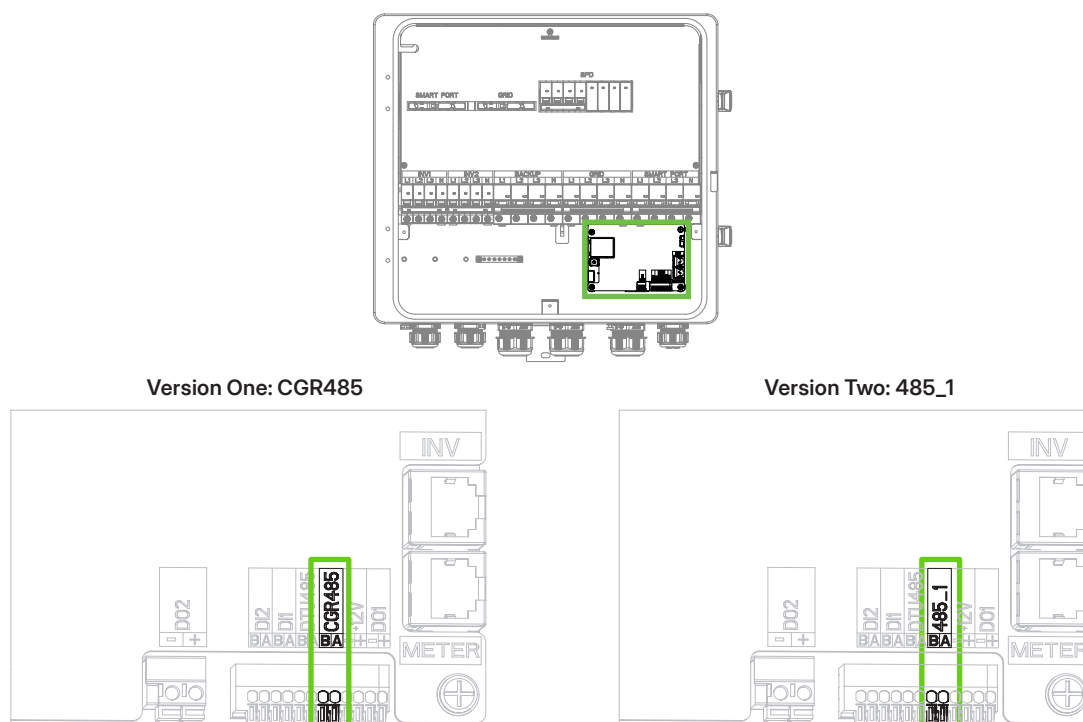


Figure 18-8 Two Versions of Gateway Communication Terminals

For version one, connect the heat pump to the CGR485 terminals on the Gateway.

For version two, connect the heat pump to the 485\_1 terminals.

The illustration below takes version one as an example.

#### NOTE

If there is a Gateway in your system, the heat pump's communication terminals must be connected to the Gateway, not the HiOne inverter.

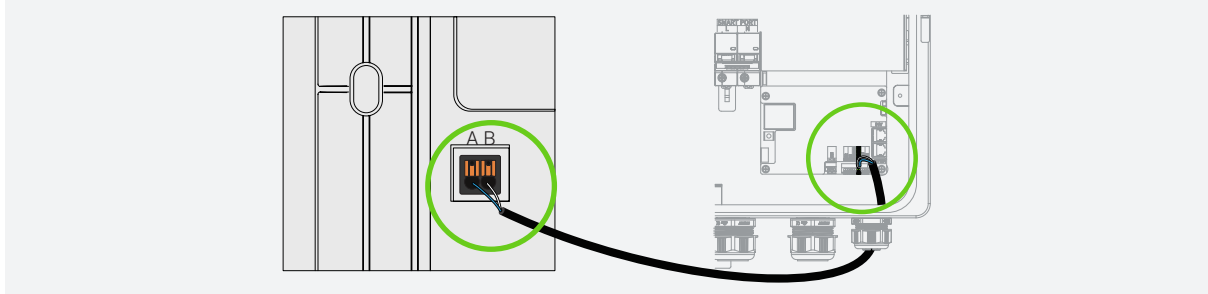


Figure 18-9 Connecting Heat Pump to HiBox Gateway

### Online Setting

After completing the electrical connection, add the heat pump to the system, configure the parameters, and view historical data on the S-Miles Cloud platform.


**Step 1** Open S-Miles Installer App.

**Step 2** Find the plant and tap the name to open the plant homepage.

**Step 3** Tap  in the lower right corner.


**Step 4** Tap  **Add System Device** > **Heat Pump**.

**Step 5** Select the heat pump brand and tap **Confirm**. You will access the heat pump homepage.

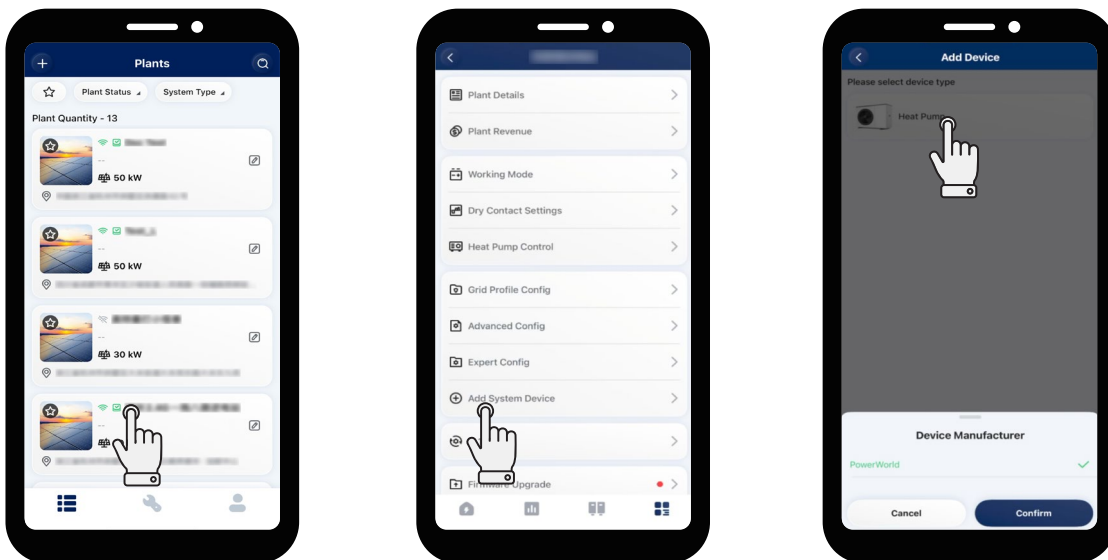



**Step 6** Tap  **Heat Pump** to set the control mode. Then, tap **Save**.

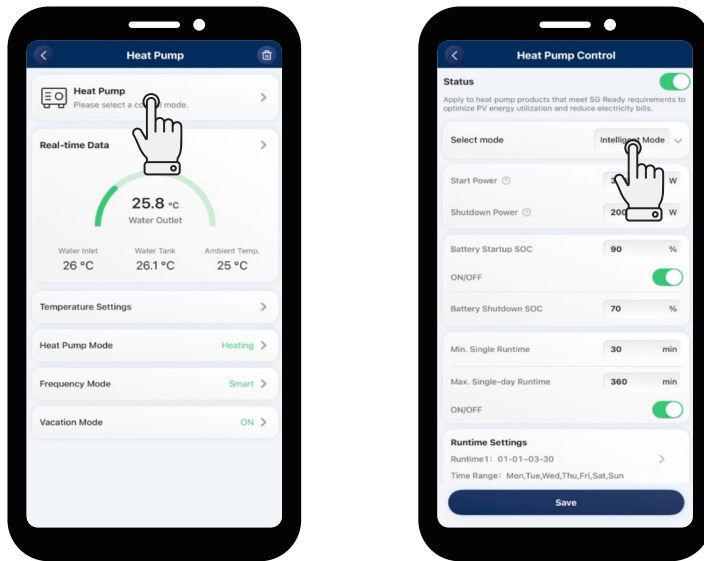

Three control modes are available:


| Mode             | Description                                                                                   |
|------------------|-----------------------------------------------------------------------------------------------|
| Manual Mode      | The heat pump is turned on or off manually.                                                   |
| Scheduled Mode   | The heat pump is operating only during preset runtimes.                                       |
| Intelligent Mode | The heat pump is controlled based on multiple parameters.<br>For details, see the next table. |

| Parameter                          | Description                                                                                                      |
|------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Start Power                        | The heat pump will start when the export power reaches this value.                                               |
| Shutdown Power                     | The heat pump will shut down when the grid import power reaches this value.                                      |
| Battery Starting SOC (Optional)    | OFF by default. If it is ON, the heat pump will start when the battery SOC exceeds this value.                   |
| Battery Shutdown SOC               | The heat pump will shut down when the battery SOC falls below this value.                                        |
| Min. Single Runtime                | It has the highest priority. It refers to the minimum duration of a single operating cycle.                      |
| Max. Single-day Runtime (Optional) | OFF by default. If it is ON, the heat pump will shut down when the total runtime for the day reaches this value. |
| Runtime Settings                   | Up to four operating periods can be set.                                                                         |

**NOTE**

- Shutdown conditions have higher priority than start conditions. Even if the start conditions are met, the system checks the shutdown conditions. If any shutdown condition is met, the heat pump will not start.
- In off-grid mode, Battery Starting SOC must be set.
- If no battery is connected, only Start Power and Shutdown Power need to be set.
- The interval between disabling and re-enabling the heat pump must be at least 10 minutes.


**Step 7** Tap **Temperature Settings** to adjust the temperature parameters. Then, tap **Confirm**.

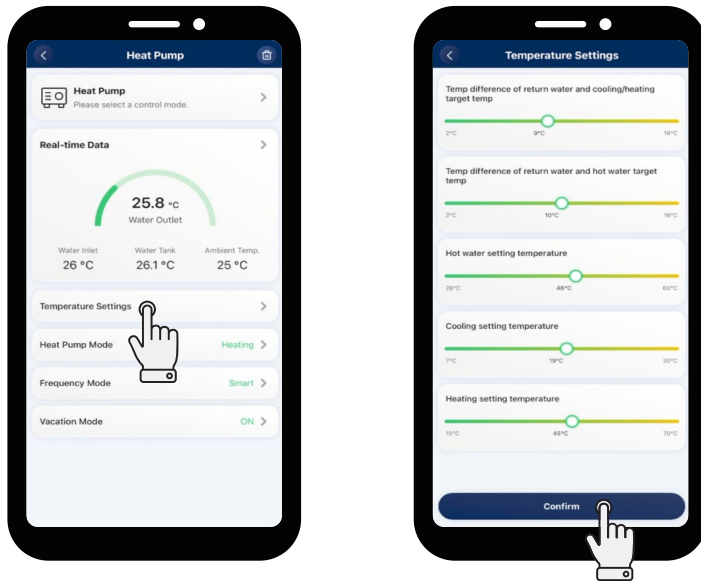


**Step 8** Tap **Heat Pump Mode** to set the operating mode. Then, tap **Confirm**.

**NOTE**


**DHW:** Domestic hot water mode. The heat pump is heating water for household use, such as showers.

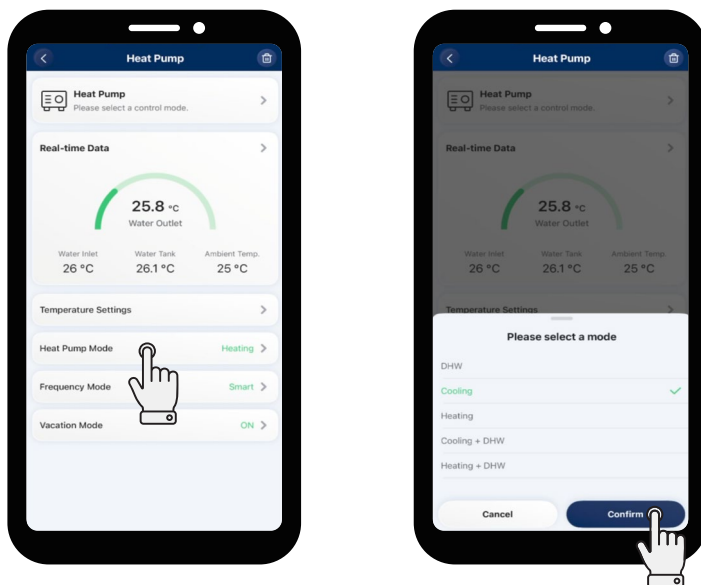

**Step 9** Tap **Frequency Mode** to set the operating feature. Then, tap **Confirm**.

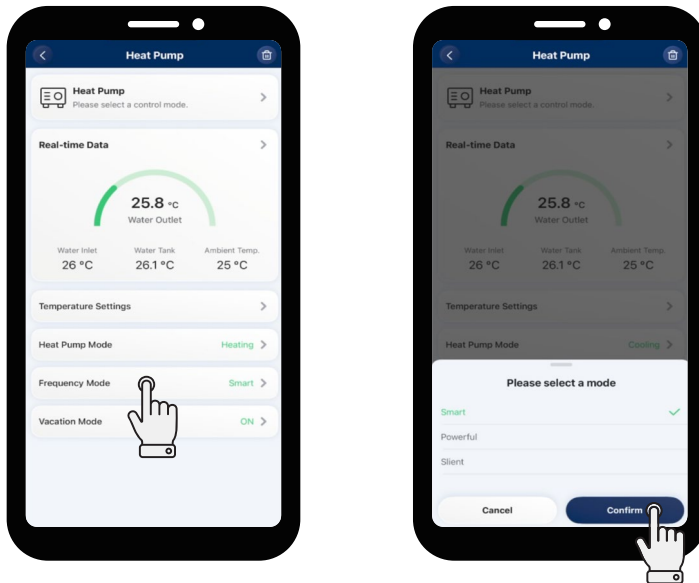


**Step 10** (Optional) Tap **Vacation Mode** and enable this function. The heat pump will operate in heating mode only. Set the temperature and tap **Confirm**.

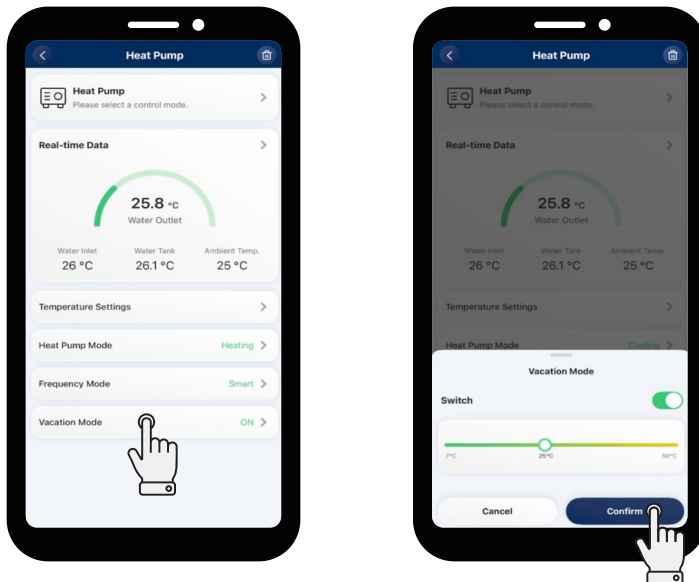

**NOTE**

- The heat pump performs heating function when:  
Inlet water temperature  $\leq$  Vacation Mode temperature – Temp difference of return water and cooling/heating target temp (the first parameter in **Temperature Settings**).
- The heat pump stops heating when:  
Inlet water temperature  $\geq$  Vacation Mode temperature + 2 °C.

**Step 11** (Optional) Tap **Real-time Data** to view heat pump consumption by day, month, or year.

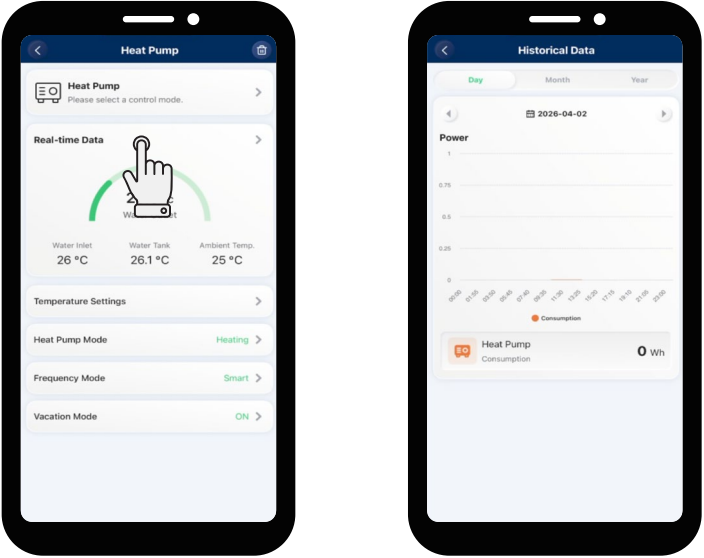

## Appendix 6: Application of Generator

### Overview

In regions where utility power is unreliable, a generator can serve as a backup power source. When connected to the HiOne inverter, the generator replicates grid functionality to keep your loads running.

#### NOTICE

- Connect the generator to the GEN port only.
- The generator's rated power must not exceed the inverter's rated power.

### Working Modes

The generator supports two main modes: Exercise Mode and Running Mode.

| Mode          | Description                                                                                                                                                                                                  |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Exercise Mode | Exercise Mode runs the generator on a scheduled basis to maintain its health and ensure it starts reliably when needed. It can run alongside Running Mode and is typically used while the system is on-grid. |
| Running Mode  | Running Mode is the off-grid operation mode for active backup. It includes Manual and Auto sub-modes.                                                                                                        |

The running mode has two sub-modes:

- Manual Mode

In this mode, you start and stop the generator yourself. No communication wiring between the generator and HiBox Gateway is required. The inverter monitors the grid and generator status and switches GEN mode on or off accordingly.

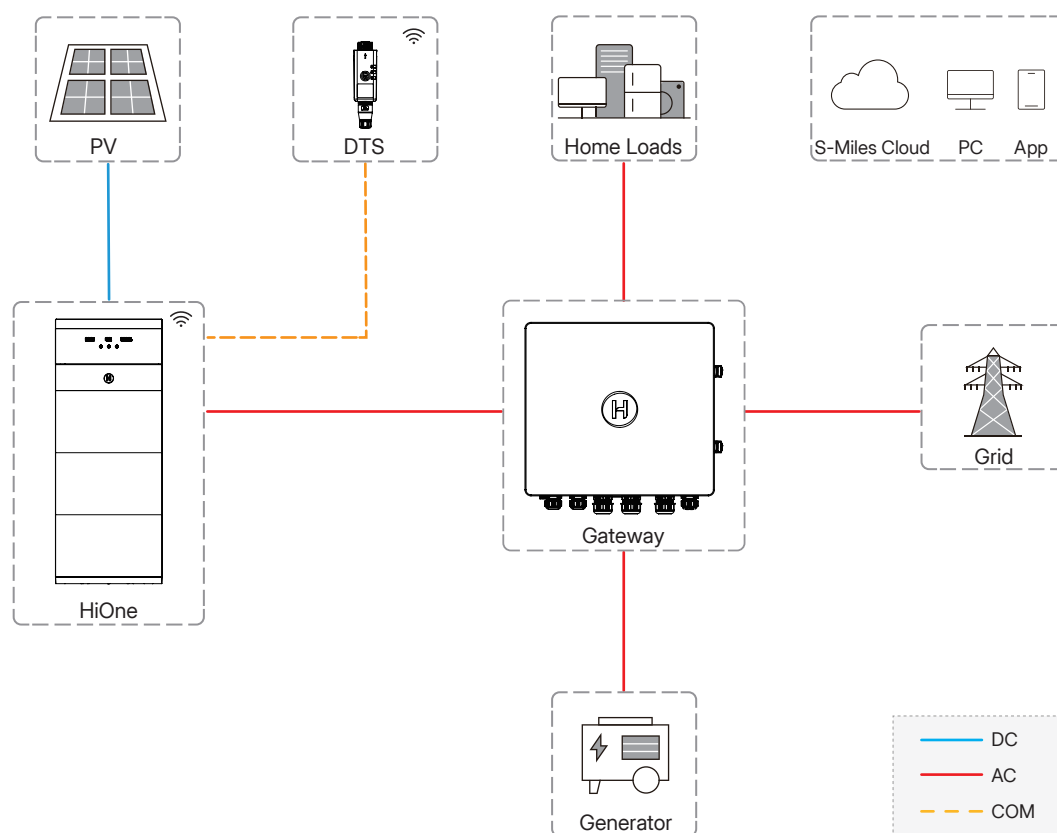


Figure 19-1 Generator System-Manual Mode

#### NOTE

The generator must be connected to the Gateway, not the HiOne inverter.

• Auto Mode

In this mode, the generator is controlled automatically based on battery state of charge (SOC) via a dry contact connection. This mode supports multiple configurable parameters to suit different scenarios.


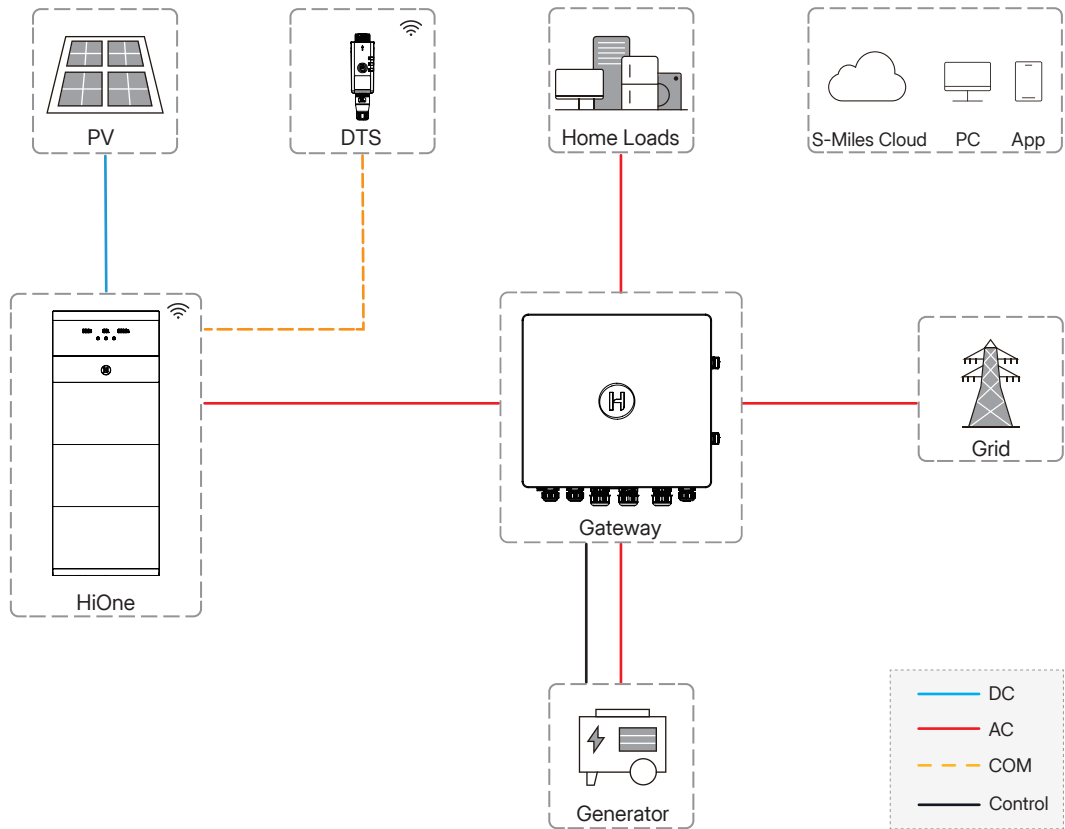


Figure 19-2 Generator System-Auto Mode

How to Achieve Automatic Generator Control (Auto Mode Only)

Connect the generator to the Gateway through the DO2 terminals.

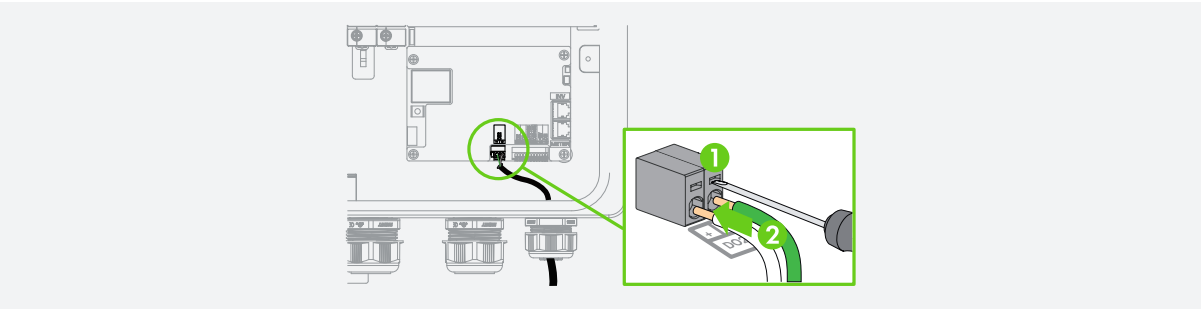

NOTE

The cable specifications should meet the following requirements.

| Type                                      | Core Conductor Cross-Section | Outer Diameter |
|-------------------------------------------|------------------------------|----------------|
| Outdoor use, two-conductor shielded cable | 0.2 to 1.5 mm <sup>2</sup>   | 4.5 to 6 mm    |

Online Setting

After completing the electrical connection, configure the parameters according to your actual needs and generator parameters on the S-Miles Cloud platform. For detailed instructions, refer to [10 S-Miles Cloud](#) or [S-Miles Cloud User Manual \(App\)](#).

The configurable parameters are described below.

**A. Advanced Settings**

| System Setting          |                                                                                                |
|-------------------------|------------------------------------------------------------------------------------------------|
| Parameter               | Description                                                                                    |
| GEN Port Mode           | Select "Generator" to ensure the normal operation of the generator.                            |
| Generator Setting       |                                                                                                |
| Parameter               | Range                                                                                          |
| GEN Location            | None/GenSide.<br>Select "GenSide" to ensure the normal operation of the generator.             |
| GEN Signal Setting      | Manual or DI/DO.<br>Select "Manual" if no dry contact; select "DI/DO" if dry contact is wired. |
| Min. Run Time           | 5-60 min                                                                                       |
| Max. Run Time           | 6-10 hours                                                                                     |
| Protection Interval     | 5-60 min                                                                                       |
| Synchronize Time        | 1-20 min                                                                                       |
| Shutdown Delay          | 1-20 min                                                                                       |
| GEN Rated Power         | 0-20000 W                                                                                      |
| High Voltage Limit      | 0-280 V                                                                                        |
| Low Voltage Limit       | 0-180 V                                                                                        |
| High Frequency Limit    | 0-70 Hz                                                                                        |
| Low Frequency Limit     | 0-59 Hz                                                                                        |
| Max. GEN Charging Power | 0-20000 W                                                                                      |

**B. System Settings > Dry Contact Settings > Generator Control**

| Exercise Mode       |                                                                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parameter           | Description                                                                                                                                                    |
| Frequency           | It allows the generator to start regularly at this frequency.                                                                                                  |
| Start Time          | It allows the generator to start regularly at this time.                                                                                                       |
| Duration            | The generator will stop running after this duration.                                                                                                           |
| Running Mode        |                                                                                                                                                                |
| GEN Start SOC       | Battery level (%) at or below which the generator starts in off-grid mode.                                                                                     |
| GEN Shutdown SOC    | Battery level (%) at or above which the generator stops in generator mode.                                                                                     |
| Quiet Time          | Period during which the generator is disabled. Please note that enabling Quiet Time may affect power availability during those hours.                          |
| Battery Charge Time |                                                                                                                                                                |
| Battery Charge Time | The generator charges the battery during a preset time window. Please set this window during periods of low PV output to avoid displacing usable solar energy. |

## Appendix 7: Application of Parallel Function

### Overview

The Parallel Function allows multiple HiOne inverters to work together to increase system capacity or provide backup power. It supports the following configurations:

|                       | On-grid Mode | Off-grid Mode |
|-----------------------|--------------|---------------|
| Max. Paralleled Units | 10           | 2             |
| HiBox Gateway         | ×            | ✓             |

Table 20-1 Parallel Function — Supported Configurations

### Master/Slave Assignment

The inverter connected to the meter/DTS is automatically assigned as the master. The meter and DTS must connect to the master inverter. All inverters in the system operate according to the master's settings.

It is recommended to use the same model and firmware version across all parallel-connected inverters to ensure optimal efficiency.

If the paralleled inverters are on grid, follow the instructions below. For off-grid configuration, see [page 103](#).

### For On-grid Mode

#### How to Achieve Parallel Connection

Parallel operation is performed through the Parallel\_1 and Parallel\_2 terminals.

**Step 1:** Connect the Parallel\_2 terminal of the next slave inverter to the Parallel\_1 terminal of the previous inverter.

**Step 2:** Repeat this process until all inverters are connected in parallel.

#### NOTE

Ensure that the total length of parallel communication cables does not exceed 20 m.

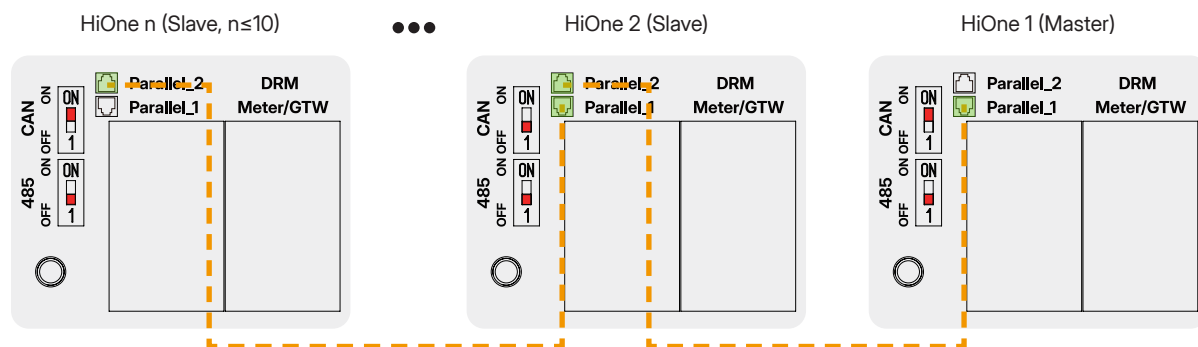


Figure 20-1 Parallel Communication Connection (On-grid Mode)

**Step 3:** Set the CAN resistor of the first and last inverters to ON.

**Step 4:** Set the CAN resistors of all other inverters to OFF.


**Step 5: (Optional)** Set the 485 resistors of all other inverters to OFF.

### Online Setting

After completing the electrical connection, configure the parameters on the S-Miles Cloud platform. For detailed instructions, refer to [10 S-Miles Cloud](#) or [S-Miles Cloud User Manual \(App\)](#).




## System Diagram

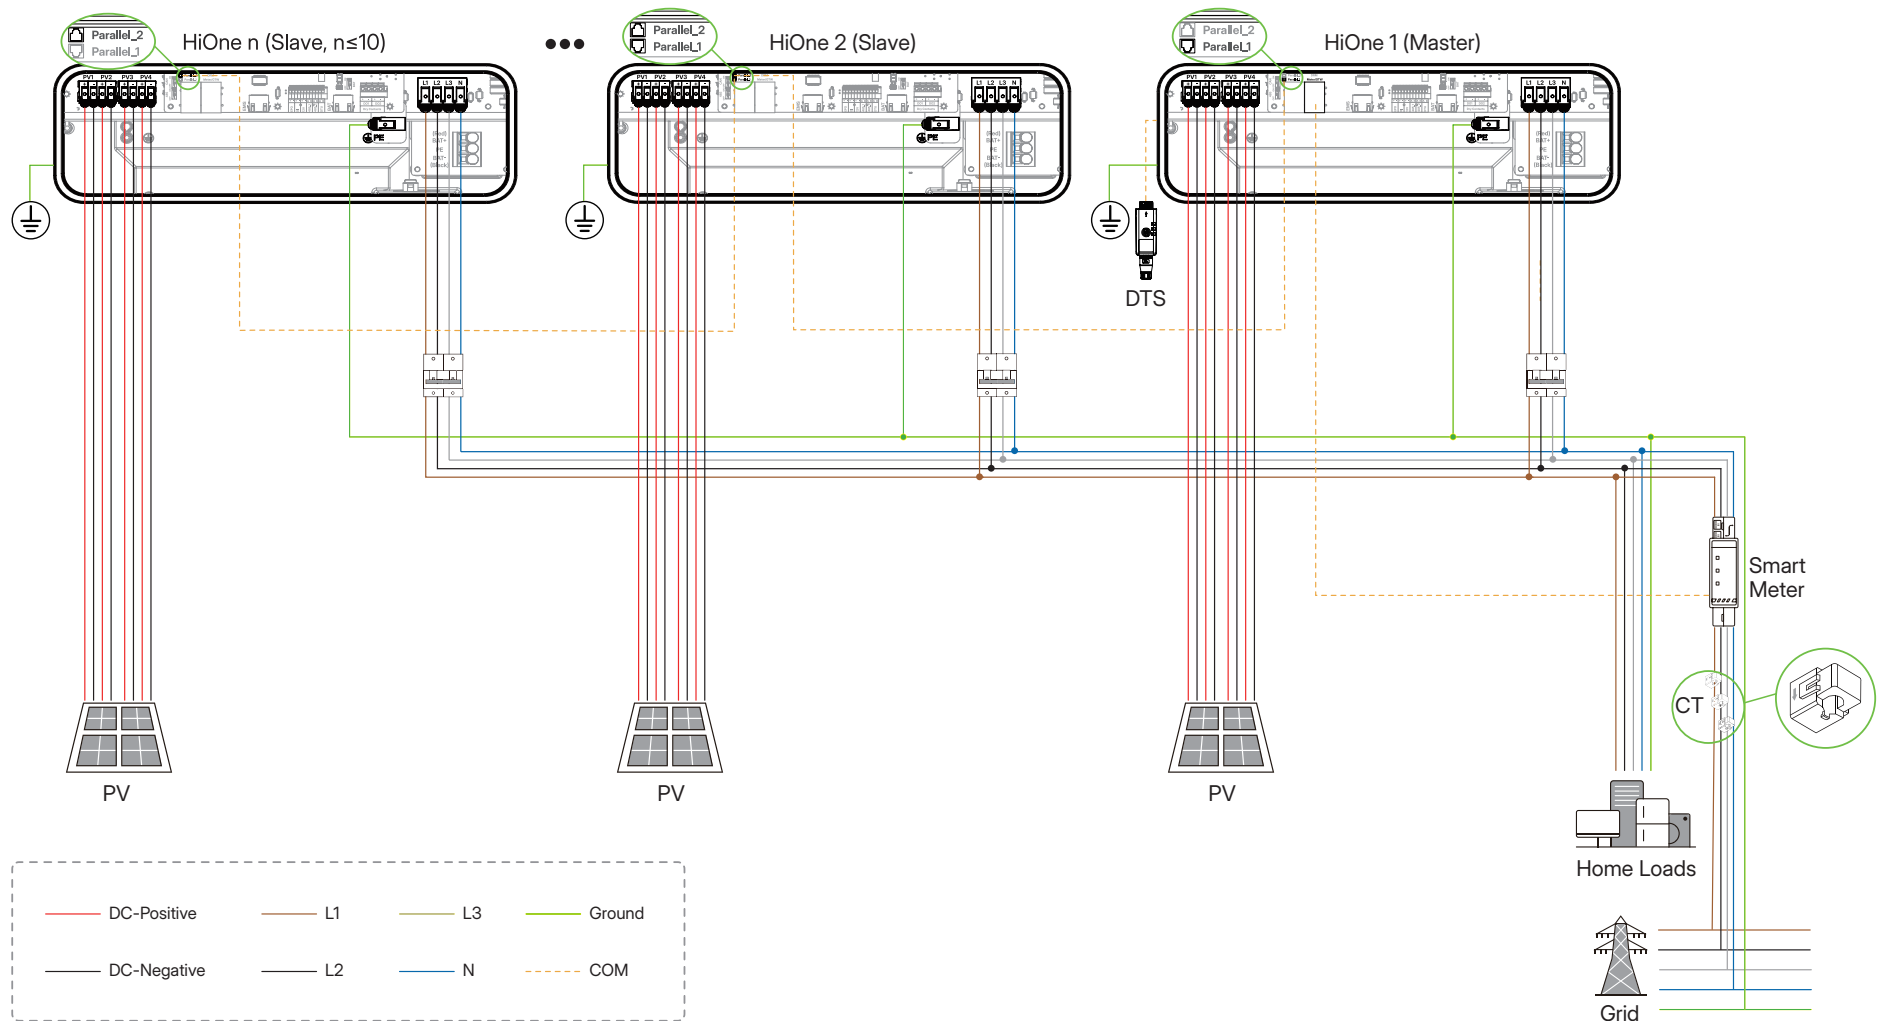

## For Off-grid Mode

### How to Achieve Parallel Connection

**Step 1:** Connect the AC terminals of the two inverters respectively to the INV1 and INV2 terminals of the Gateway.

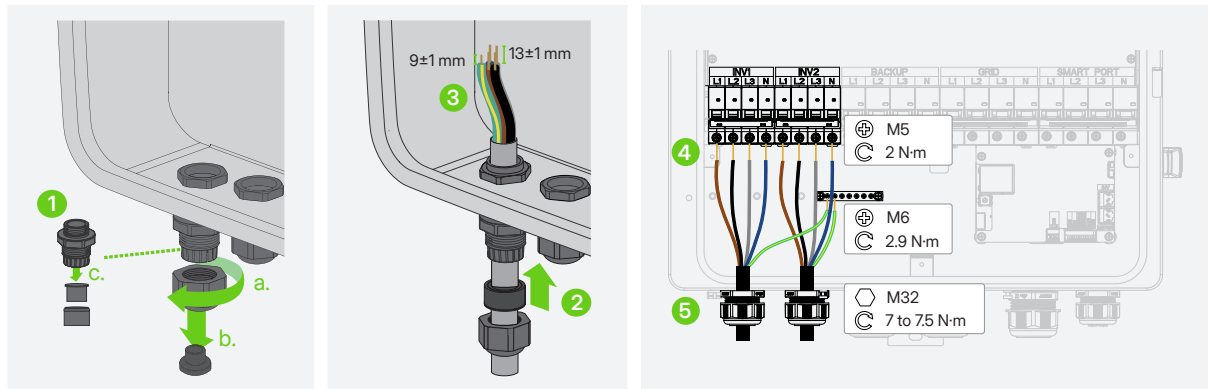

**Step 2:** Connect the Parallel\_2 terminal of the master inverter to the INV terminal of the Gateway.

**Step 3:** Connect the Parallel\_2 terminal of the slave inverter to the Parallel\_1 terminal of the master inverter.

**Step 4:** Set the CAN resistor of the two inverters to ON.


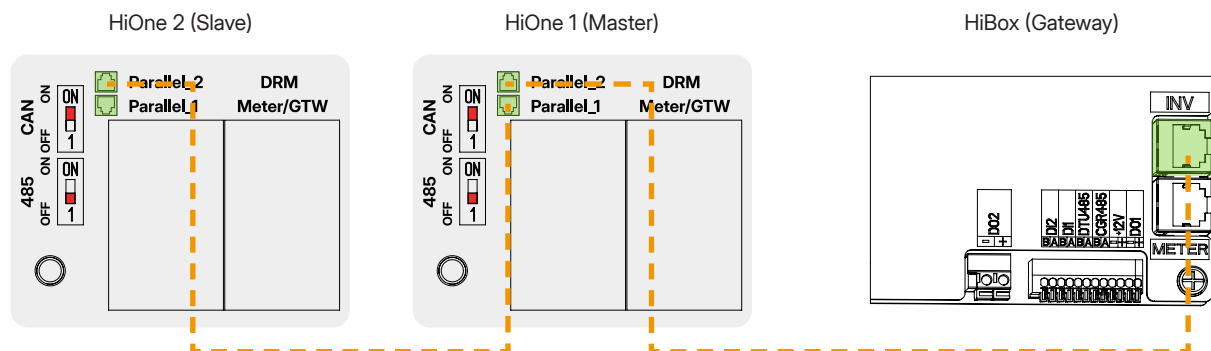


Figure 20-2 Parallel Communication Connection (Off-grid Mode)

### Online Setting

After completing the electrical connection, configure the parameters on the S-Miles Cloud platform. For detailed instructions, refer to [10 S-Miles Cloud](#) or [S-Miles Cloud User Manual \(App\)](#).

System Diagram

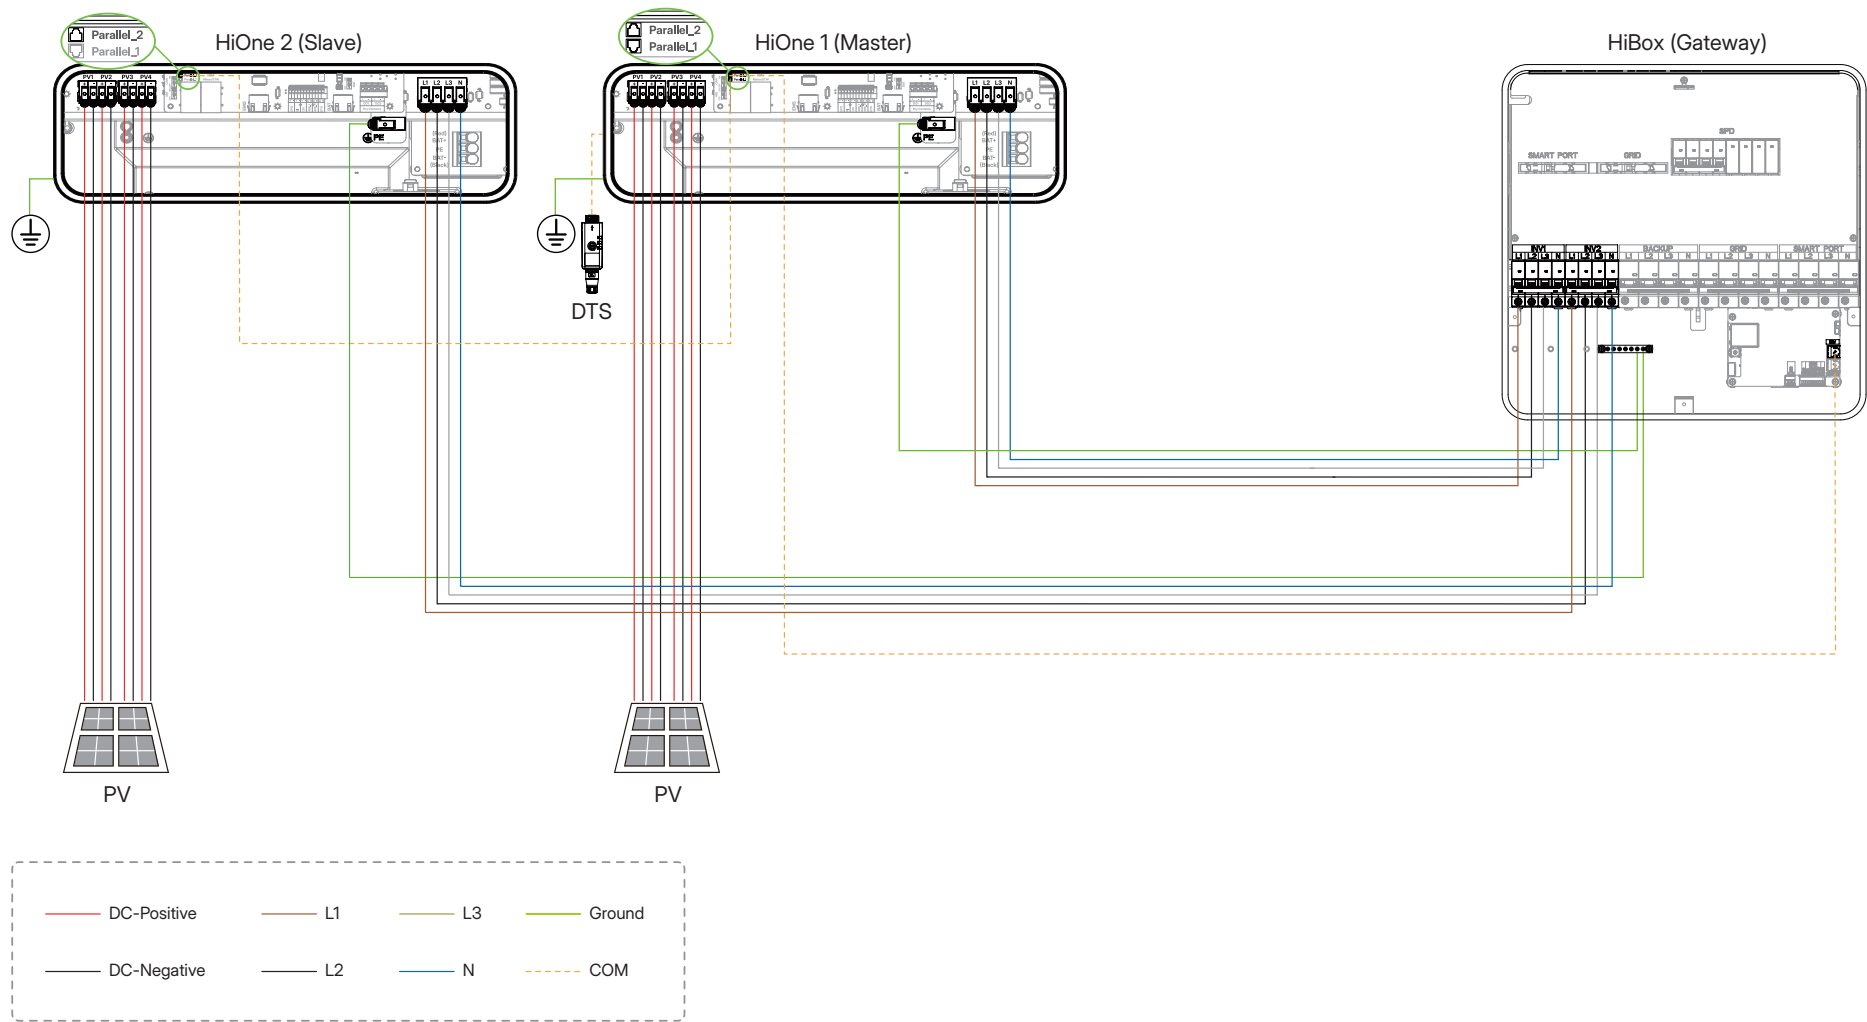



## **Hoy miles Power Electronics Inc.**

 No. 408, Xiju Road, Kangqiao Subdistrict, Gongshu District,  
Hangzhou, Zhejiang Province, China

 +86 571 2805 6101

 [hoy miles.com](http://hoy miles.com)

 [service@hoy miles.com](mailto:service@hoy miles.com)  
[support@hoy miles.com](mailto:support@hoy miles.com)

